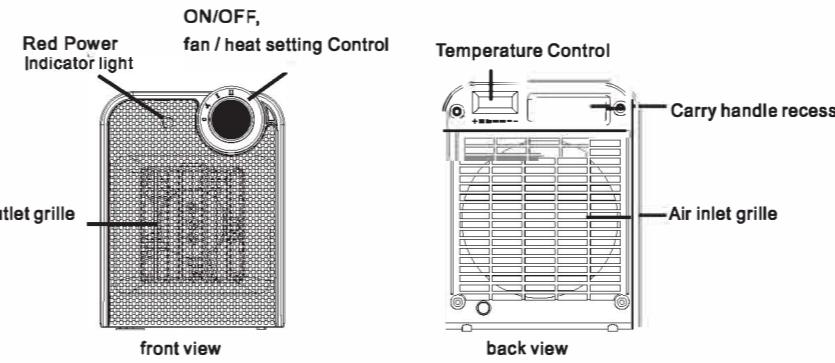


<p>Responsible Disposal At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your authorities for advice on recycling facilities in your area. Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.</p>  <p>LIVING & CO</p> <p>Warranty We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 3 year warranty. Now you too can relax knowing that you are covered.</p> <p>Customer Helpline NZ: 0800 422 274 This Product is covered by 3 year warranty when accompanied by proof of purchase.</p> <p>IM Version 1.1 - October 2018</p> <p>LIVING & CO AFTER SALES SUPPORT 0800 422 274</p>	<h1>LIVING & CO</h1> <h2>FAN HEATER</h2>  <p>Instruction Manual MODEL FH121S</p> <p>PLEASE READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE</p> <p>LIVING & CO AFTER SALES SUPPORT 0800 422 274</p>	<p>2</p> <h2>Contents</h2> <ul style="list-style-type: none"> 03 General Care and Safety Guide 06 Operating your Appliance 08 Care and Cleaning 09 Troubleshooting <p>LIVING & CO AFTER SALES SUPPORT 0800 422 274</p>																		
<p>General Care and Safety Guide 3</p> <p>When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:</p> <ol style="list-style-type: none"> 1. Read all instructions before using the appliance. 2. To avoid fire or shock hazard, plug the appliance directly into a 220-240V AC electrical outlet. 3. DO NOT use an external timer, separate remote control system, and extension cable or external adaptor with the appliance. 4. The appliance is hot when in use. To avoid burns, DO NOT touch any hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 1 metre from the front of the heater and keep them away from the sides and rear. 5. WARNING: In order to avoid overheating, DO NOT COVER the heater. 6. To prevent a possible fire, DO NOT block air intakes or exhaust vents in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked. DO NOT operate unit if the air intake vent is blocked. 7. DO NOT move the appliance when it is operating. Only move the appliance when it is cool. The outlet grille may remain hot to touch even after several minutes of operation. 8. DO NOT run supply cord under carpeting. DO NOT cover cord with throw rugs, runners, or the like. Position the cord away from traffic area and where it will not be tipped over. 9. Do not abuse or damage the power cord. Fully unwind the cord before use as a coiled cord may overheat. Do not allow the supply cord to touch hot surfaces. 10. Discontinue use if plug or outlet is hot. It is recommended that the socket outlet be replaced if plug or outlet is hot to touch. 11. Connect to a suitable mains power socket only, corresponding to the electrical ratings on the heater. Do not overload the household mains power circuit. 12. This appliance is not intended for use in bathrooms, laundry areas and similar indoor locations where it may come into contact with water. NEVER locate the appliance where it may fall into a bathtub or other water container. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool. <p>LIVING & CO AFTER SALES SUPPORT 0800 422 274</p>	<p>4</p> <ol style="list-style-type: none"> 13. Do not immerse any part of this appliance or supply cord in water. Do not use with wet hands or use in any damp conditions. 14. Always unplug the appliance when not in use. 15. When unplugging, be sure to pull by the plug and not the supply cord. 16. DO NOT insert or allow foreign objects to enter any ventilation or exhaust vent opening as this may cause an electric shock or fire, or damage the appliance. 17. DO NOT operate the appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner. 18. If the supply cord is damaged, it must be replaced by a qualified electrical person in order to avoid a hazard. 19. The appliance has hot and sparking parts inside. DO NOT use it in areas where gasoline, paint, or flammable liquids are used or stored. 20. Use the appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by the manufacturer cause hazards. 21. This appliance is designed for indoors ONLY. DO NOT use outdoors. 22. To disconnect the appliance, turn the rotary dial to the "OFF" (Position '0') BEFORE removing the plug from main power outlet. 23. It is strongly recommended that this appliance is plugged directly into an electrical wall socket. The use of power (multi) boards is not recommended as many power boards are not designed to supply power to high wattage appliances. If a power board is damaged or worn, this may result in overheating of the electrical parts including the supply plug. 24. A correctly specified undamaged extension cord may be used with this appliance provided it is used in a safe manner. 25. DO NOT attempt to service this appliance yourself. Service and repairs to the item must be done by a qualified electrical person for safety. 26. Keep this instruction with the appliance. If the appliance is to be used by a third party, this instruction must be supplied with the item. 27. The safety instructions do not by themselves eliminate any danger completely, proper accident prevention measures and common sense must always be used. <p>LIVING & CO AFTER SALES SUPPORT 0800 422 274</p>	<p>TROUBLESHOOTING 9</p> <p>If your heater fails to operate, please follow these procedures prior to contacting Customer Service:</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left; padding: 2px;">Problem</th> <th style="text-align: left; padding: 2px;">Probable Cause</th> <th style="text-align: left; padding: 2px;">Solution</th> </tr> </thead> <tbody> <tr> <td style="padding: 2px;">Heater will not power on</td> <td style="padding: 2px;">Heater is not plugged into a suitable AS/NZS socket outlet.</td> <td style="padding: 2px;">Ensure the heater is in the OFF position. Plug the supply plug firmly into the socket outlet, switch the outlet on and then turn the heater on.</td> </tr> <tr> <td style="padding: 2px;">Supply breaker/fuse has operated.</td> <td style="padding: 2px;">Please check your electrical box to confirm the circuit breaker has not operated. This may occur if the unit is sharing a socket with other high power consuming appliances. Ensure unit is in the OFF position. Try another independent socket outlet in the house and switch the heater on.</td> <td style="padding: 2px;"></td> </tr> <tr> <td style="padding: 2px;">Unit is not heating</td> <td style="padding: 2px;">Room temperature has reached the thermostat setting</td> <td style="padding: 2px;">To resume heating, adjust thermostat temperature to a higher setting. Refer to operating instructions, for more information.</td> </tr> <tr> <td style="padding: 2px;">During initial use the heater emits a burning smell.</td> <td style="padding: 2px;">A trace of oil / lubricant may have impinged on the heating element during the manufacturing process. This will quickly evaporate and should not occur again.</td> <td style="padding: 2px;">Ensure room in which heater is situated is well ventilated.</td> </tr> <tr> <td style="padding: 2px;"></td> <td style="padding: 2px;">Check & ensure there are no combustible materials in close proximity of the heater.</td> <td style="padding: 2px;">Remove the combustible materials preventing air intake into the heater.</td> </tr> </tbody> </table> <p>PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE HEATER YOURSELF, DOING SO COULD VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY.</p> <p>LIVING & CO AFTER SALES SUPPORT 0800 422 274</p>	Problem	Probable Cause	Solution	Heater will not power on	Heater is not plugged into a suitable AS/NZS socket outlet.	Ensure the heater is in the OFF position. Plug the supply plug firmly into the socket outlet, switch the outlet on and then turn the heater on.	Supply breaker/fuse has operated.	Please check your electrical box to confirm the circuit breaker has not operated. This may occur if the unit is sharing a socket with other high power consuming appliances. Ensure unit is in the OFF position. Try another independent socket outlet in the house and switch the heater on.		Unit is not heating	Room temperature has reached the thermostat setting	To resume heating, adjust thermostat temperature to a higher setting. Refer to operating instructions, for more information.	During initial use the heater emits a burning smell.	A trace of oil / lubricant may have impinged on the heating element during the manufacturing process. This will quickly evaporate and should not occur again.	Ensure room in which heater is situated is well ventilated.		Check & ensure there are no combustible materials in close proximity of the heater.	Remove the combustible materials preventing air intake into the heater.
Problem	Probable Cause	Solution																		
Heater will not power on	Heater is not plugged into a suitable AS/NZS socket outlet.	Ensure the heater is in the OFF position. Plug the supply plug firmly into the socket outlet, switch the outlet on and then turn the heater on.																		
Supply breaker/fuse has operated.	Please check your electrical box to confirm the circuit breaker has not operated. This may occur if the unit is sharing a socket with other high power consuming appliances. Ensure unit is in the OFF position. Try another independent socket outlet in the house and switch the heater on.																			
Unit is not heating	Room temperature has reached the thermostat setting	To resume heating, adjust thermostat temperature to a higher setting. Refer to operating instructions, for more information.																		
During initial use the heater emits a burning smell.	A trace of oil / lubricant may have impinged on the heating element during the manufacturing process. This will quickly evaporate and should not occur again.	Ensure room in which heater is situated is well ventilated.																		
	Check & ensure there are no combustible materials in close proximity of the heater.	Remove the combustible materials preventing air intake into the heater.																		
<p>8</p> <h2>Care and Cleaning</h2> <p>CLEANING AND MAINTENANCE</p> <p>Before cleaning</p> <p>-When not in use or before cleaning, always disconnect the appliance from the mains supply.</p> <p>Cleaning</p> <p>-Cleaning can only be done when the unit is cooled. Do not immerse the whole unit in water or other liquid. Do not use harsh solvents on this unit.</p> <p>-Wipe the exterior of the appliance with a damp cloth. Dry the unit completely with a dry towel.</p> <p>-Clean air intake vent regularly. The dust can be removed from the filter by a brush.</p> <p>Damage check</p> <p>-Always check that the appliance is not damaged, is in good working order and that all parts are secure. Check the power supply cord and plug regularly for cuts or damage. For safety purposes, DO NOT use the heater if damage is found.</p> <p>Store in a safe place</p> <p>-When not in use, store your appliance and the instructions manual together in a safe and dry place.</p> <p>NOTE: Always clean and store your appliance away with this instruction manual when not in use.</p> <p>TECHNICAL DATA</p> <p>Voltage: 220-240V~50Hz Power: 1500W</p> <p>LIVING & CO AFTER SALES SUPPORT 0800 422 274</p>	<p>5</p> <ol style="list-style-type: none"> 28. Use of parts or accessories that do not come with the unit may cause danger and injuries. 29. This appliance is not intended for use by persons (INCLUDING CHILDREN) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. 30. Children should be supervised to ensure that they do not play with the appliance. 31. The Heater must not be located immediately below a socket-outlet. 32. NO liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling. 33. The safety guard of this heater is intended to prevent direct access to heating elements and must be in place when the heater is in use. 34. The safety guard does not provide full protection to young children and for infirm persons. 35. WARNING: The heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided. 36. WARNING: Fire risk exist if the heater is covered or positioned close to curtains or other combustible materials. 37. CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility. If unsure consult an electrician. <p>IMPORTANT! This heater is equipped with a non-self resetting Overheat Protection System. If an overheat condition occur within the heater, the heater will switch OFF automatically for safety. To reset the heater, disconnect the power cord / plug from the mains electrical power outlet. Ensure that both the intake and the exhaust vents are clear of obstructions and allow the heater to cool for approximately 1 hour. Then connect to mains power and turn the power ON/OFF switch back to ON.</p> <p>LIVING & CO AFTER SALES SUPPORT 0800 422 274</p>	<p>6</p> <h2>Operating your Appliance</h2> <p>PRODUCT OVERVIEW</p>  <p>PACKAGE CONTENTS</p> <p>1 Main Unit 1 Instruction Manual 1 set of polyfoam</p> <p>NOTE: Confirm all parts are present before disposing of carton. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.</p> <p>NOTE: The heater may emit a small amount of smoke and odour when used for the first time. This is normal and caused by the lubricant on the heating element during the production process. It is non-toxic. If the smoke and odour are excessive, use the heater in a ventilated area. The smoke and odour should disappear after a few minutes of use.</p> <p>ASSEMBLY AND OPERATION</p> <ul style="list-style-type: none"> • Ensure the ON/OFF control switch is in the OFF (0) position before connecting to the mains power supply. • Make sure the plug and cord are not damaged in any way. • Insert the plug into a wall socket with correct power output, 220-240V AC 50Hz. <p>LIVING & CO AFTER SALES SUPPORT 0800 422 274</p>	<p>7</p> <ul style="list-style-type: none"> • Turn ON/OFF Control switch to either: <ul style="list-style-type: none"> - 'F' for Fan Only (no heating) - 'L' for Low Heat output - 'H' for High Heat output <p>NOTE: When the heater is switched ON, the red power indicator light will turn ON (make sure to turn the temperature control setting past the midpoint, selecting a lower setting will not turn the heater ON unless the ambient temperature is very low).</p> <ul style="list-style-type: none"> • The temperature control (adjustable thermostat) can be used to regulate the temperature. Turn the temperature control setting to maximum (+) to increase temperature and turn to minimum (-) to decrease temperature. The heater will turn ON and OFF to maintain the desired heat setting. <p>IMPORTANT SAFETY FEATURES</p> <p>Your heater is equipped with an Overheat Protection System. When the threshold temperature has been reached, your heater will turn off automatically. To reset your heater when the Overheat Protection System has been activated, perform the following steps:</p> <ul style="list-style-type: none"> • Turn the "ON/OFF" Control switch to the OFF (0) position. • Disconnect the power cord / supply plug from the mains electrical power outlet. • Ensure that both the intake and the exhaust vents are clear of obstructions. • Allow your heater to cool down for approximately 25 minutes. • Plug your heater back into mains power, the heater should resume normal operation. <p>NOTE: There is a tip over switch attached to the base of the heater. If the heater is not placed on a flat surface or it is knocked over, the power to the heater will shut down automatically.</p> <p>LIVING & CO AFTER SALES SUPPORT 0800 422 274</p>																	