


1500 Electric Height Adjustable Desk

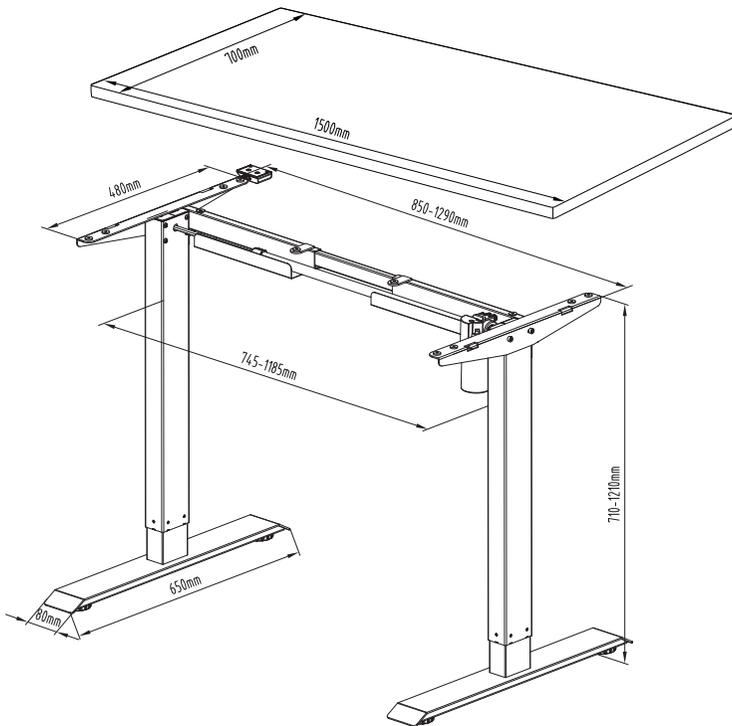

INSTRUCTION MANUAL

The Maximum Weight this product can hold - up to 60 kgs

Important Safety Instructions

- Do not place TVs or other heavy objects on top of this product.
- Never allow children to climb or hang from the top.

Assembly Details

60 min

Approximate Assembly Time



2 Person Assembly

*Floor Area
2 x 2meters*



Required Assembly Space


Tips before you start

 
 

 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Only use power tools as stated in the manual.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.
11. Type of use: Severe (contract use).

Care and maintenance


- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.

Part Name

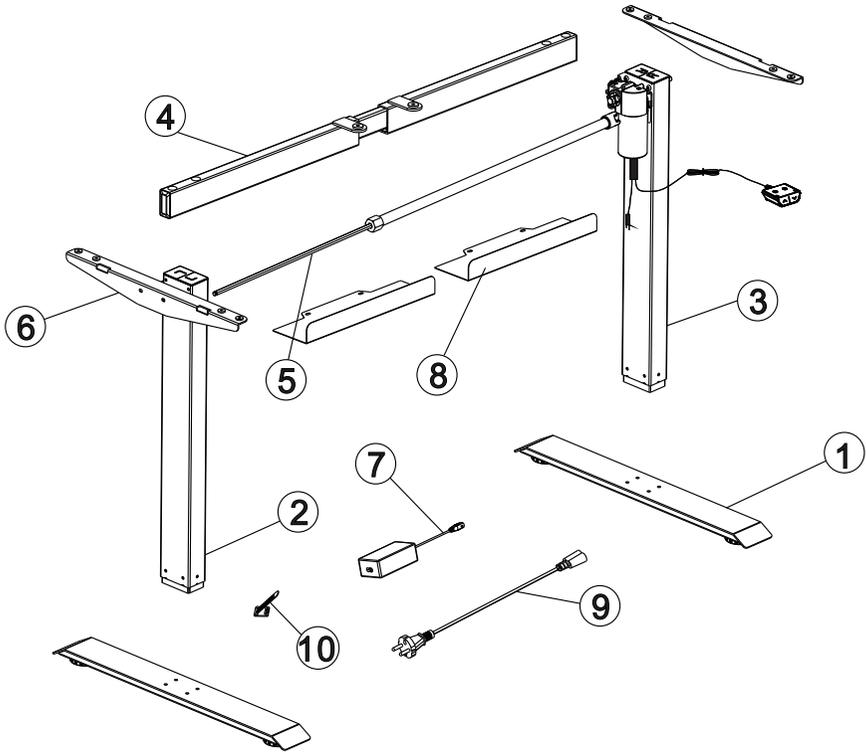

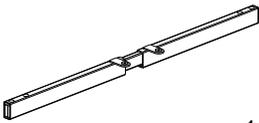
<p>1</p>  <p>x2 PCS</p>	<p>2</p>  <p>x1 PC</p>	<p>3</p>  <p>x1 PC</p>
<p>4</p>  <p>x1 PC</p>	<p>5</p>  <p>x1 PC</p>	<p>6</p>  <p>x2 PCS</p>

 Part Name

<p>7</p>  <p>x1 PC</p>	<p>8</p>  <p>x2 PCS</p>	<p>9</p>  <p>x1 PC</p>		
<p>10</p>  <p>x4 PCS</p>				
<p>A x 12 pcs</p>  <p>M6</p>	<p>B x 4 pcs</p>  <p>M8</p>	<p>C x 1 pc</p>  <p>4x4 5x5</p>		<p>D x 1 pc</p>  <p>2.5x2.5</p>
<p>E x 4 pcs</p>  <p>M4</p>	<p>F x 15 pcs</p>  <p>ST4.2</p>	<p>G x 1 pc</p>  <p>Wrench</p>		

Assembly

Install Pedestal(1)

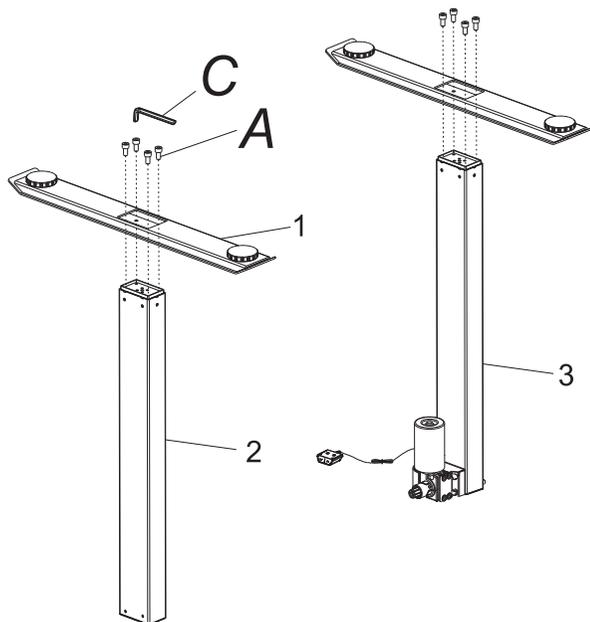


Install (1) & (2)(3) together, use 5*5 wrench(C) to tighten the screws(A).


<p>A</p>  <p>8 PCS</p>	<p>C</p>  <p>5x5</p>
---	---

Assembly

Install Supporting beam(4)

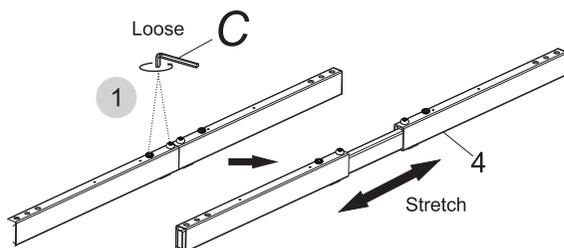

Loosen the screws (4) with wrench 4x4(C), then expand the supporting beam to required length.

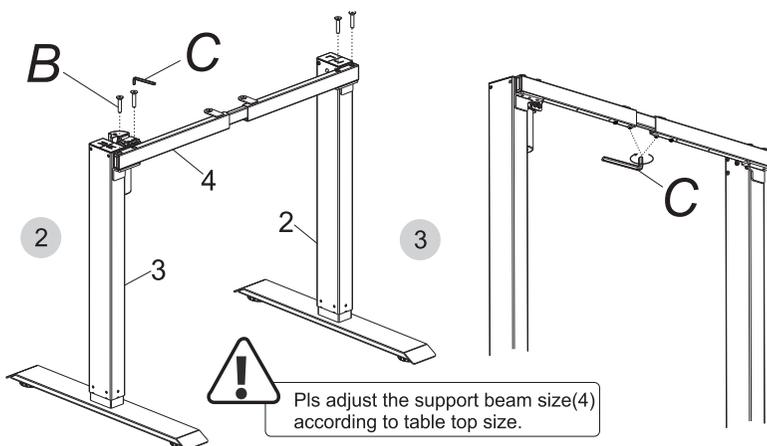


Install supporting beam on the column (2)(3), tighten screw (B) with wrench 5x5 (C)

Tighten screws on supporting beam with wrench 4x4(C)




B  4 PCS	C   4x4 5x5
--	---

Assembly


Install transmission rod(5)

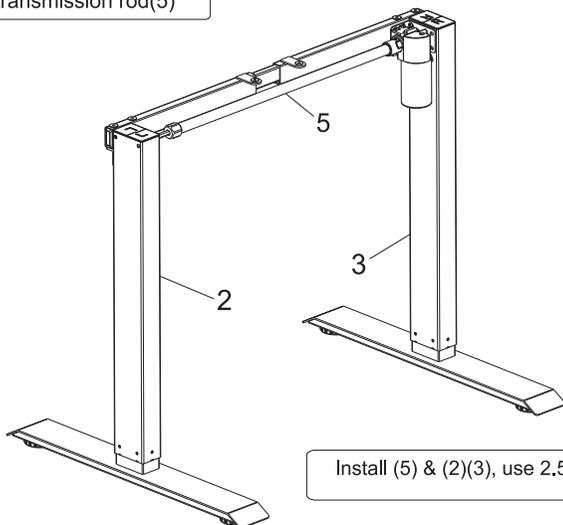

Install (5) & (2)(3), use 2.5*2.5 wrench(D) to tighten(G).

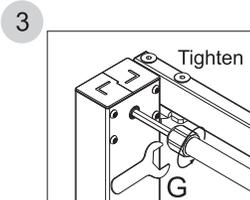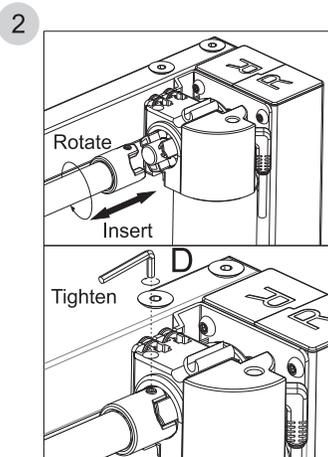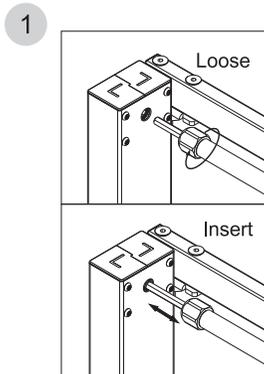


Rotation angle does not exceed one third of the circle

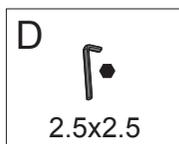


Assembly

Install supporting plate(6)

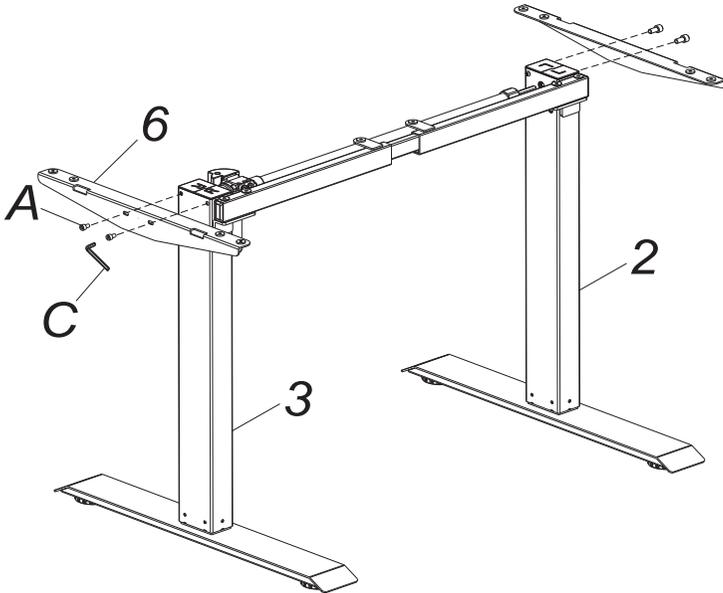


Install(6)&(2)(3), use 5*5 wrench(C) to tighten the screws(A).

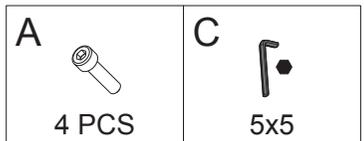


Assembly

Install desktop

Distance $\leq 200\text{mm}$


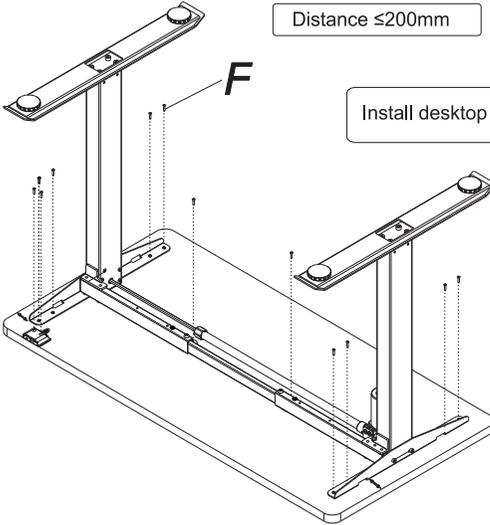


Install desktop with screw(F), use pistol drill to tighten.

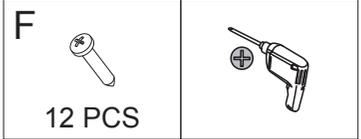




Install baffle(8)

Install(8), use 2.5*2.5 wrench(D) to tighten the screws(E).

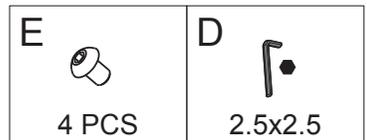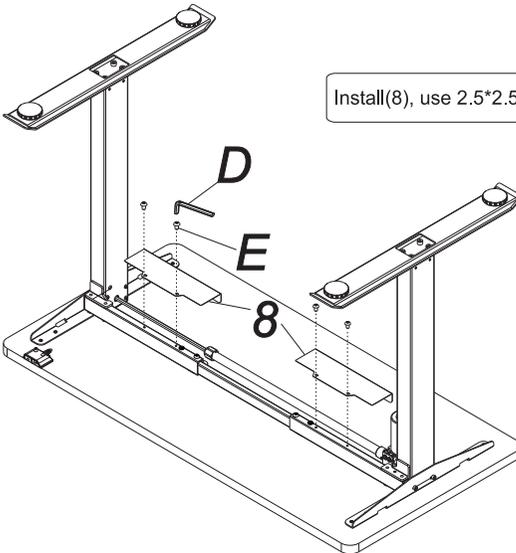

Assembly

Connect All the Cables onto the Adapter (7)

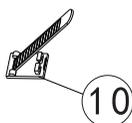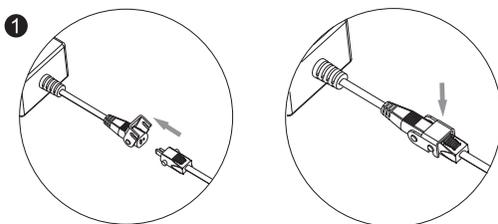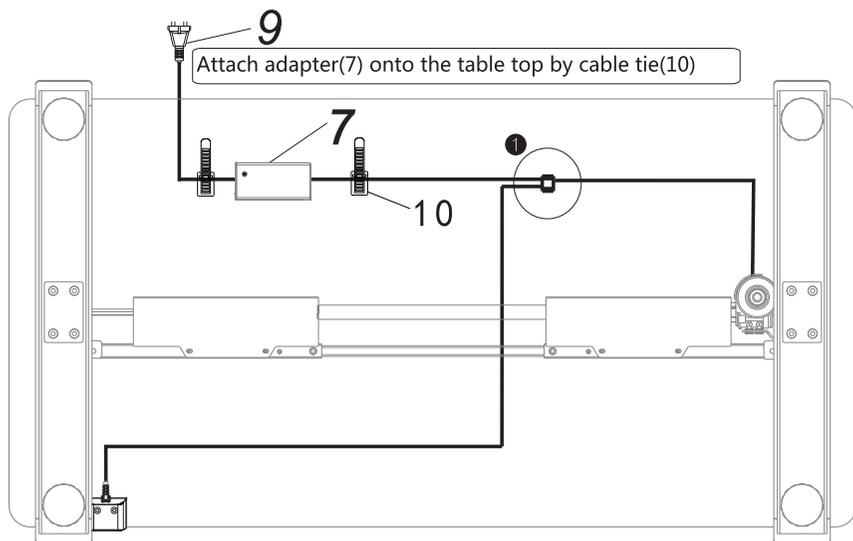


Use the cable tie(10) to fix all the connection cables on the desk to keep it clean.

Assembly

How to use the handswitch

Button

●	“▲”	Adjust the desk upwards
●	“▼”	Adjust the desk downwards

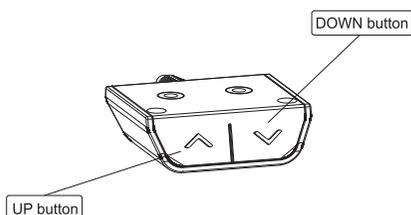

Instruction



Press the UP button or DOWN button to lift or lower the height of desk surface.

Issues and Tips.

The following tips will help you detect and eliminate a common fault and error. If a fault identified is not listed below, please contact customer services.

Fault	Method
No response while long pressing down arrow after connected with a power supply	1.Check if all the cables be connected well
	2.Contact your supplier or dealer
The desktop could not be lifted	1.Check if overloaded, max loading: 60kg;
	2.Contact your supplier or dealer
Overwork (Duty cycle:Max 2min on/30min OFF)	1.Restart it after suspend for 30mins for the working time is too long
	2.Contact your supplier or dealer

Assembly

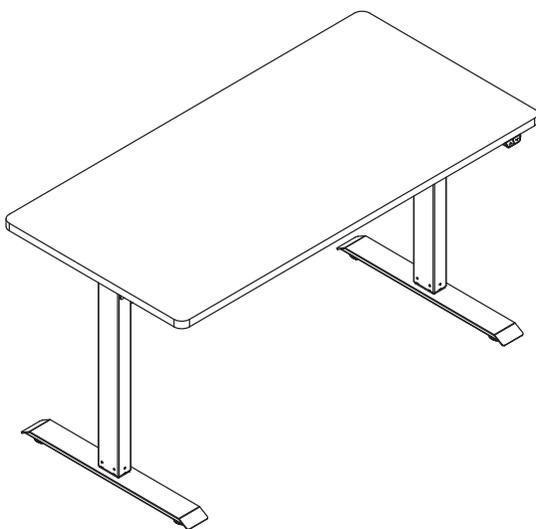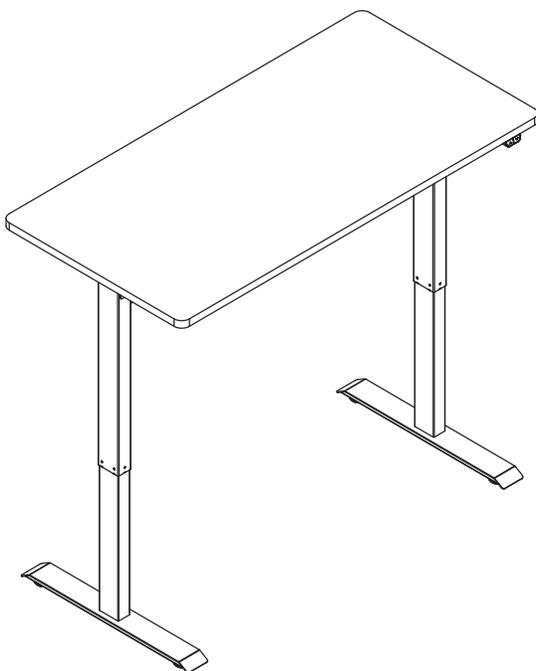



WORK SPACE[®]

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 2-year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 222 246 This Product is covered by 2-year warranty when accompanied by proof of purchase.