


Commercial Electric Height Adjustable Desk

20 MIN

APPROXIMATE ASSEMBLY TIME

2 PERSON ASSEMBLY

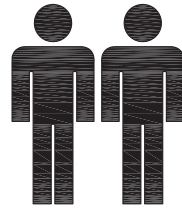


FLOOR AREA
2.0MX3.0M



REQUIRED ASSEMBLY SPACE

ASSEMBLED DIMENSIONS

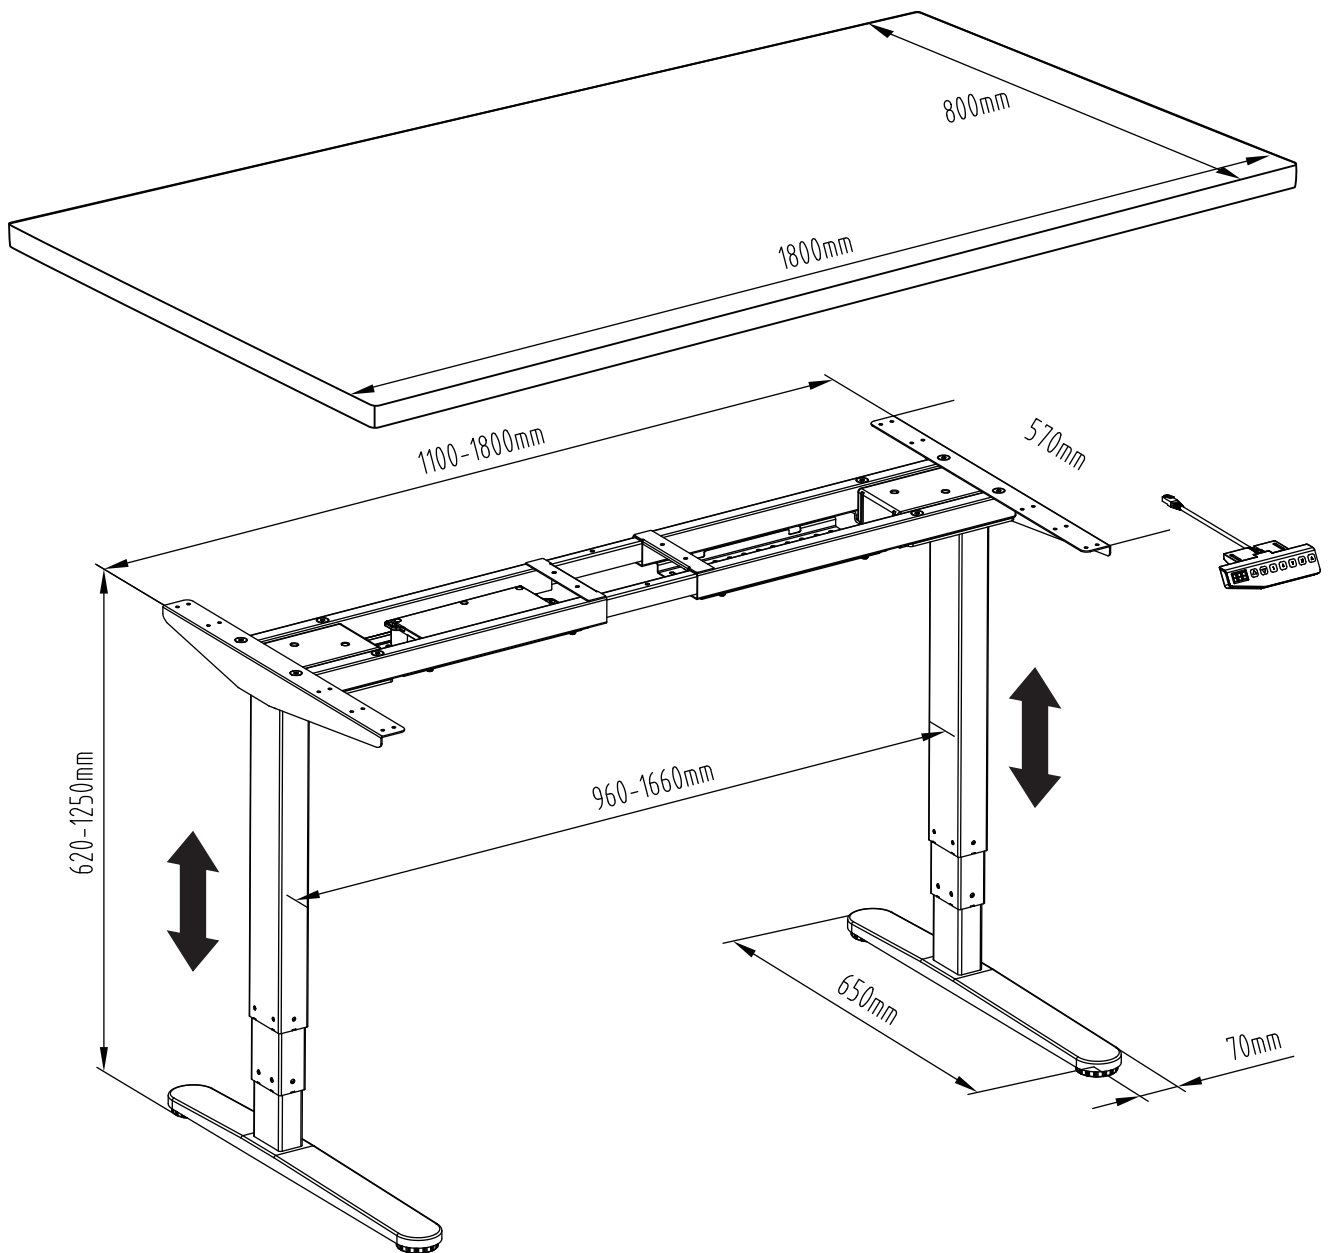

MAX WEIGHT ON TOP: 125kg

Commercial Electric Height Adjustable Desk

Tips before you start: (Just for example)

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is non industrial product.

Care and Maintenance of your Furniture (Just for example)

- ☒ Please periodically check all fittings and re-tighten as necessary.
- ☒ To clean your item, please use a damp cloth and wipe clean.
- ☒ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ☒ Please do not place hot items (eg. Hot drinks) directly on to the surface.
- ☒ Please do not drag and pull your furniture.

WARNING

1. Power supply: AC100V-240V,50/60HZ
2. Service Environment: 0-40°C
3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
5. Check carefully to ensure correct and complete assembly before using.
6. Be familiar with all functions and program settings of the product before first use.
7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on
8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.

Commercial Electric Height Adjustable Desk

WARNING

9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.

10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

11. Cleaning and user maintenance shall not be made by children without supervision.

12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

13. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.

14. Keep the original package of the equipment if necessary in case of the future use in transportation.

 

 
 


Waste disposal



 
 
 
 


 

 
This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.


Commercial Electric Height Adjustable Desk

HARDWARE LIST

AX8	BX26	CX8	DX6	Tools required	
					
M6×16mm	St4.2x20mm	M8×35mm	Square spacer (3M sticker in the back)	Wrench 4x4mm	Wrench 5x5mm

PARTS LIST


No.	Part	Qty	No.	Part	Qty	No.	Part	Qty	No.	Part	Qty
①	 Pedestal	2	②	 Lifting Column	2	③	 Supporting beam	1	④	 Cable management	2
No.	Part	Qty	No.	Part	Qty	No.	Part	Qty	No.	Part	Qty
⑤	 Supporting plate left	1	⑥	 Supporting plate right	1	⑦	 Control box	1	⑧	 Handswitch	1
No.	Part	Qty									
⑨	 Power cable	1									

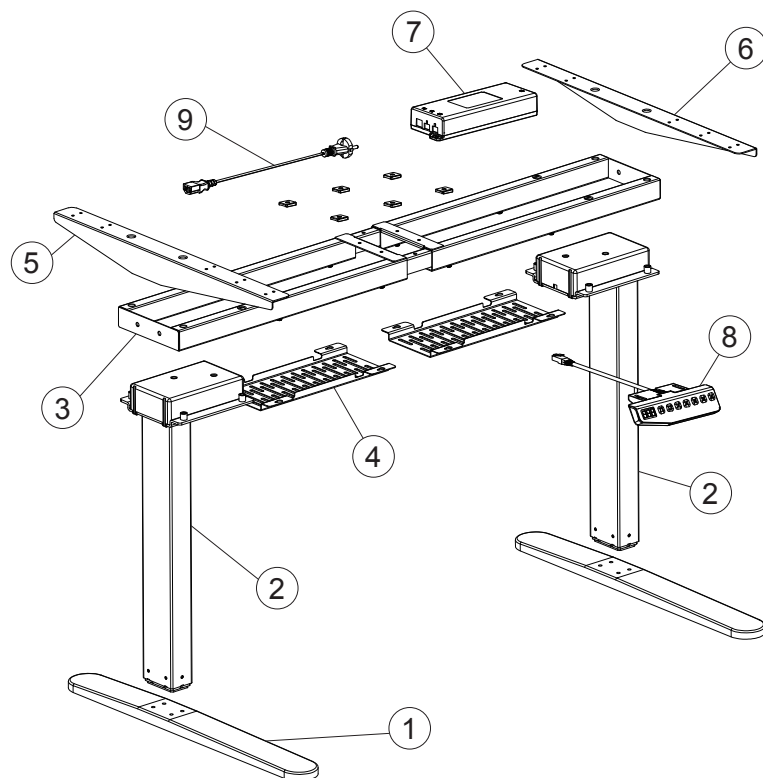

Commercial Electric Height Adjustable Desk


STEP 1

Connect supporting beam(3) with leg(2), use 5x5 wrench(E) to tighten screws(C)

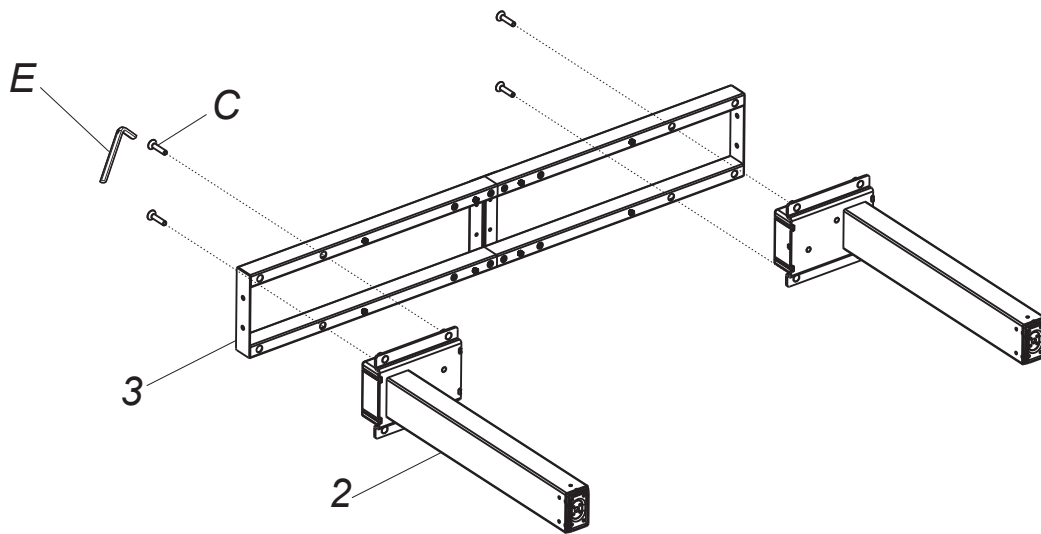

STEP 2




Install supporting plate(5)(6), use 5*5 wrench(E) to tighten the screws(C)

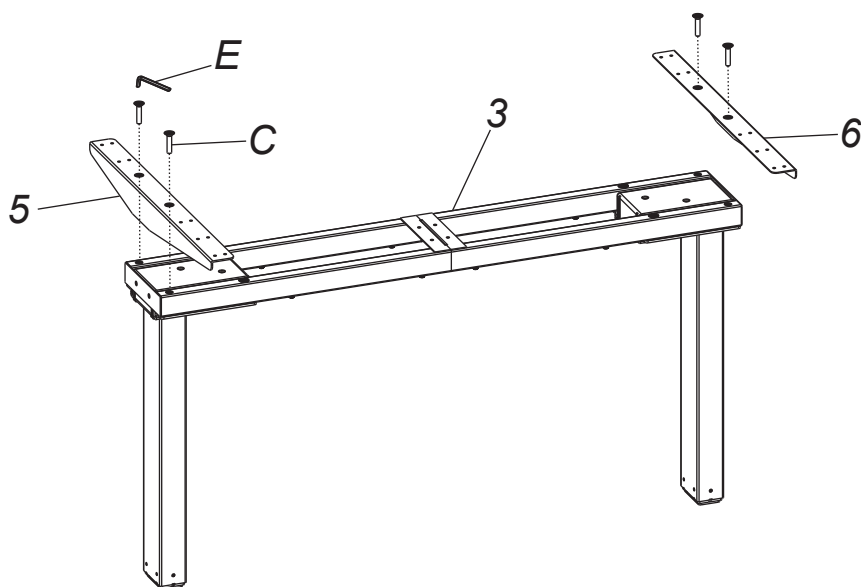

Commercial Electric Height Adjustable Desk




STEP 3

 Install 1 & 2 together, use 4*4wrench(E) to tighten the screws(A).

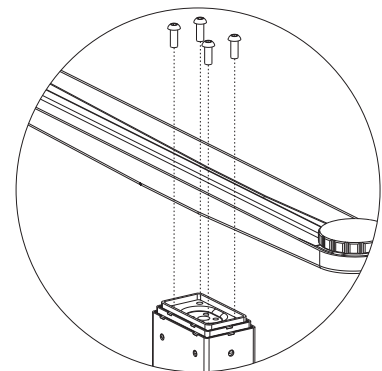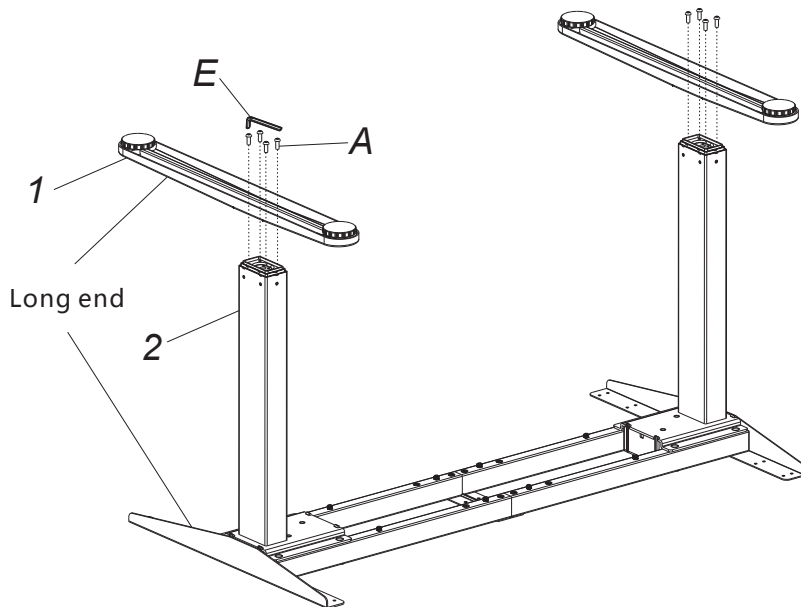


STEP 4

Install tabletop

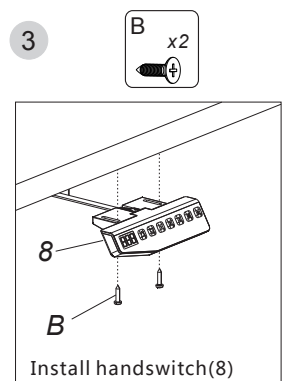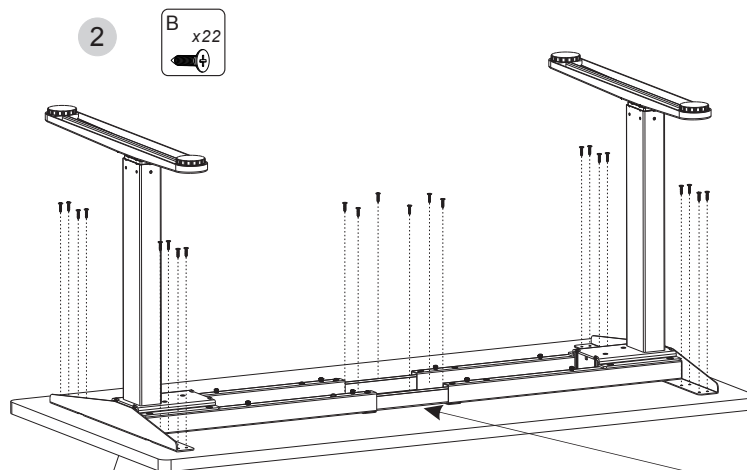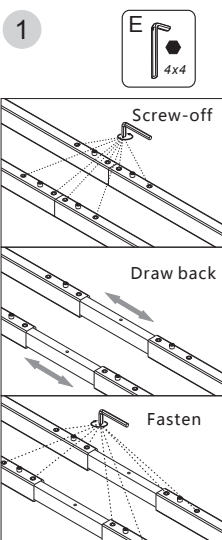

Put square spacer(D) onto middle of beam


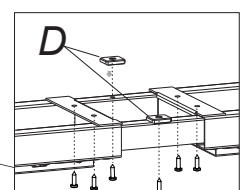


Tabletop

Commercial Electric Height Adjustable Desk


STEP 5

Connect all the cables onto the control box(7)

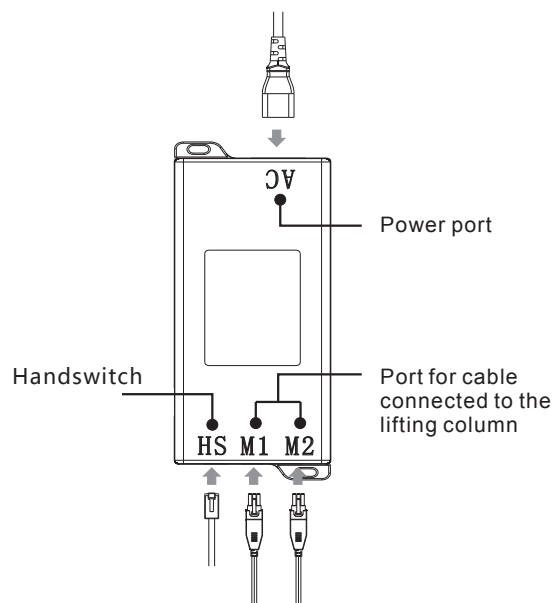
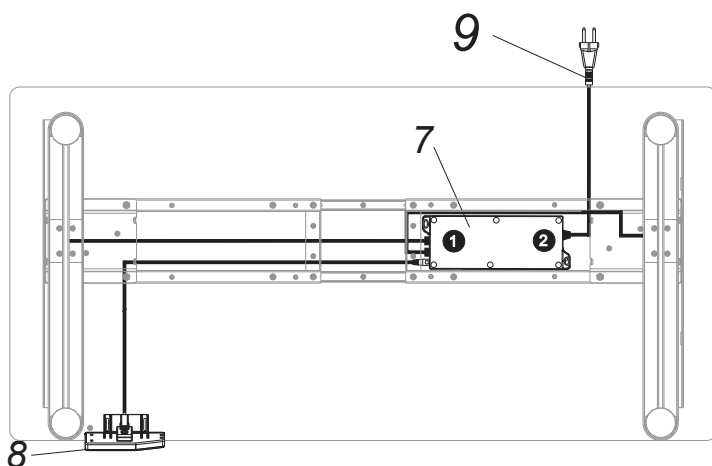


STEP 6

 
Install cable management



Control box installation way 1

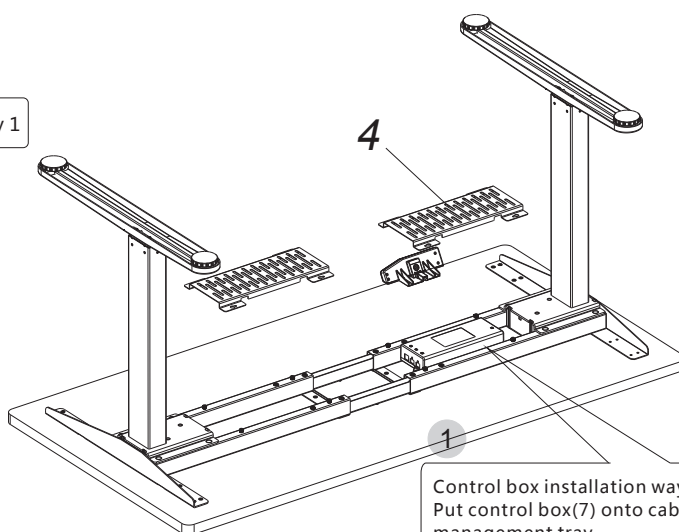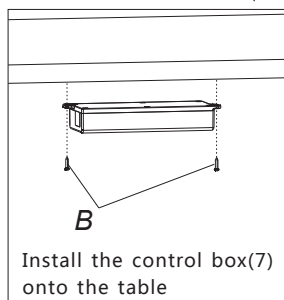


2

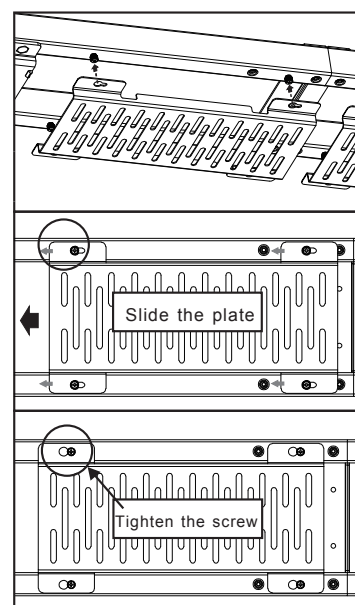

Commercial Electric Height Adjustable Desk

How to use handswitch

Button

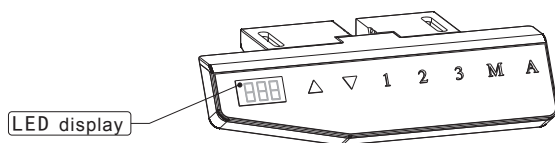

●	“▲”	Adjust the desk upwards
●	“▼”	Adjust the desk downwards
●	“1”	Position 1, first height position saved by user
●	“2”	Position 2, second height position saved by user
●	“3”	Position 3, third height position saved by user
●	“M”	Memory button for height memory function
●	“A”	Alarm button for reminding of keeping same position for long time

Instruction

- Press the UP button or DOWN button to lift or lower the height of desk surface. The LED display shows the real time value. The range of the height value: 62.0cm–125cm.
- Saving A Height Position
 - a. Press the UP button or DOWN button to lift or lower the height of desk surface. For instance, you adjust the height to 80cm.
 - b. Press "M" SAVE button and the LED display shows "5-", then press "1" to save the 1st height position to 80cm. The LED display shows "5-1".
 - c. Repeat step a and step b to save the 2nd height position to 100cm The LED display shows "5-2". Save the 3rd height position to 120cm The LED display shows "5-3".
 - d. Press "1", "2", "3", to automatically reach the height saved before.
- Long-Time Sitting Reminder
 - a. Press REMINDER button "A" to activate the function. The LED display shows "00".
 - b. Two seconds later, press the "▲" or "▼" button to adjust the reminder time only when the display screen flashes. Then press any button to save the time setup, or wait 5 seconds and system will save the time setup automatically. During the countdown, any operation will lead to a repeat starting of the timer. When the countdown finishes, the buzzer will be active with a 10-second "DiDi...DiDi...DiDi..."tone.
 - c. Within the 10-second reminder buzz, press any button to reactivate the time countdown that is set up in (b) step. If no operation during the 10-second reminder buzz, there will be another reminder buzz after 5 minutes. No operation during the second buzz will turn off the Long-Time Sitting Reminder.
 - d. Press and hold the "A" button for three seconds to turn off the Long-Time Sitting Reminder. The LED display shows "0FF".
- Troubleshooting
 - a. Reset : When the LED shows "R5f", press "▼" button until the desk reaches its lowest height and rebounds to stop, it means the reset has been finished.
 - b. When it doesn't work and the LED shows "E01" or "E02", please retry 18 mins later.
 - c. If the "▼" button doesn't work, please check the cable connection and then cut off the power for at least 10 seconds. Reconnect to the power and press "▼" button to start the reset process when it shows the "R5f".
 - d. If all these above process are inefficient, plz contact our customer service.

Commercial Electric Height Adjustable Desk

Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method
No response while long pressing down arrow after connected with a power supply	1.Check if all the cables be connected well
	2.Contact your supplier or dealer
No response while pressing up arrow/ down arrow after connected with a power supply	1.Check if all the cables be connected well
	2.Contact your supplier or dealer
Rising in a low speed	1. Check if overloaded, max loading: 125kg ;
	2. Contact your supplier or dealer
The motor not move as instructed	1. Contact your supplier or dealer
Go down but not go up	1.Reposition
	2.Contact your supplier or dealer
Downward sliding	1. Check if overloaded, max loading: 125kg ;
	2. Contact your supplier or dealer
Frequently Reposition	1. Check if overloaded, max loading: 125kg ;
	2. Contact your supplier or dealer
Overwork (Duty cycle : Max 2min on/18min OFF)	1. Restart after suspend for 18mins while connecting with power;
	2. Contact your supplier or dealer;
Not enough up&down height	1. Press "M"and "3" together for 3 seconds or more, after hearing continuous beeping for twice, it will restore factory settings
	2.Contact your supplier or dealer