

# LIVING & CO<sup>®</sup>

## VACUUM CLEANER



Instruction Manual  
LVC2000RC

---

**AFTER SALES SUPPORT**



0800 422 274

# Contents

- 03 Important Safety Instruction
- 05 Product Overview
- 07 INSTRUCTIONS
- 08 CLEANING AND MAINTENANCE
- 10 Other Useful Information
- 10 TROUBLESHOOTING

# Important Safety Instruction

## IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

**Read this manual thoroughly before first use**, even if you are familiar with this type of product. The safety precautions enclosed reduce the risk of fire, electric shock and injury when correctly adhered to. Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

### READ ALL INSTRUCTIONS

1. Before turning on, ensure the electrical voltage and frequency of the circuit corresponds to those indicated on the rating label.
2. Do not leave the vacuum cleaner when plugged in. Unplug from outlet when not in use and before cleaning or servicing.
3. Do not use outdoors or on wet surfaces.
4. Young children should be supervised to ensure they do not play with the appliance.
5. Do not insert any objects into the appliance.
6. Use only as described in this manual, use only manufacturers recommended attachments.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
8. Do not pull or carry by cord, use cord as a handle, close a door on cord or pull cord around sharp edges or corners. Do not run the vacuum cleaner over cord.
9. Keep cord away from heated surfaces.
10. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
11. To reduce the risk of electrocution never operate the product with wet hands, submerge in water or spill liquids into the product.
12. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
13. Turn off all controls before unplugging.
14. Do not use to vacuum flammable or combustible liquids, such as gasoline, matches, or use in areas where they may be present.
15. Do not vacuum anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

16. Do not use without the filter in place.
17. This appliance is intended for normal household use only.
18. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety;
20. Children should be supervised to ensure that they do not play with the appliance.
21. This Appliance should not be used by children or people who are physically challenged.
22. This appliance is not a toy, and if not used in the correct manner, can lead to unnecessary damage or failure to perform.

## **WARNING!**

- Do not run the appliance over the power cable.
- Do not use the appliance to pick up burning or hot objects (e.g. coal, ash, cigarettes etc) of any kind.
- Do not use the appliance to pick up any liquids or use on wet surfaces.
- Do not cover the appliance or restrict air vents.
- Do not use the appliance to pick up sharp objects (e.g. pins, nails, tacks, staples etc) or string.

## Product Overview



1	Suction base	6	Dust cup release button
2	Dust cup	7	Cord rewind button
3	Middle cover	8	Speed rotate button
4	Big wheel	9	Air outlet plate
5	Power button	10	Power cord

**Accessory**

				
Turbo brush	Crevice Brush	Sofa brush	Upholstery brush	Accessory older


# INSTRUCTIONS

## Before first use

1. **Connection of the hose and the vacuum cleaner:** Insert the hose connector into the front of the vacuum cleaner. To remove the hose connector, you can press the release button and then pull it out.
2. **Connection of the hose and the extending metal tube:** Hold the flex connector of the hose and insert it into the bigger hole of the tube.
3. **Connection of the tube and the vacuum head:** Insert the metal tube into the hole of the vacuum head and rotate it to fasten together.

## Operation

4. Pull the power cord out of the appliance and insert the mains plug into the mains socket. A YELLOW mark on the power cord indicates the ideal cable length. Do not extend the power cord beyond the RED mark.
5. Press the power button on top of the appliance to switch on the appliance.
6. You can quickly reduce the suction power by pushing the air flow regulator on the hose handle. Push it forward, suction power will increase; push it backward, suction power will reduce.

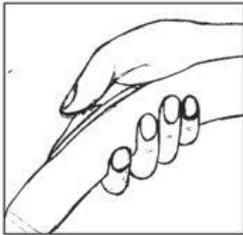

# CLEANING AND MAINTENANCE

Always switch off the appliance and unplug from the mains socket before carrying out any maintenance or cleaning. Clean the outside of the appliance with a slightly damp cloth. Dry thoroughly before use.

## Filter Maintenance

It is very important to keep the filters clean to maintain maximum performance from the vacuum.

Clean the filters regularly. We recommend you replace the filters once a year.

1. To clean the dust cup.

- Press the cup lock button. (Fig 1)
- Remove the cup sets and open the cover of the cup. (Fig 2)
- Twist the filter to remove the HEPA filter. (Fig3 & 4)



1



2



3



4

2. To clean the air outlet plate filter: remove the air outlet plate by pushing down on the upper filter cover tab, wash it with warm water and thoroughly dry it before use. Note: if the filter is damaged please replace it. (Fig 5 & 6)



5




6

## Emptying the Dust CUP

Empty the dust cup when the contents reaches the MAX line or when suction is reduced

1. Press the dust cup release button to remove the dust cup.
2. Hold the dust cup over a trash receptacle and then press the dust release button to open the dust cup door. Empty the dust cup.

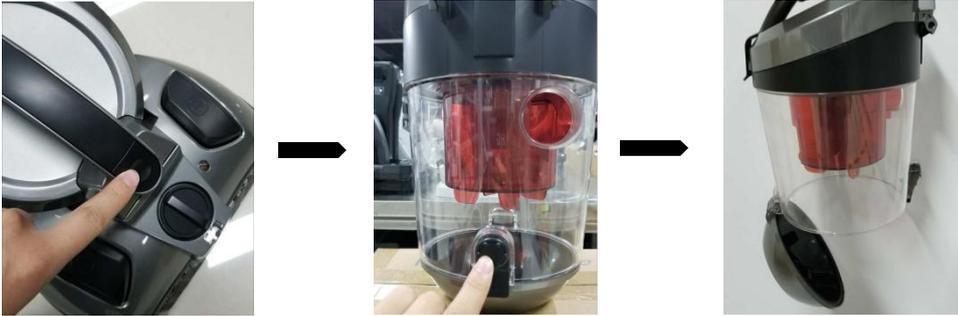

3. Close the dust cup door after emptying.

## Using the Cleaning Accessories

- Dual position carpet / floor brush (Drawings for reference only)


Position 1: Bristles extended

– For hard floors





Position 2: Bristles retracted

– For carpets

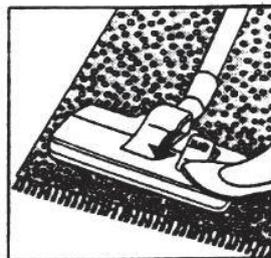

- Dusting brush and crevice tool - For corners, edges or small spaces

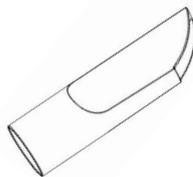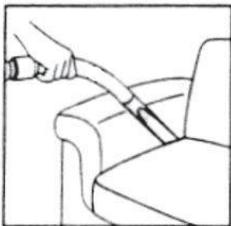

## Other Useful Information

### Note:

The filter cannot be cleaned in the washing machine. It will reduce the suction power and damage the motor if you use a wet filter.

### Power cord rewinding

When not in use, unplug the appliance from the mains socket and then press the cord rewind button to feed back the power cord.

**CAUTION:** Take special care to rewind the mains cord by holding the plug to avoid injury by a whipping action.

### Storage

Insert the holder of the floor brush with tubes into the storage clip at the rear of the appliance.

## TROUBLESHOOTING

Please check the following details before you have your appliance repaired by an authorised servicing agent.

Problem	Possible Cause	Possible Solution
Vacuum cleaner does not work.	<ol style="list-style-type: none"> <li>1. Check if the power plug is firmly inserted into the power outlet.</li> <li>2. Check if the power switch of the appliance is on.</li> </ol>	<ol style="list-style-type: none"> <li>1. Insert the plug back into the power outlet and ensure it is switched on.</li> <li>2. Then turn the vacuum cleaner power switch on.</li> </ol>
Suction power becomes weak	<ol style="list-style-type: none"> <li>1. Check if the hose, floor brush or tube is clogged or damaged</li> <li>2. Check if the dust tank is full.</li> <li>3. Check if the filter is clogged and if the tube is correctly attached.</li> </ol>	<ol style="list-style-type: none"> <li>1. Immediately remove the obstruction.</li> <li>2. Empty the dust tank.</li> <li>3. Clean the filter or reassemble the tubes</li> </ol>

Power cord will not pull out	Check if the power cord is twisted.	Pull out the power cord at its optimal length and rewind it.
Power cord cannot be pulled out.	The power cord may be twisted	Rewind or pull the cord in and out several times by pressing the cord rewind button
No suction power regulation	The suction power regulation device may be faulty	Restart the appliance several times. If it still does not work, contact an authorised servicing agent.

## Technical Specifications

220-240V 50/60Hz 2400W

Dust canister capacity: 3.2L

**Customer Service Number:** 0800 422 274

MON – FRI: 8AM – 5PM

SAT – SUN: 9AM – 4PM

## Responsible disposal

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.



# LIVING & CO<sup>®</sup>

## Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 1 year warranty when accompanied by proof of purchase.

IM Version 1.0 - September 2017