


Assembly Instructions

MODEL NO.:177504-1


DESK 1200 LONG

| | | | |
|---|--|---|---|
| 1 | 2 | 3 | 4 |
|  Cam Lock 10pcs |  Klix Cam 10pcs |  Cam Cover 14pcs |  Dowel 10pcs |


STEP1

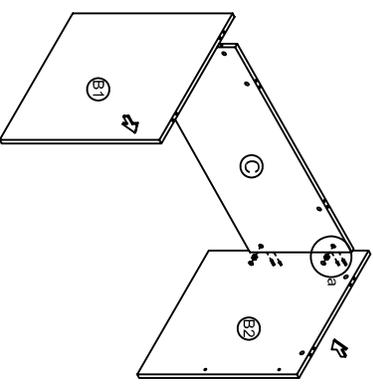


STEP2

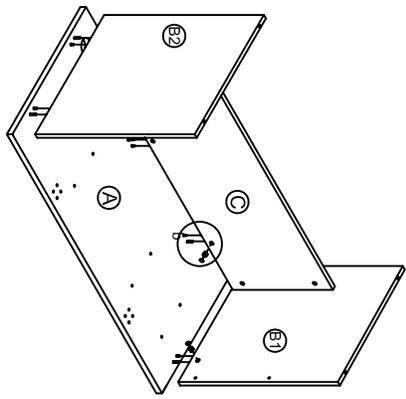

STEP3

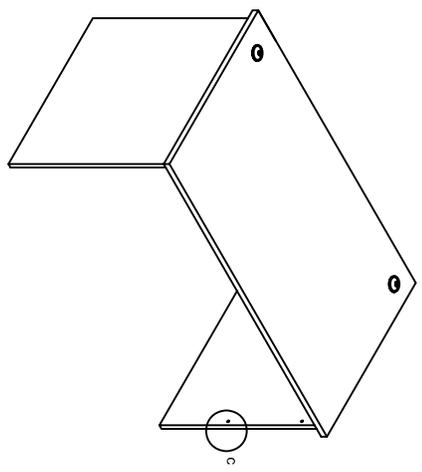


COMPLETED ASSEMBLY

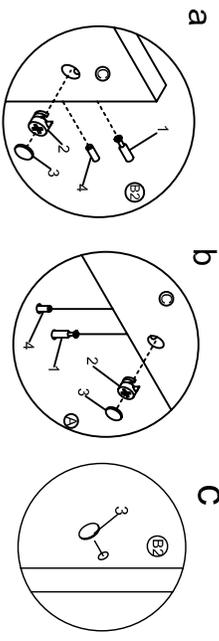

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

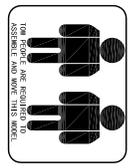

IMPORTANT!

FUNCTION OF KLIX CAM

1/4 RIGHT TURN FOR LOCKING

Make Sure The Arrow Is Pointing Upwards Before Inserting Into The Panel's Hole

