







Assembly Instructions
MODEL NO.:177505-1
 DESK 1500 LONG

1	2	3	4
 Cam Lock 10pcs	 Klix Cam 10pcs	 Cam Cover 14pcs	 Dowel 10pcs


STEP1

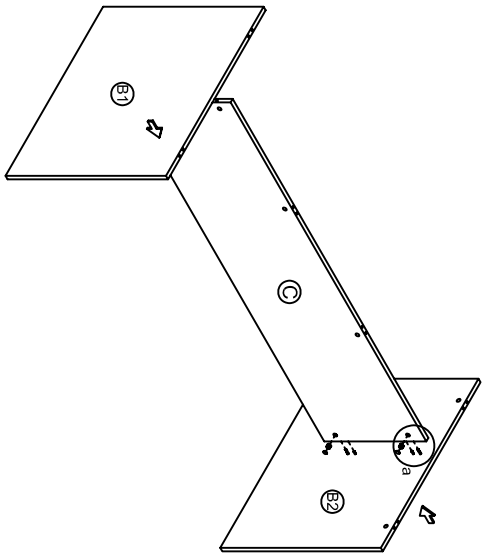


STEP2

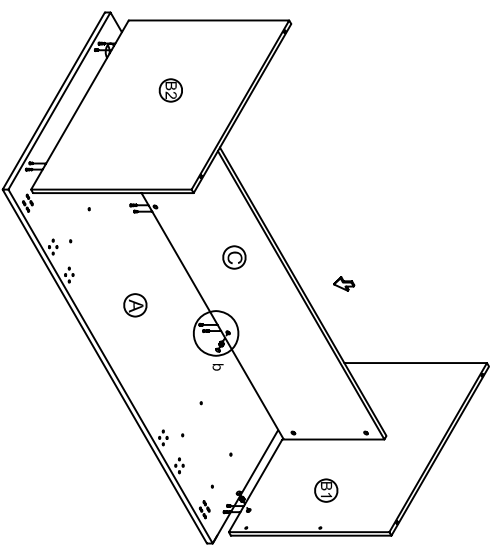

STEP3

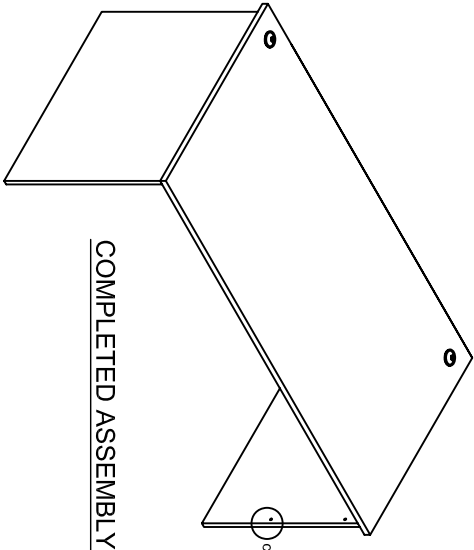


COMPLETED ASSEMBLY

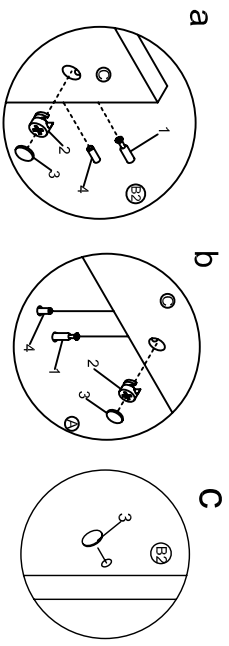


IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

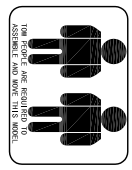

IMPORTANT!

FUNCTION OF KLIX CAM



1/4 TURN FOR LOCKING

Make Sure The Arrow Is Pointing Upwards Before Inserting Into The Panel's Hole