
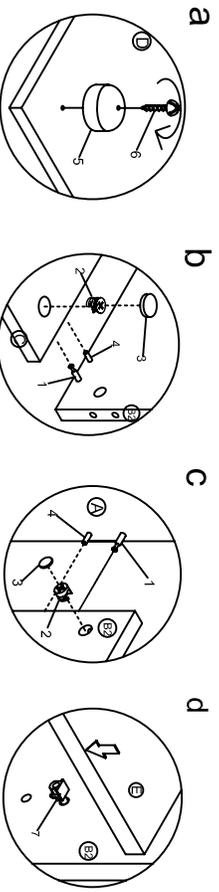
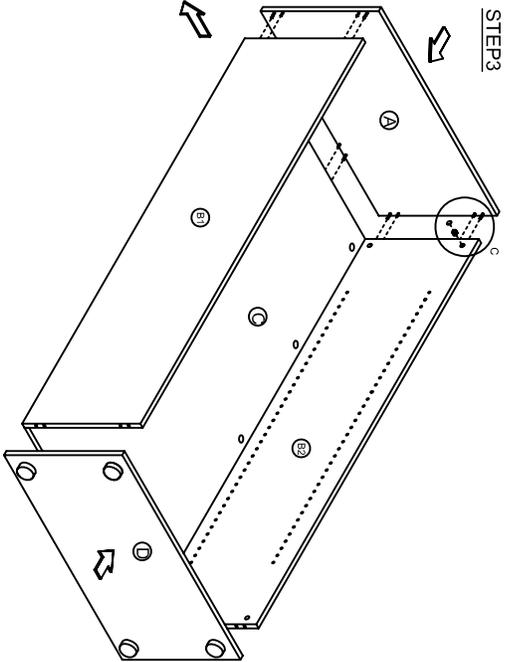
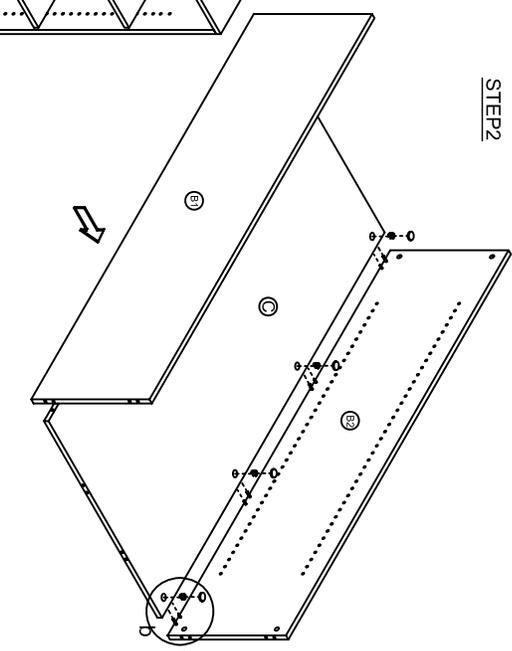
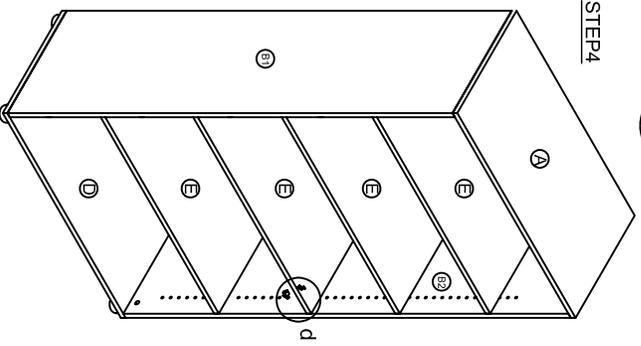


# Assembly Instructions


## MODEL NO.:177502-1

### BOOKCASE

1	 Cam Lock 20pcs	2	 Klix Cam 20pcs	3	 Cam Cover 20pcs	4	 Dowel 20pcs	5	 CUSHION 25Hx 52 4pcs	6	 Screw #4*30mm 4pcs	7	 Shell supporter 16 pcs
---	---	---	--	---	---	---	---	---	---	---	--	---	--

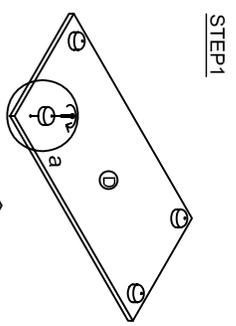

- IMPORTANT NOTE:**
- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
  - Check to be sure that you have all parts and hardware.
  - Remove all wrapping materials, including staples & packing straps before you start to assemble.
  - Don't tighten all screws/bolts until all completely assembled.
  - Keep all hardware parts out of reach of children

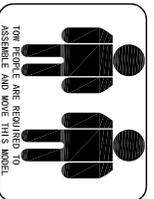

**IMPORTANT.**

**FUNCTION OF KLIX CAM**

1/4 RIGHT TURN FOR LOCKING

Make Sure The Arrow Is Pointing Upwards Before Inserting Into The Panel's Hole