



Assembly Instructions
MODEL NO. :177526-1
 DESK RETURN-600D

1	 Cam Lock 6pcs	2	 Klix Cam 6pcs	3	 Cam Cover 10pcs	4	 Dowel 2pcs	5	 screw M6*30 2pcs	6	 connector 200*60 2pcs	7	 screw M6*12 16pcs
---	--	---	---	---	---	---	--	---	--	---	---	---	---


STEP1

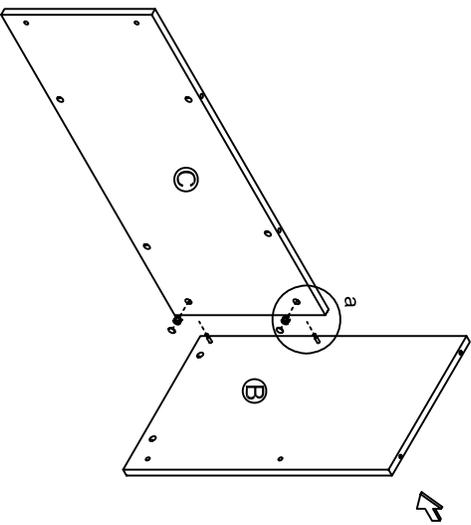





STEP2

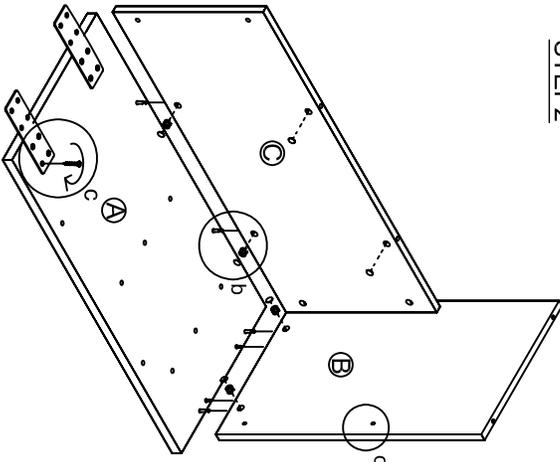

STEP3

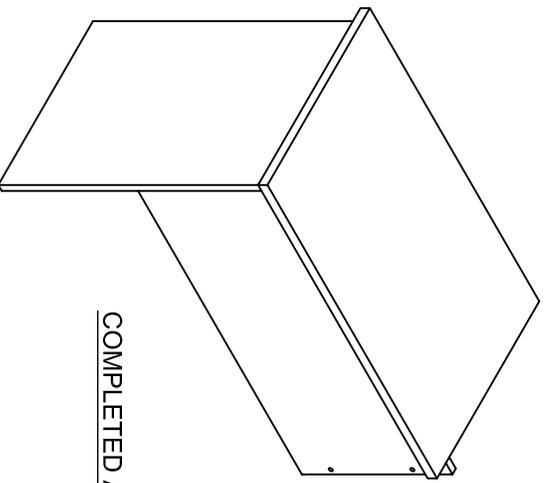


COMPLETED ASSEMBLY

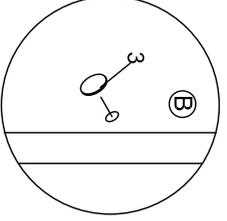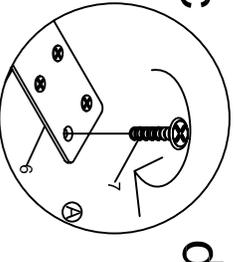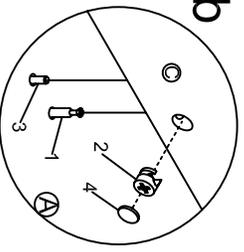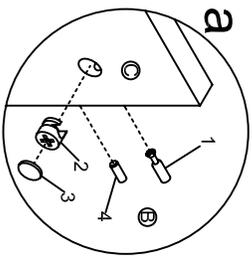

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

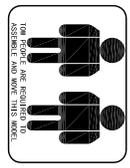

IMPORTANT:

FUNCTION OF KLIX CAM



1/4 RIGHT TURN FORK LOCKING

Make Sure The Arrow Is Pointing Upwards Before Inserting Into The Panel's Hole