


JCHT35K Handset User Interface Guide





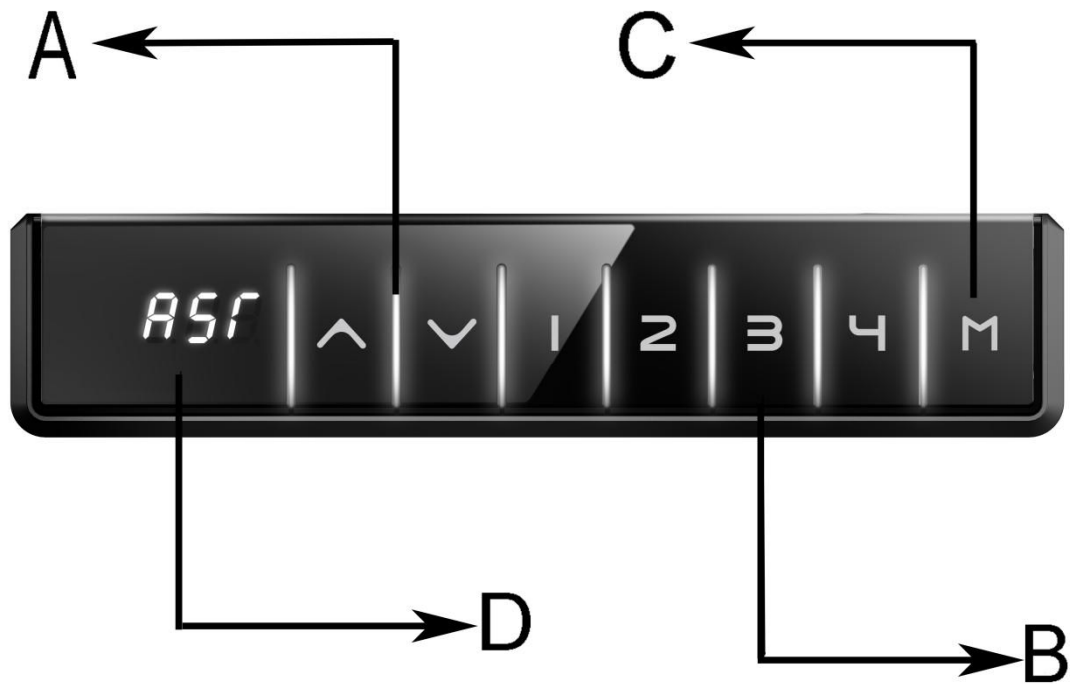

- A. Height Adjustment Buttons
- B. Memory Position Buttons
- C. Memory Setting Button
- D. Digital Display

● Adjusting the Height:

Pressing  or  button to adjust the height.



● Reset

Press  to lower the desk to the minimum height. Continue to press  for 7 seconds till the digital display will show . Loose the button, and then press  button again, the column will slightly down, and slightly rise and stop, at this time, the digital display will show actual height. Your desk is now ready to use.



Note: Please reset for the first time use or when the desk legs aren't moving synchronize, or handset show Error code.

● Setting the Memory Position Buttons:

1. Adjust the desk to the desired height, then press **M**



2. Then Press **1, 2, 3** or **4** to assign the desk's position to the respective button.



Press button 1, 2, 3 or 4 to move the desk to the memory position.