


















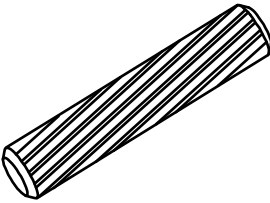
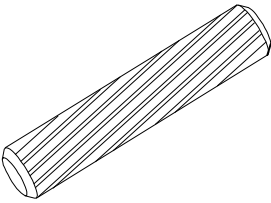
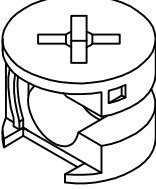
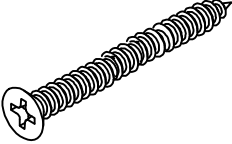


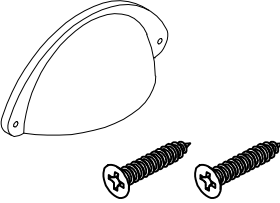



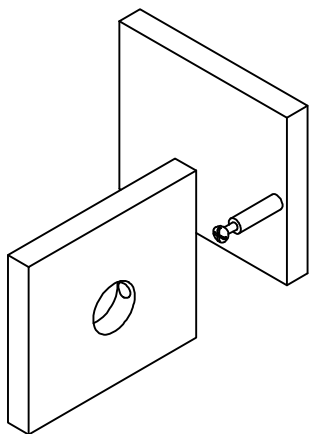
SKU#761215 Workspace Bedford desk

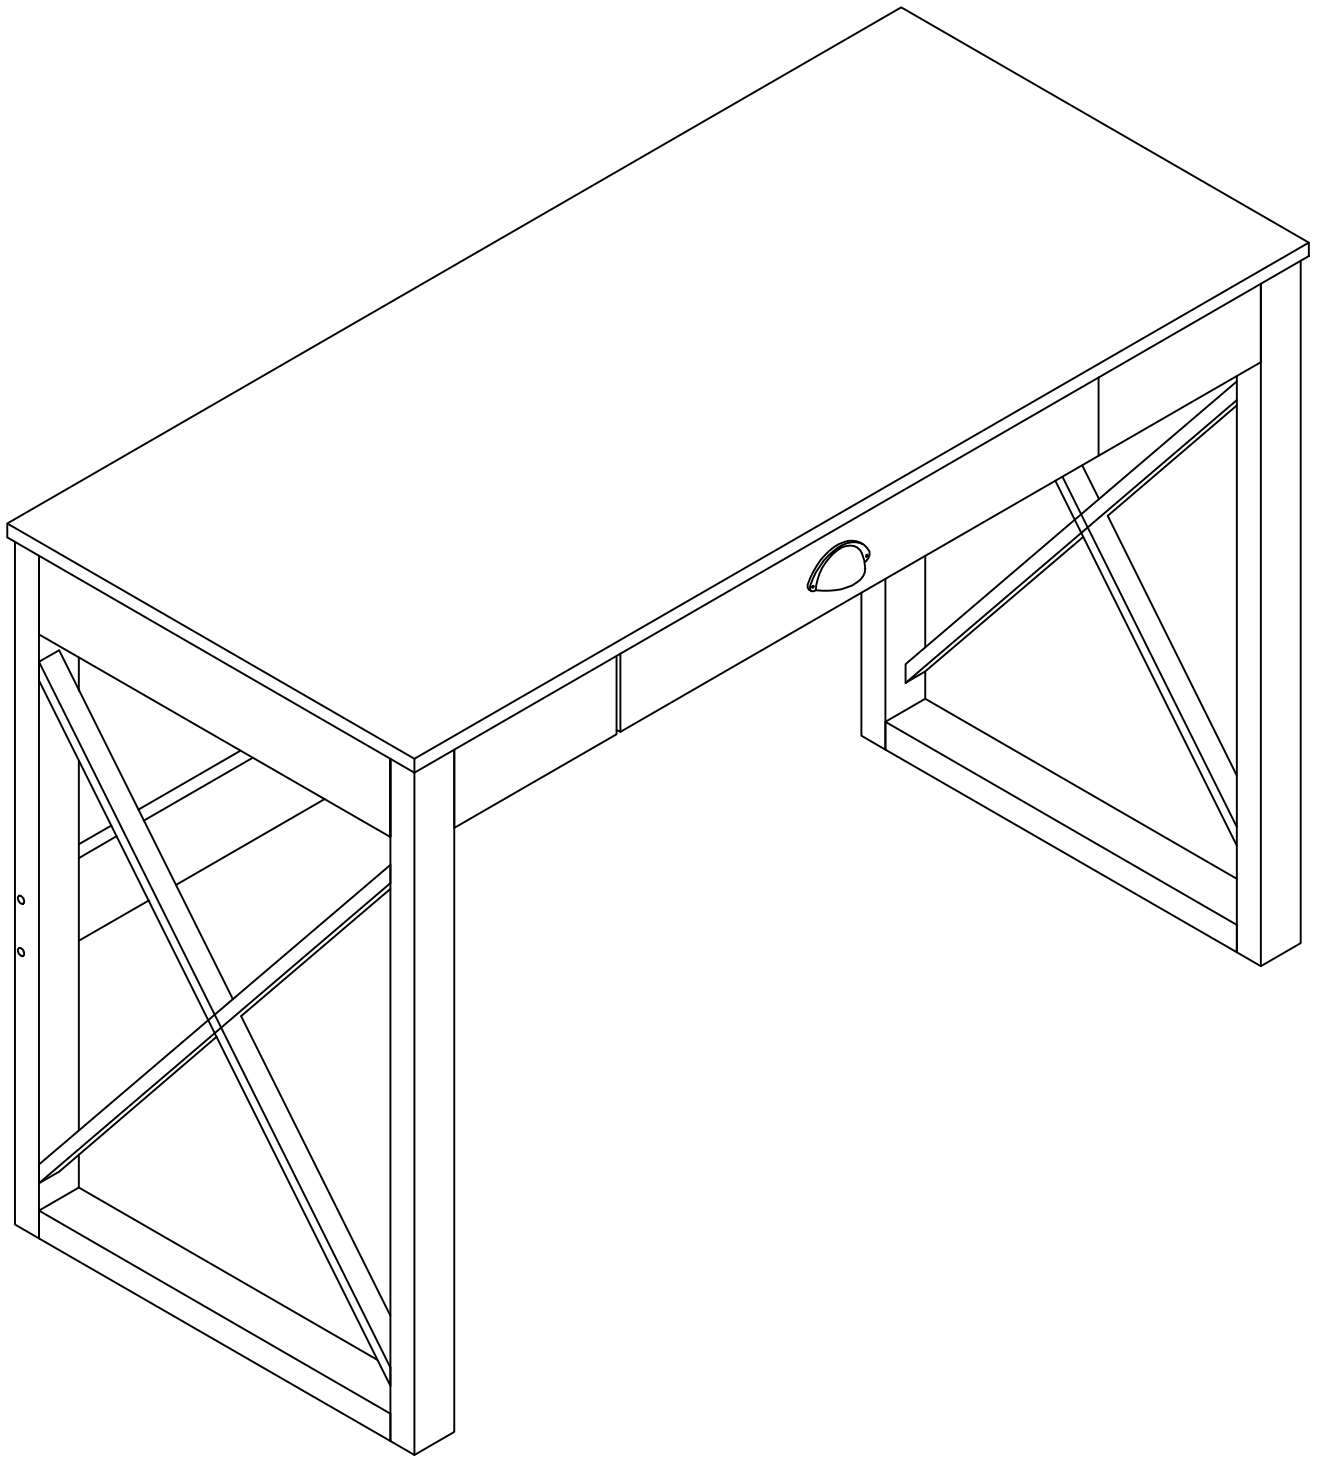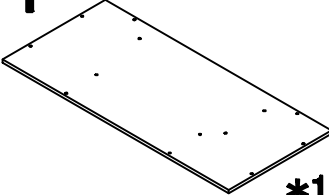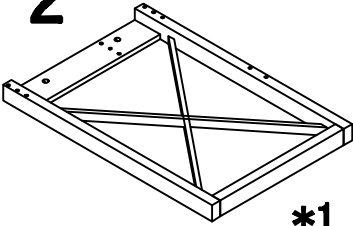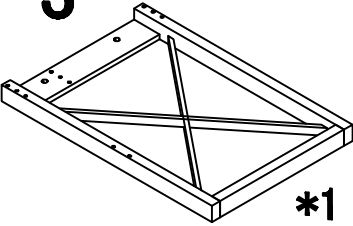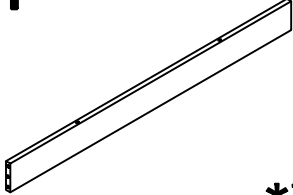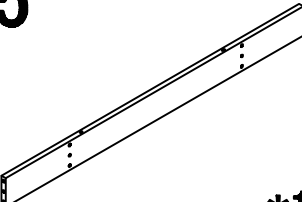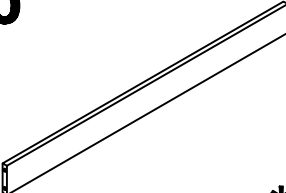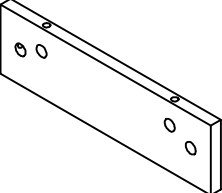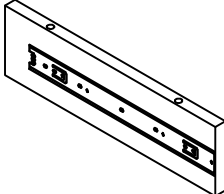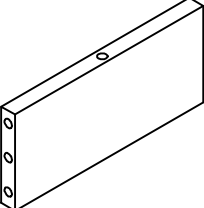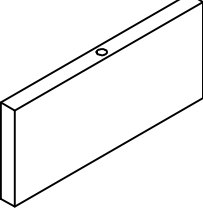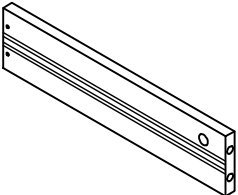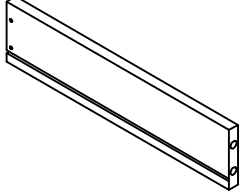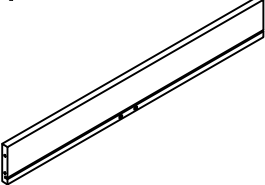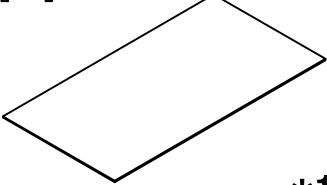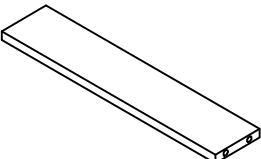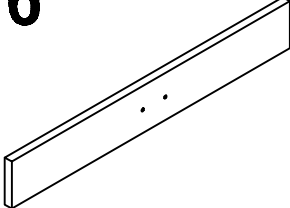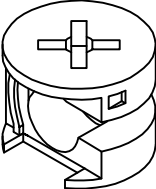


**IMPORTANT: DON'T FASTEN BOLTS UNTIL
ALL PARTS IN POSITION.**

1  *1	2  *1	3  *1	4  *1
5  *1	6  *1	7  *1	8  *1
9  *1	10  *1	11  *1	12  *1
13  *1	14  *1	15  *1	16  *1
A  ø15*11 *24	B  *26	C  ø8*30 *20	D  ø6*30 *4
E  ø12*11 *4	F  ø3.5*30 *4	G  M6*90 *4	H  *4
I  ø3*12 *2	J  *2		


1




2

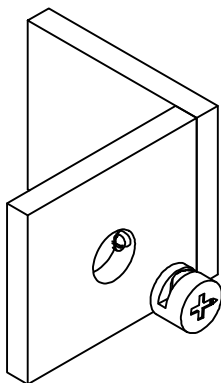


3

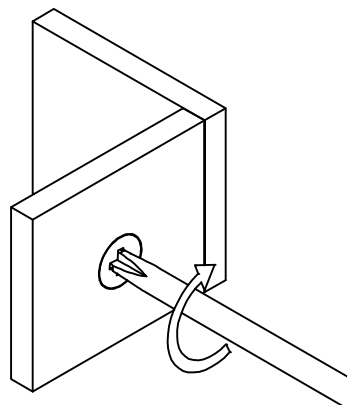


1

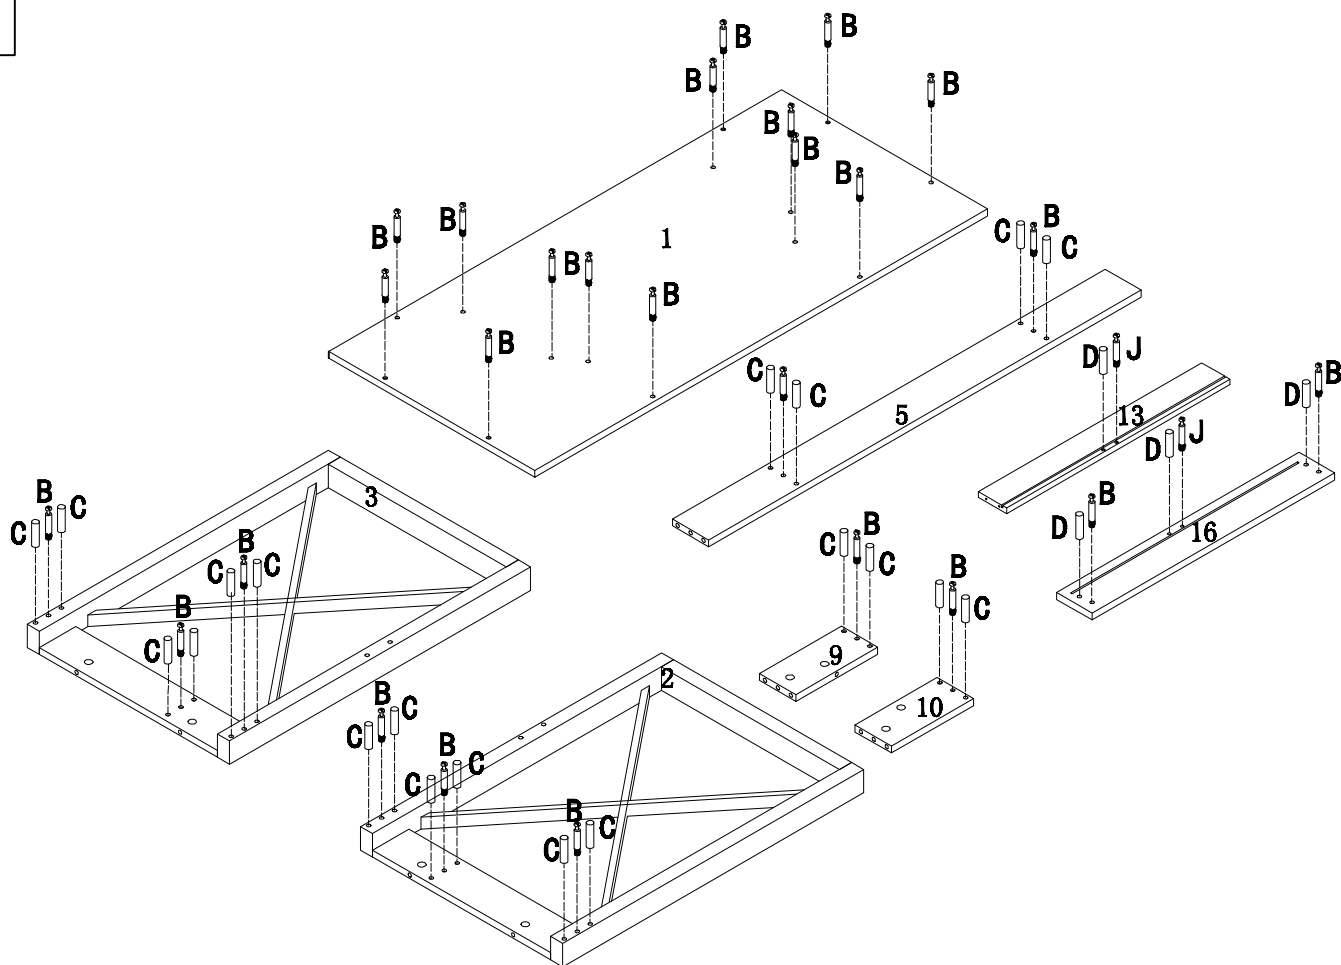


2

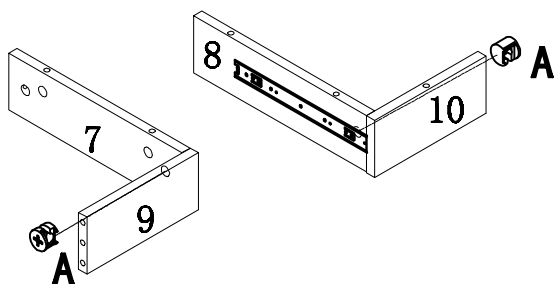


3

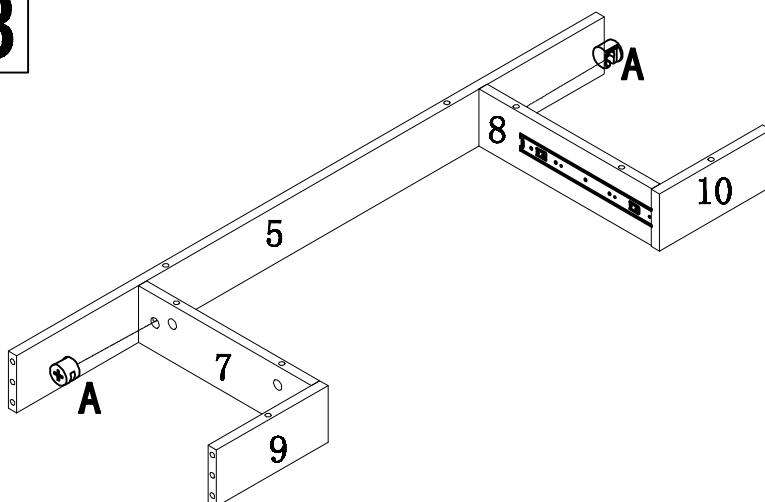


4

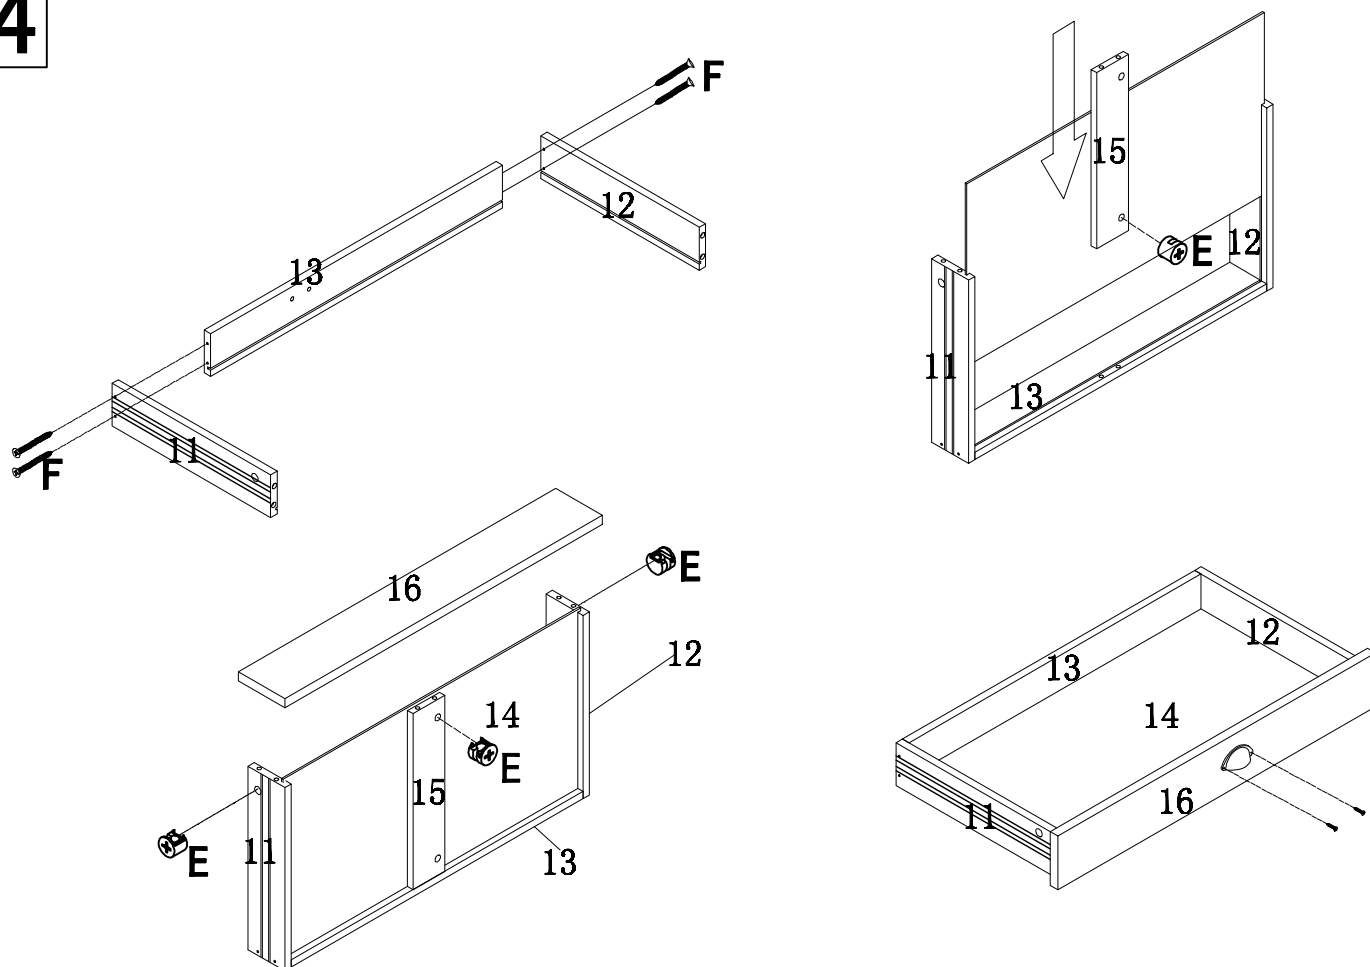

5

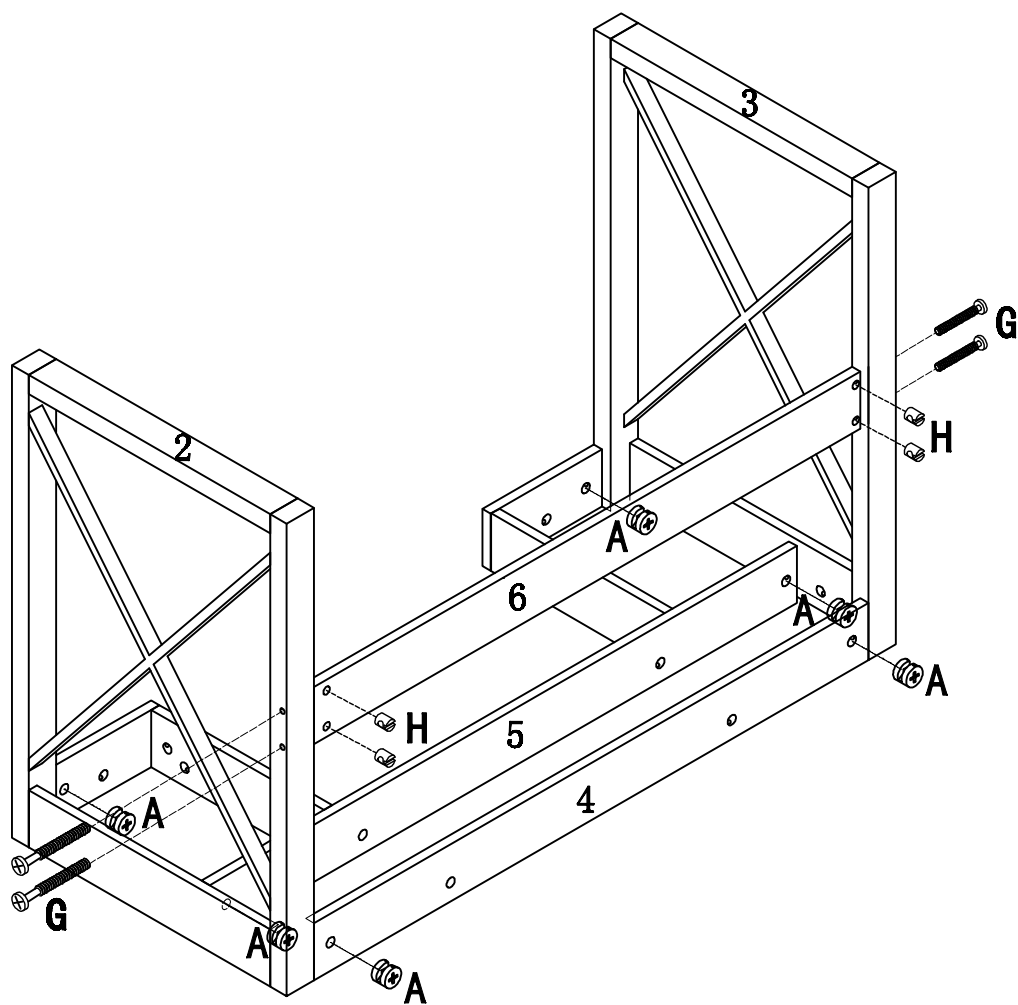

6

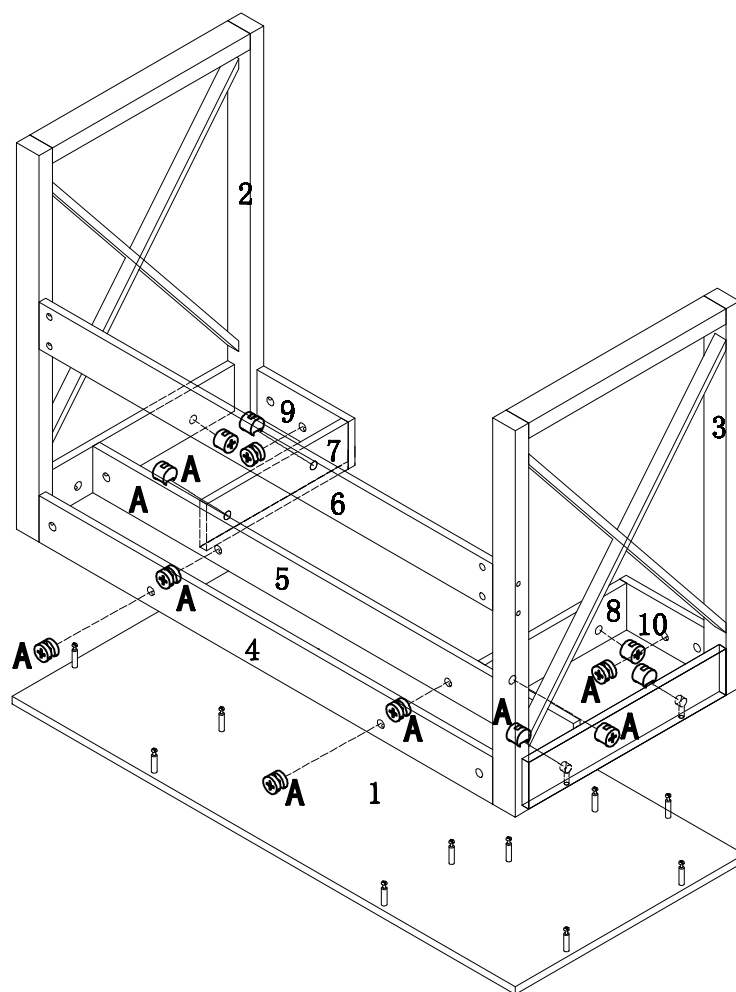

7

