



Assembly Instructions
MODEL NO. : 177516-1
 BOARDROOM TABLE 2400

1	 Cam Lock 10pcs	2	 Klix Cam 10pcs	3	 Cam Cover 10pcs	4	 Dowel 10pcs
---	---	---	--	---	---	---	---


STEP1

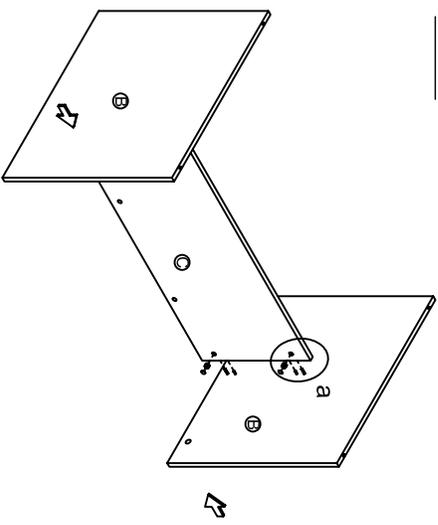


STEP2

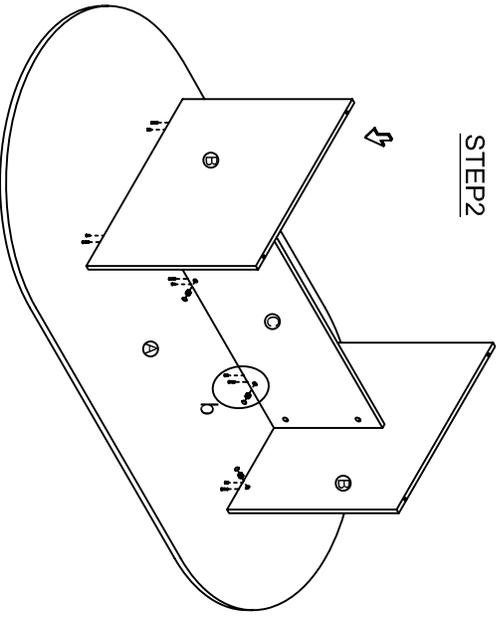

STEP3

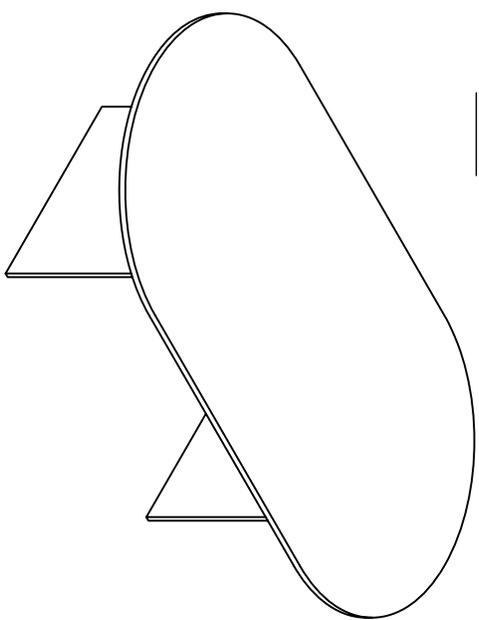


COMPLETED ASSEMBLY

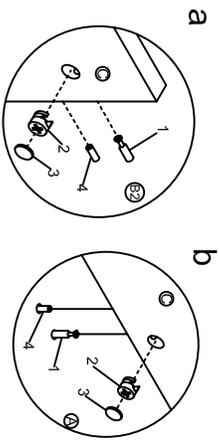

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

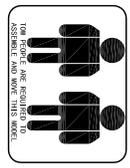

IMPORTANT!

FUNCTION OF KLIX CAM



1/4 RIGHT
TURN FOR
LOCKING

Make Sure The Arrow Is
Pointing Upwards Before
Inserting Into The
Panel's Hole