


# Emerge



## OD275 Corner Workstation

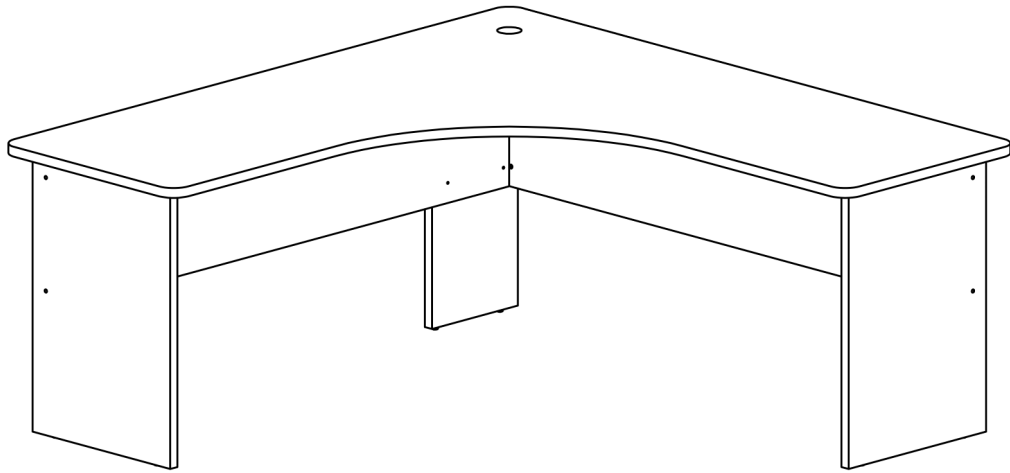

**Please follow these Assembly Instructions.**

This will save you time, make assembly easier and prevent possible damage to your new Workstation. Assistance may be required for some assembly procedures. Correct assembly is your responsibility.

We recommend that the unit is assembled on a soft surface such as carpet.

Please record your serial number in the space provided below and retain this manual for future reference.


Serial No



For warranty registration and information please go to  
[www.jasperj.co.nz](http://www.jasperj.co.nz)



# Unpack & Identify Parts

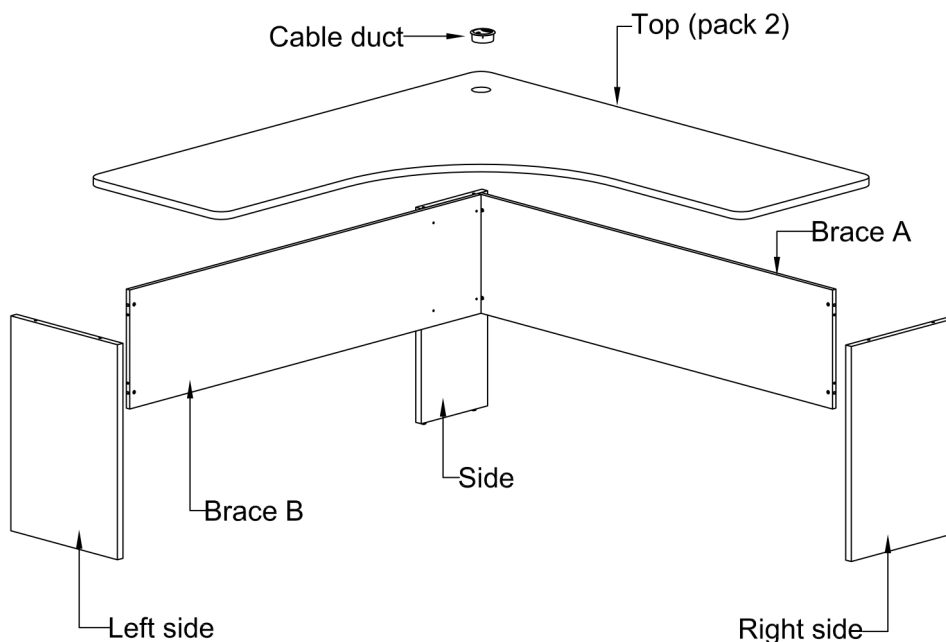

## OD275 carton contents

	<u>Part Description</u>	<u>Quantity</u>	<u>Part Number</u>
<u>OD2751 Pack 1</u>	Left side	1	IOD2751B701
	Right side	1	IOD2751B702
	Side	1	IOD2751B703
	Brace A	1	IOD2751B704
	Brace B	1	IOD2751B705
	Cable duct	1	IDG0035
	Hardware pack	1	IOD2751HPA0
<u>OD2752 Pack 2</u>	Top	1	IOD2752B706

## Customer Service

0800 450 314

To request spare parts, please provide the details in step one - six.



1. Model number of unit purchased
2. Proof of purchase
3. Description of missing part
4. Part number of missing part
5. Quantity of missing part
6. Serial number of the unit



Post request to.

OR

Scan and take photos  
of any damaged parts



JasperJ helpdesk  
P.O. Box 47130,  
Ponsonby  
Auckland 1144

customerservice@jasperj.co.nz




Before requesting spare parts, please ensure that you have checked your packaging and used the correct hardware at each step.



JASPER J

# Hardware contents: IOD2751HPA0

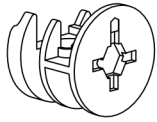


Connector Rods  
IDG0016 x 12




Connector Rods  
IDG0017 x 12




Dowel  
IDG0018 x 6



Cam cover Sticker  
IDG0034 x 12

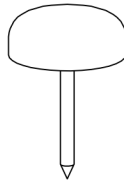


Pin Glide  
IDG0019 x 6





Screw  
IDG0020 x 4

## Step 1



x 6

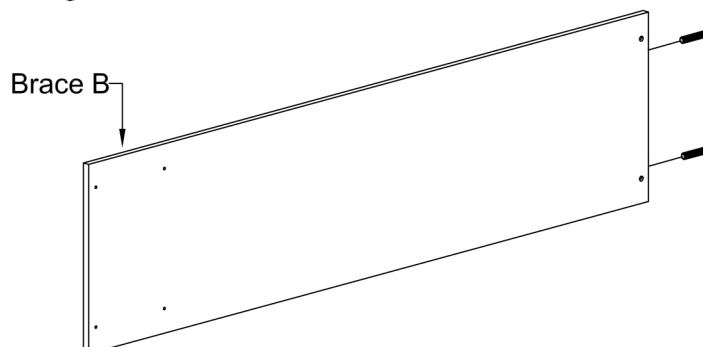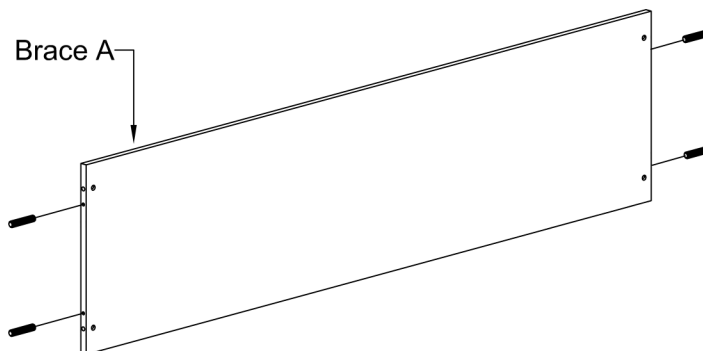


1. Press fit 6 dowels into braces as shown above.


## Step 2



x 12

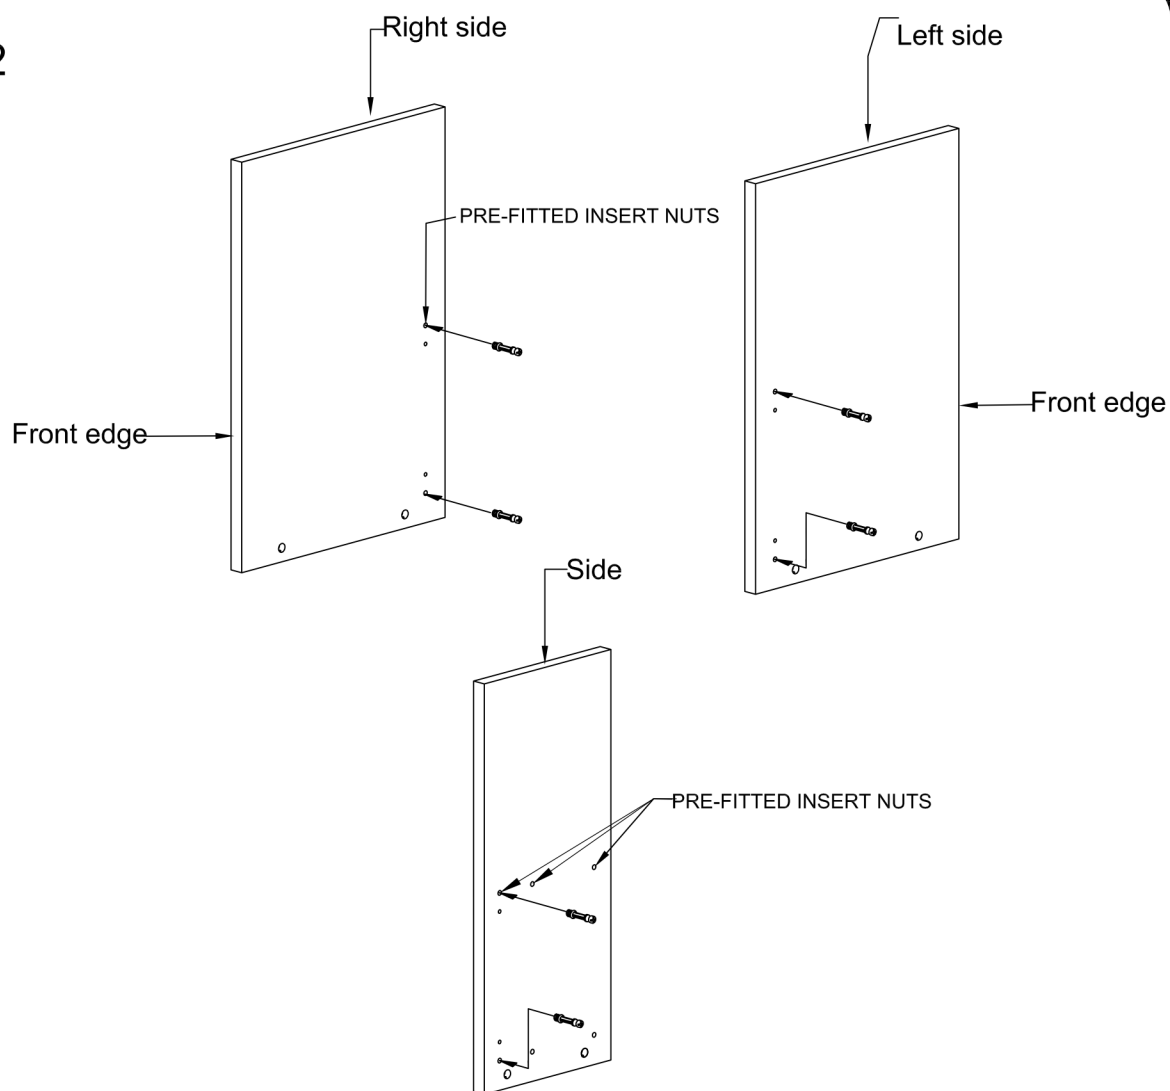


1. Screw 6 connector rods into pre-fitted insert nuts in sides where shown above.

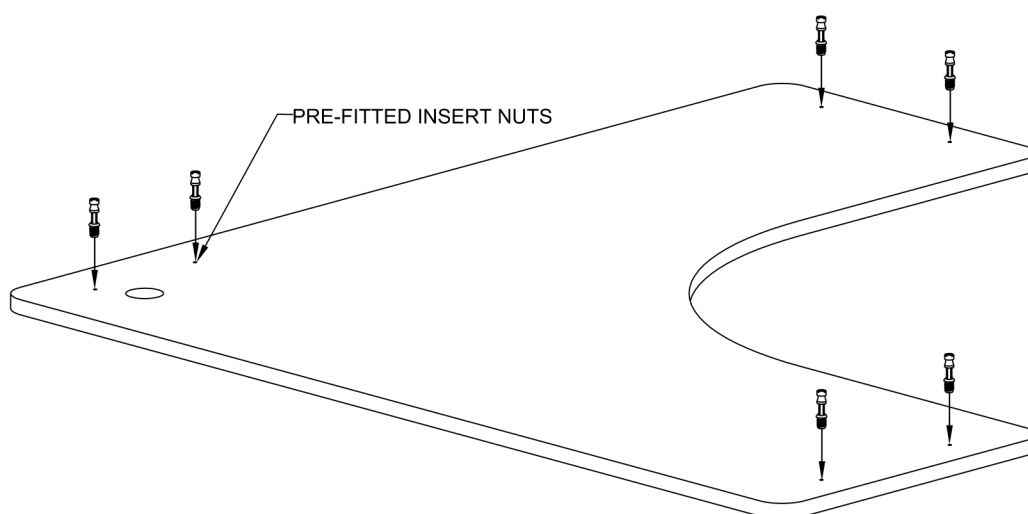


2. Screw 6 connector rods into pre-fitted insert nuts in holes in the top where shown above.

### Step 3


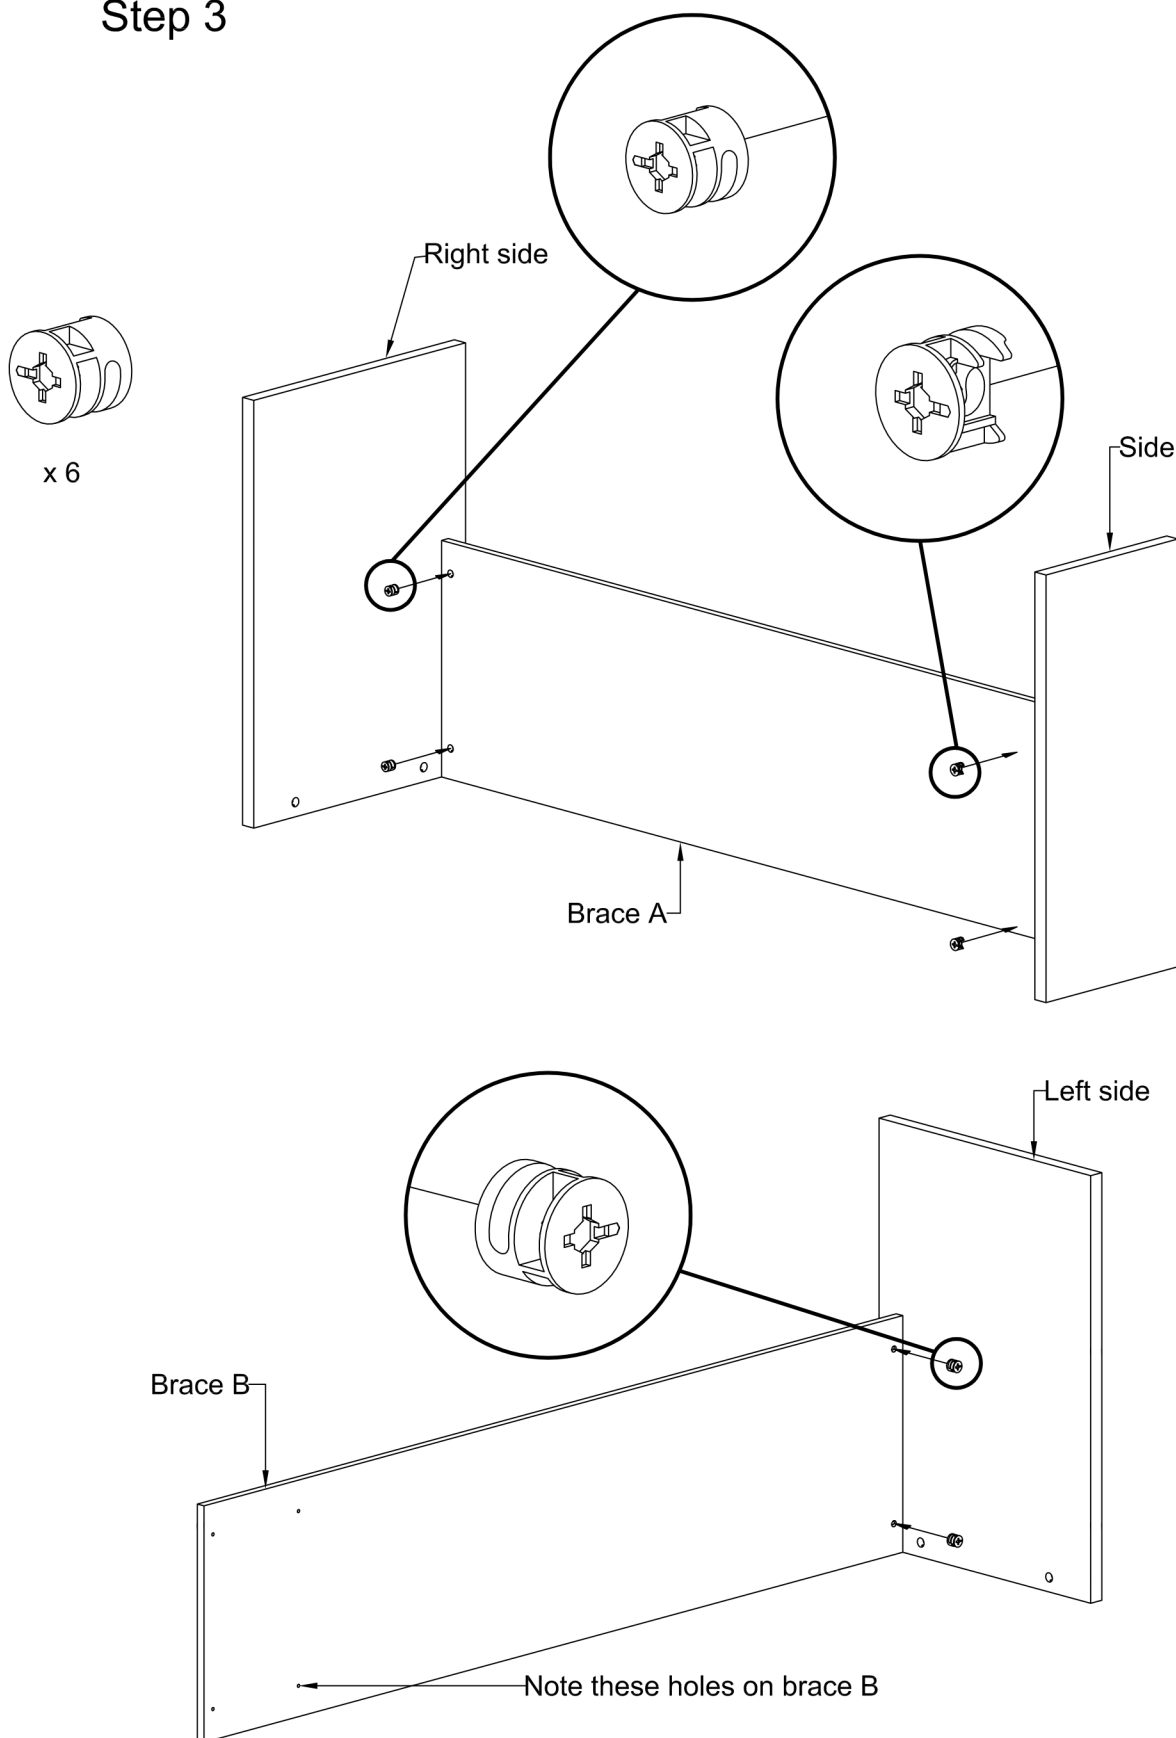


1. Press fit sides onto braces as shown above.
2. Insert 6 cams into large holes in braces then tighten cams by turning them clockwise.

## Step 4

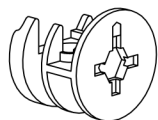

x 4

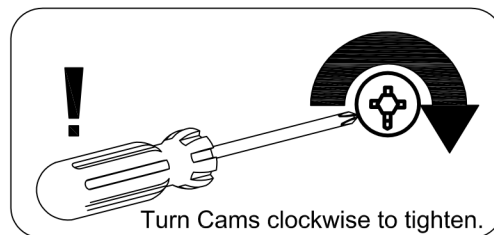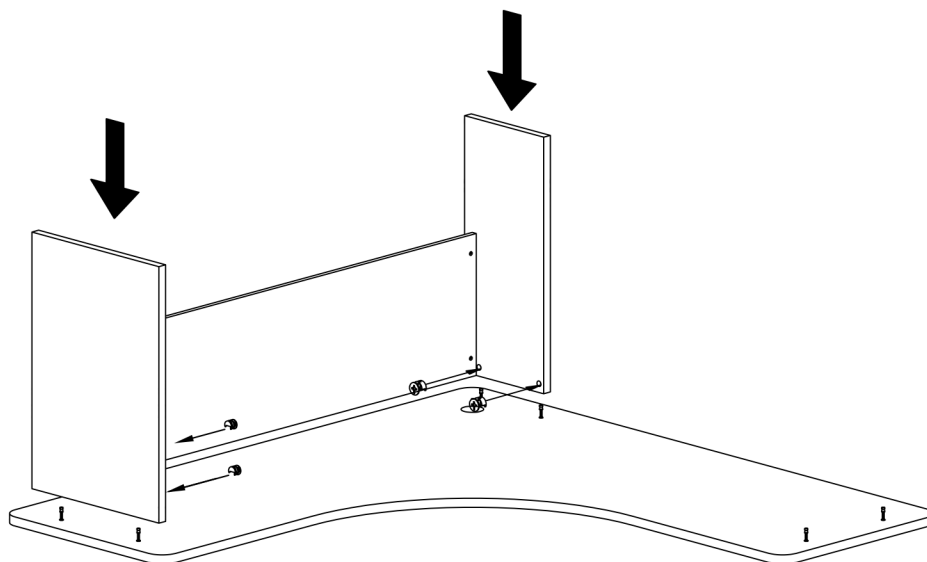


Turn Cams clockwise to tighten.

1. Press fit the right side, side and brace A assembly onto the large top as shown.
2. Insert 4 cams into side and right side as shown. Tighten the cams clockwise.




x 2

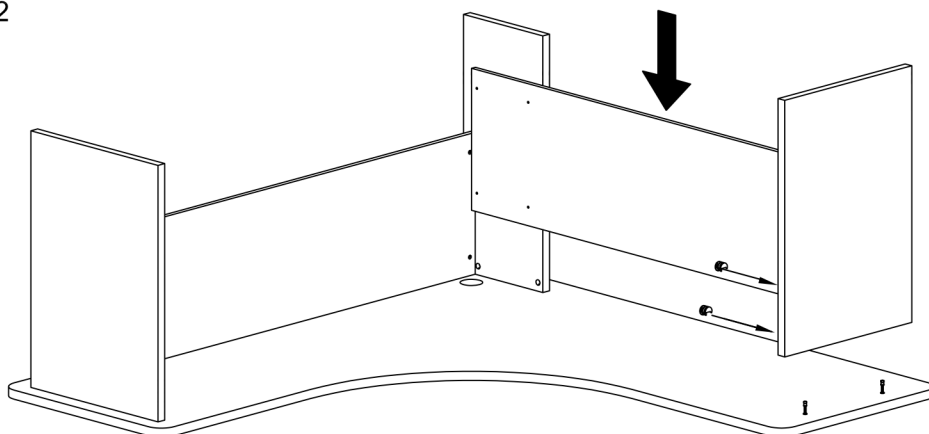


1. Insert 2 cams into left side as shown.
2. Press fit the left side and brace B assembly onto the small top as shown. Tighten the cams clockwise.

## Step 5

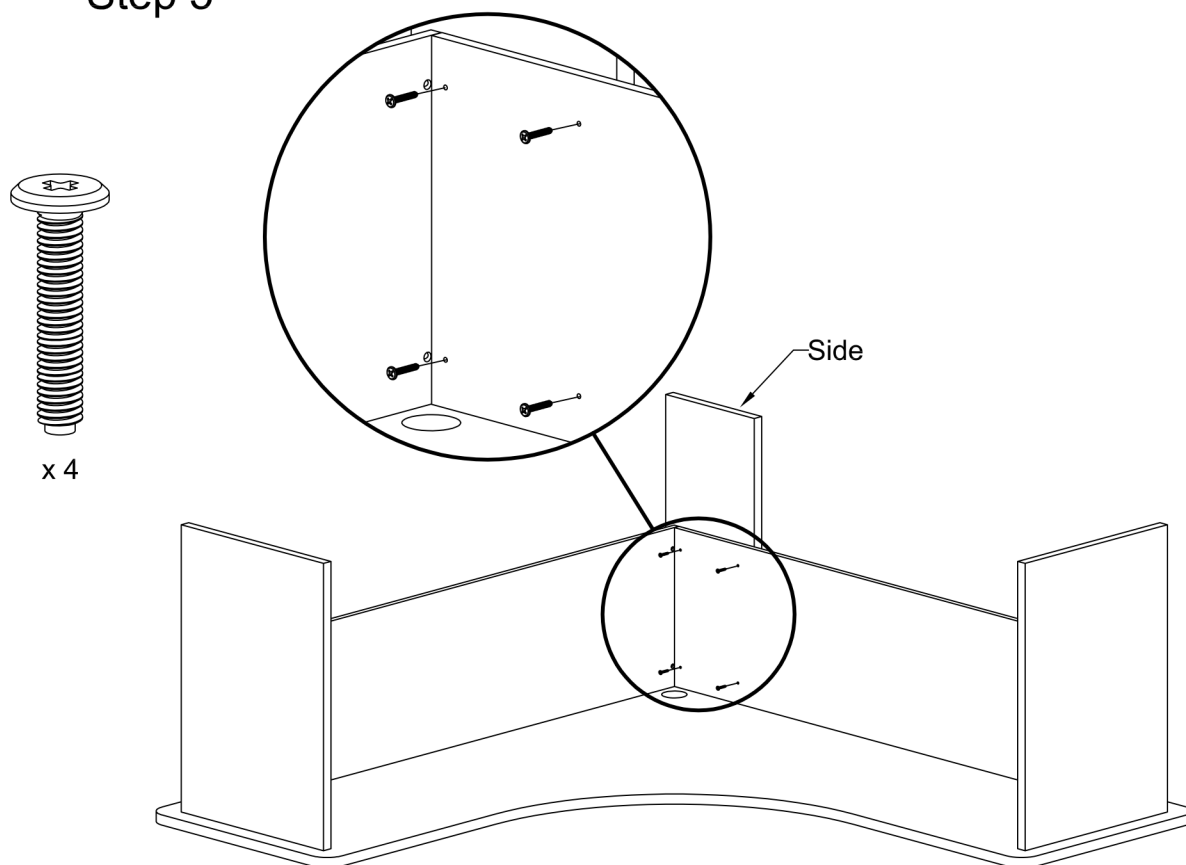


1. Fasten the brace B to the side using 4 bolts as shown. Note there are pre-fitted insert nuts on the side panel for the bolts.

## Step 6

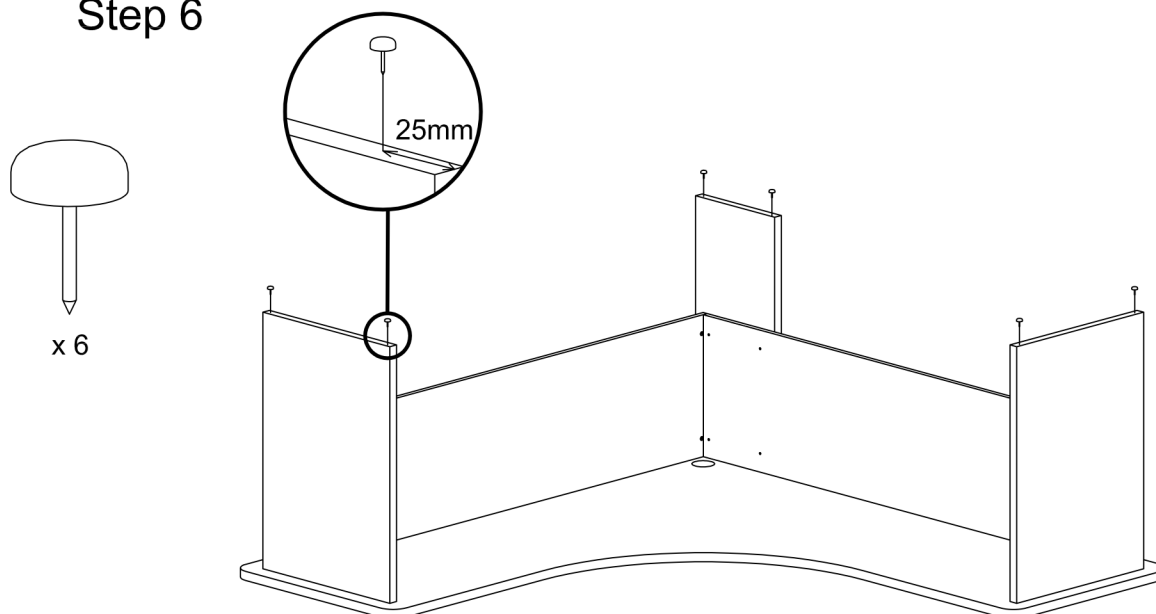


1. Press fit pin glides into the bottom edge of the left side, right side and side as shown.

## Step 7

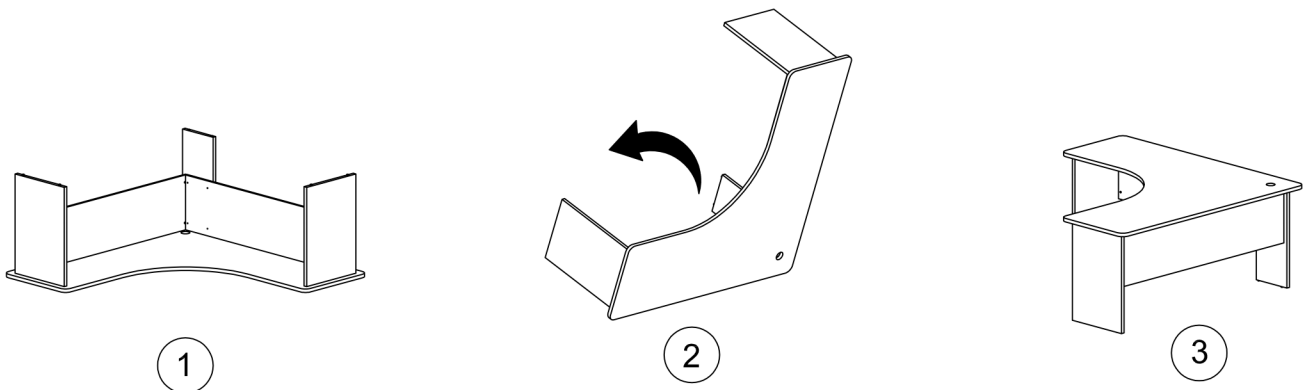


1. Use the above guide to turn the desk on its feet.

## Step 8



x 12

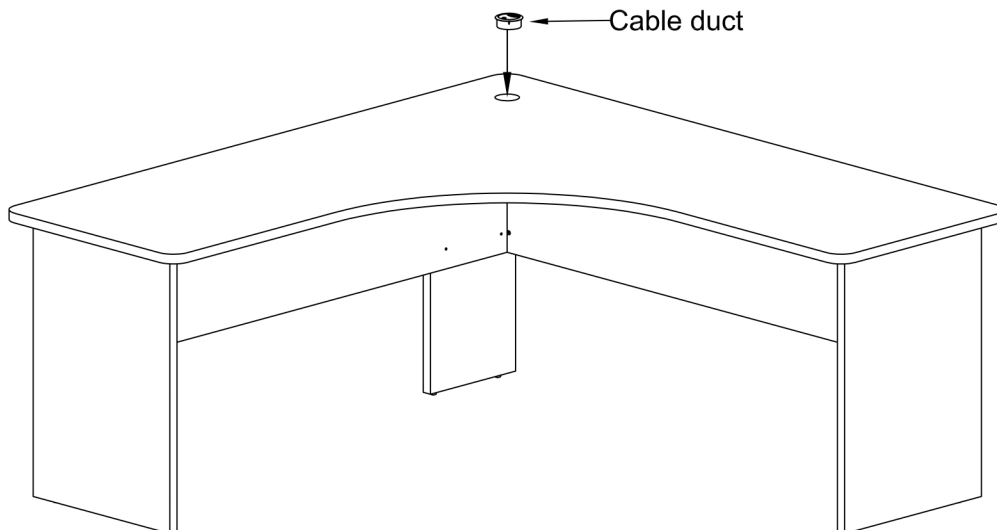

1. Press fit a cable duct into the large hole in the large top as shown above.
  2. Cover cams with the cam cover stickers.
- The assembly of your new desk is completed.

**CAUTION:** We recommend that all contents stored in or on this item of furniture be removed before shifting it. The Manufacturer will not be held liable for damage caused when furniture is shifted without first removing its contents. If furniture is shifted we recommend that it is lifted not dragged.