

## OT215

### Round Table - 1200



**Please follow these Assembly Instructions.**

This will save you time, make assembly easier and prevent possible damage to your new Table.  
Assistance may be required for some assembly procedures.  
Correct assembly is your responsibility.

Please record your serial number in the space provided below and retain this manual for future reference.

Serial No


We recommend that the unit is assembled on a soft surface such as carpet.



For warranty registration and information please go to  
[www.jasperj.co.nz](http://www.jasperj.co.nz)




# Unpack & Identify Parts

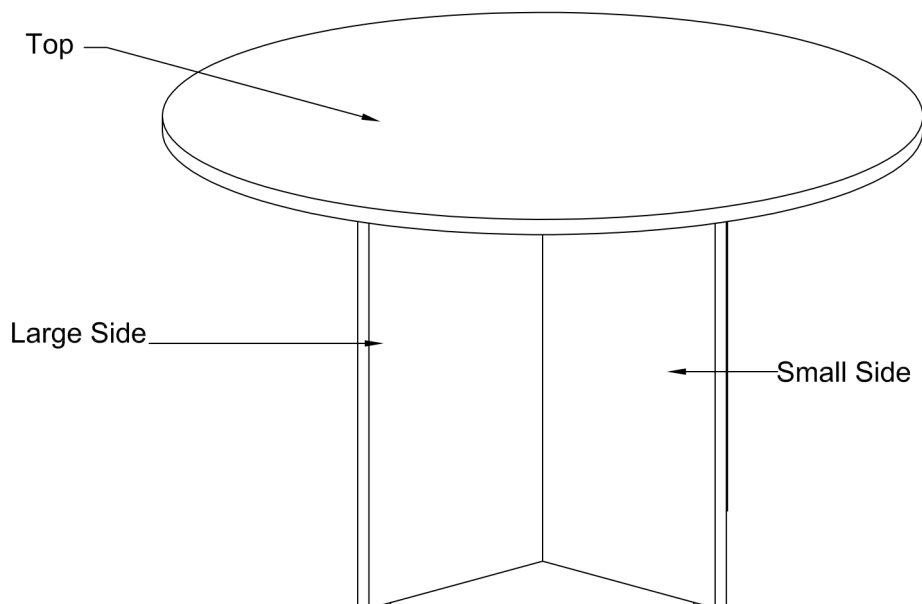


## OT2150 carton contents

<u>Part Description</u>	<u>Quantity</u>	<u>Part Number</u>
Top	1	IOT2150B701
Small Side	2	IOT2150B702
Large Side	1	IOT2150B703
Hardware Pack	1	IOT2150HPA0

## Hardware contents: IOT2150HPA0




Connector Rods  
IDG0017 x 8

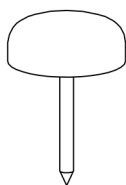

Pin Glide  
IDG0019 x 4



Dowel  
IDG0018 x 4

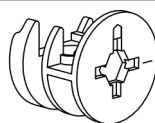


Connector Rods  
IDG0016 x 8



Cam cover Sticker  
IDG0034 x 8

## Tool required



Phillips No.2 Screwdriver or a  
Phillips No.2 pozi drive

## Customer Service

0800 450 314

To request spare parts, please provide the details in step one - six.

1. Model number of unit purchased
2. Proof of purchase
3. Description of missing part
4. Part number of missing part
5. Quantity of missing part
6. Serial number of the unit



Post request to.

OR

Scan and take photos  
of any damaged parts



JasperJ helpdesk  
P.O. Box 47130,  
Ponsonby  
Auckland 1144

customerservice@jasperj.co.nz




Before requesting spare parts, please ensure that you have checked  
your packaging and used the correct hardware at each step.




JASPER J

## Step 1



x 4

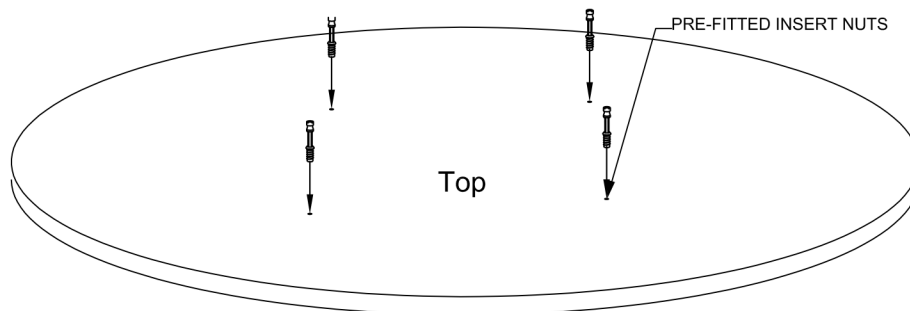

1.Screw 4 connector rods into insert nuts in the top as shown.


## Step 2



x 4






x 4

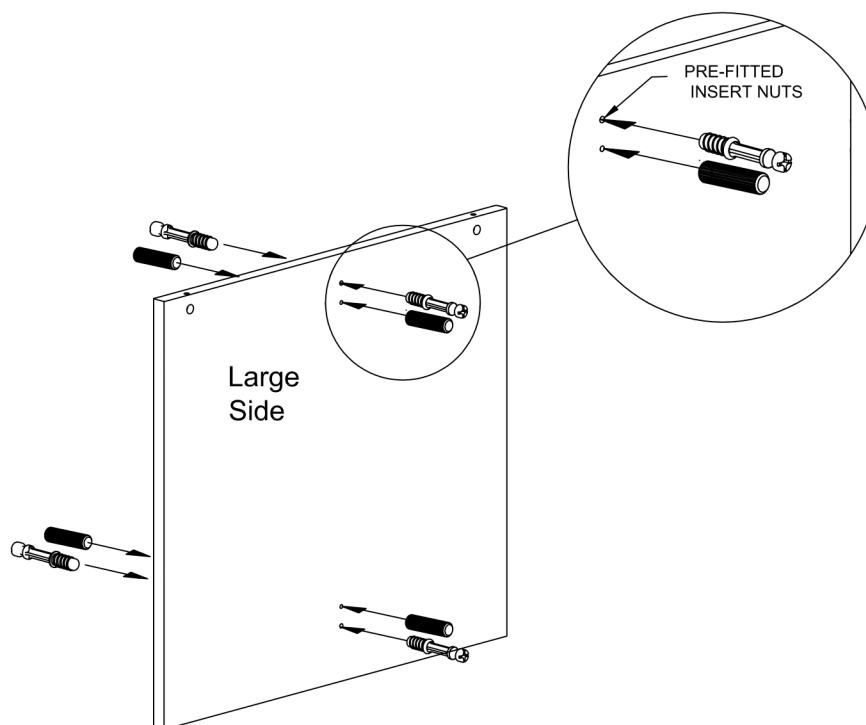


- 1.Screw 4 connector rods into the insert nuts on both sides of the large side.
- 2.Insert 4 dowels on both sides of large side.

### Step 3

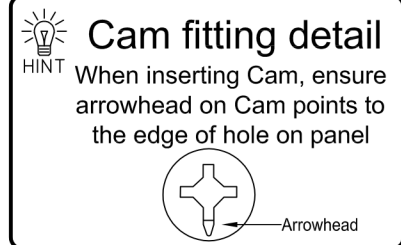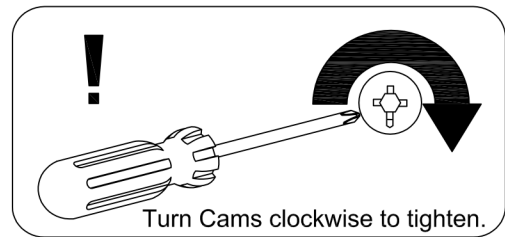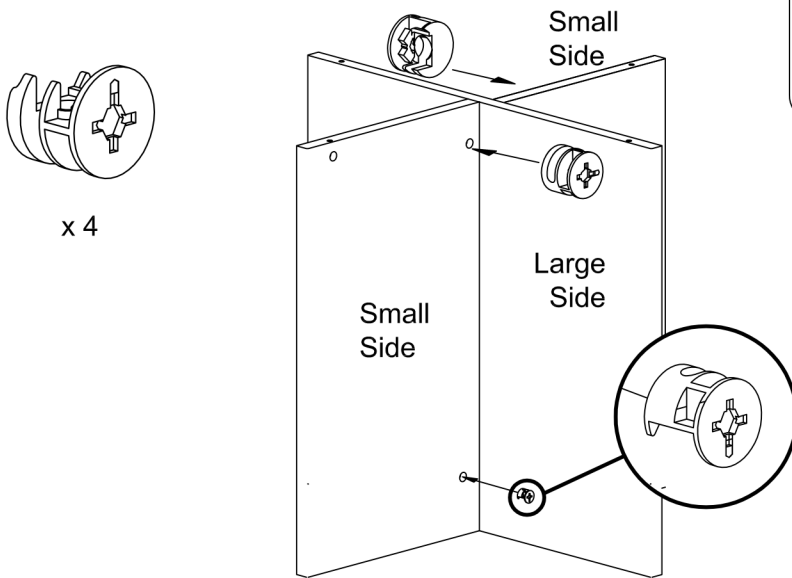

1. Press fit 2 small sides to large side.
2. Insert 4 cams into large holes in small sides then tighten clock wise.

### Step 4

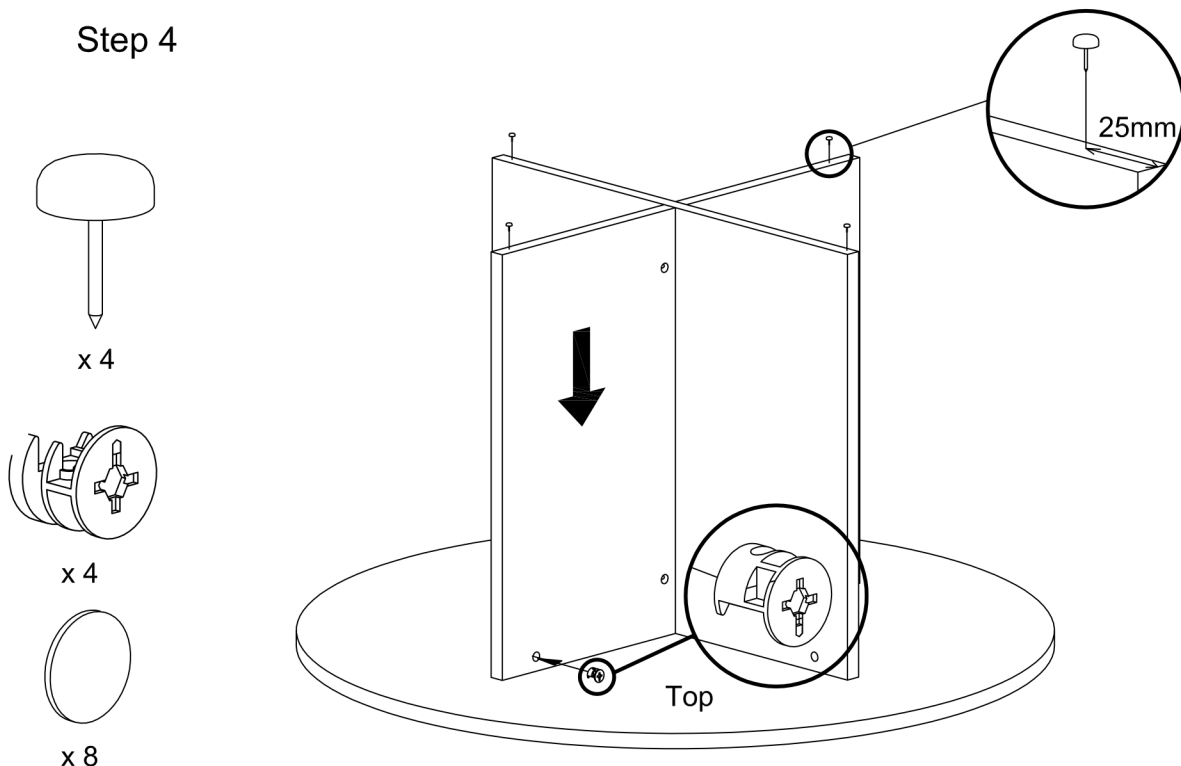

1. Carefully fit base assembly to underside of Top.
2. Insert 4 Cams into large holes in each side, then tighten cams by turning them clockwise.
3. Press fit 4 Pin Glides into bottom edges of sides in positions shown.
4. Cover cams with cam cover stickers.

**CAUTION:** We recommend that all contents stored in or on this item of furniture be removed before shifting it. The Manufacturer will not be held liable for damage caused when furniture is shifted without first removing its contents. If the furniture is shifted we recommend that it is lifted not dragged.