



ASSEMBLY INSTRUCTION
SAM DESK
WHITE / WHITE & WHITE / BLUE

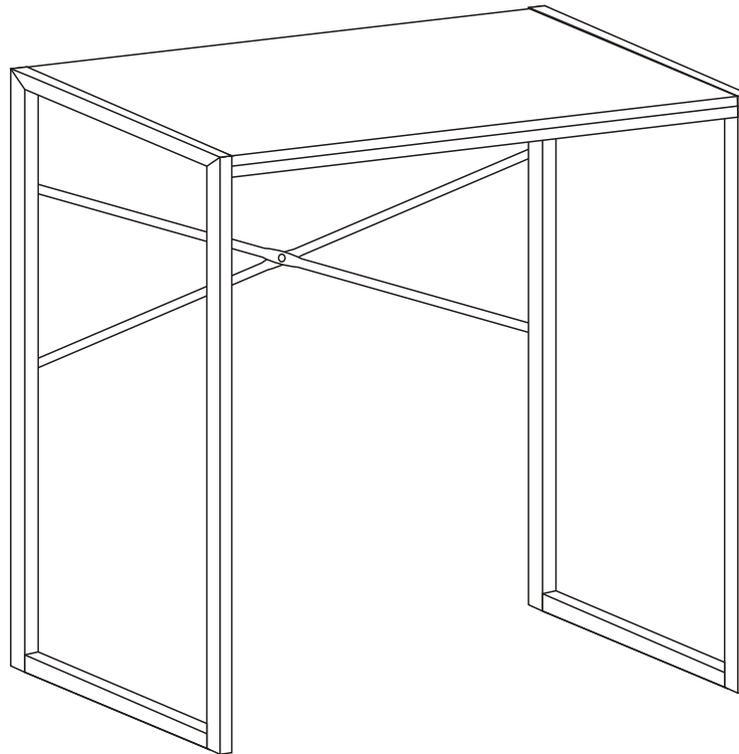


Imporaant

Estimated Assemble Time: 15min

Tools Required For Assembly

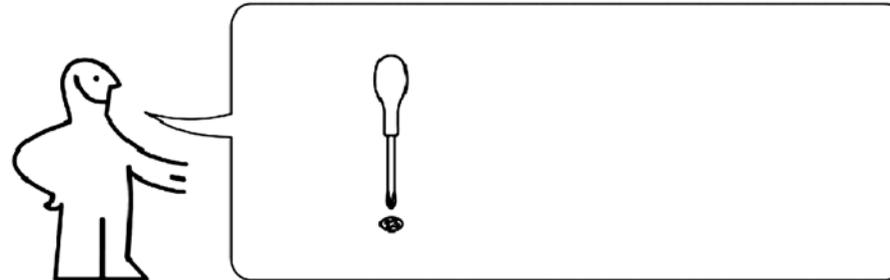

Assemble Item On A Clean Flat Surface

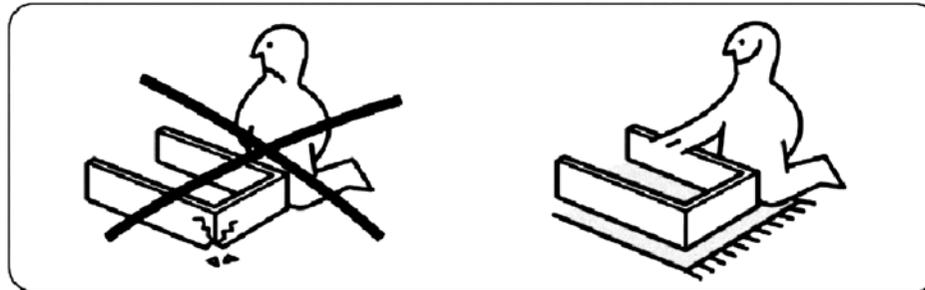


Please check you have all hardware before assembling.

If you are missing any hardware from the hardware list please email our customer service at
MAIL: customerservice@jasperj.co.nz


Please ensure you have the name of item, store purchase from, hardware part required and quantity .
Please retain your receipt for proof of purchase to validate warranty. Enjoy your new purchase.

Panel List

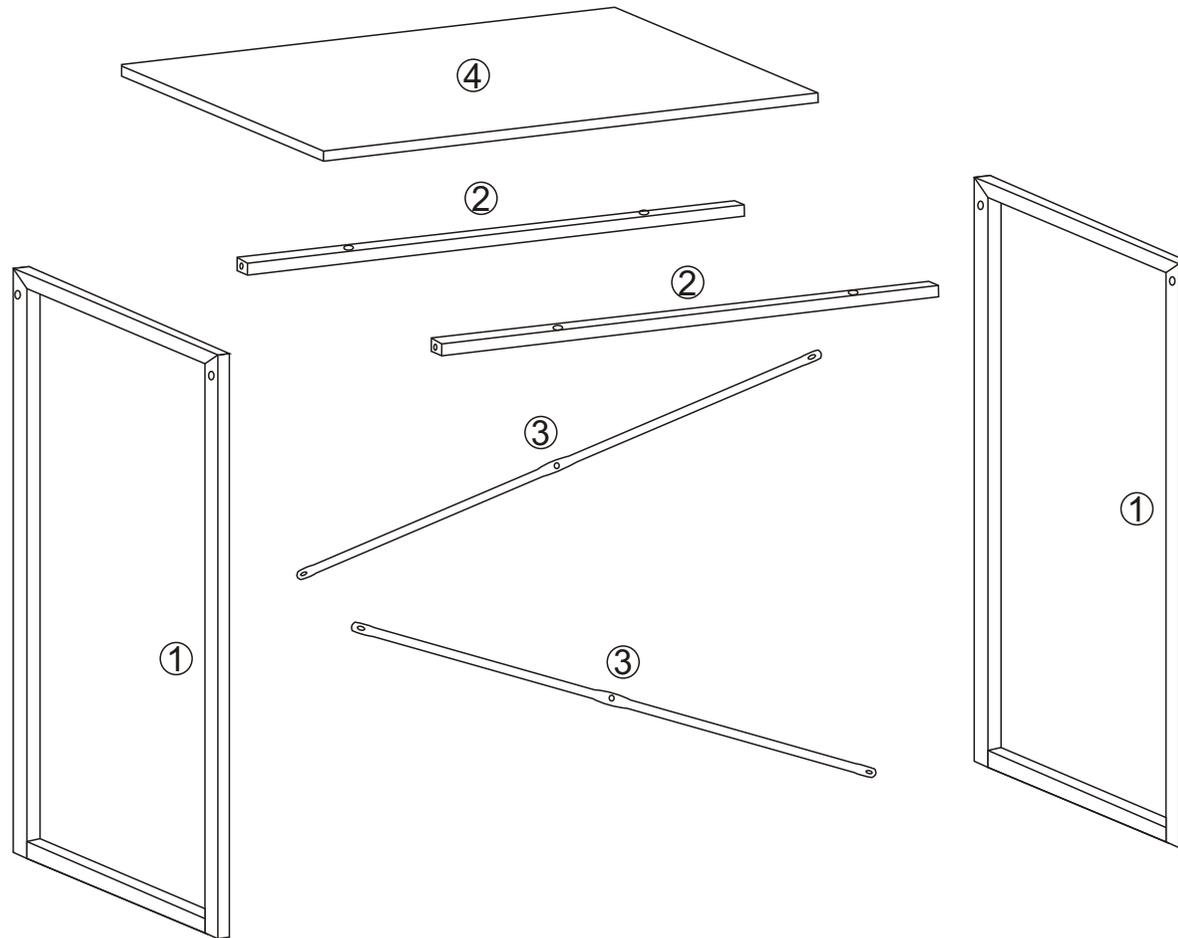

Hardware List

A



M6X30mm
4pcs

B




M4X12mm
5pcs

C




M4mm
1pc

D






M6x40mm
4pcs


Step 1

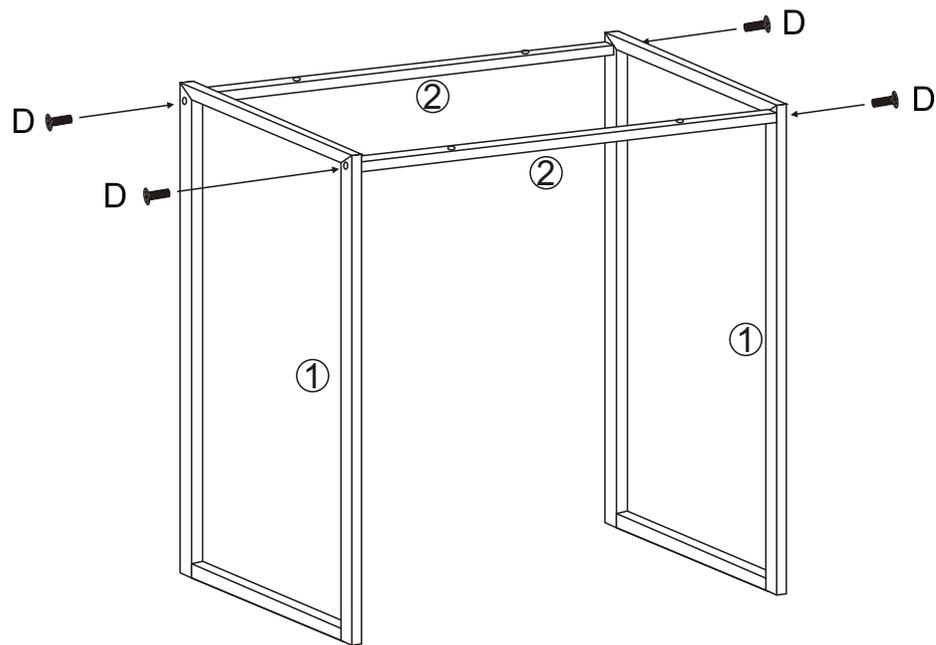

Step 2

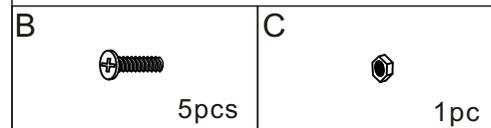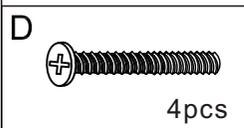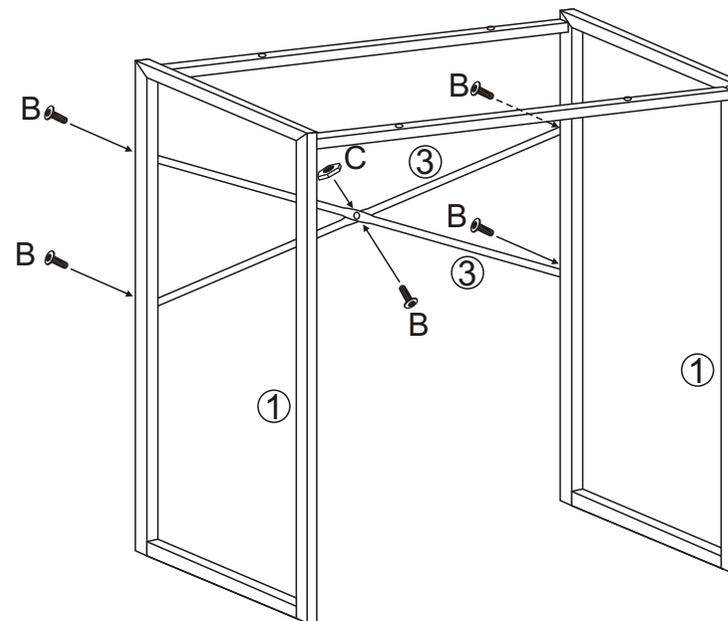

Step 3

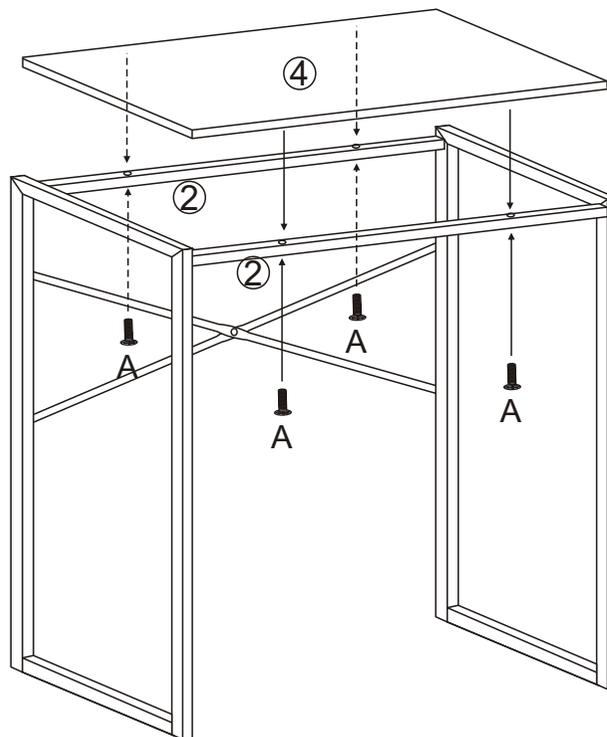

A



4pcs

