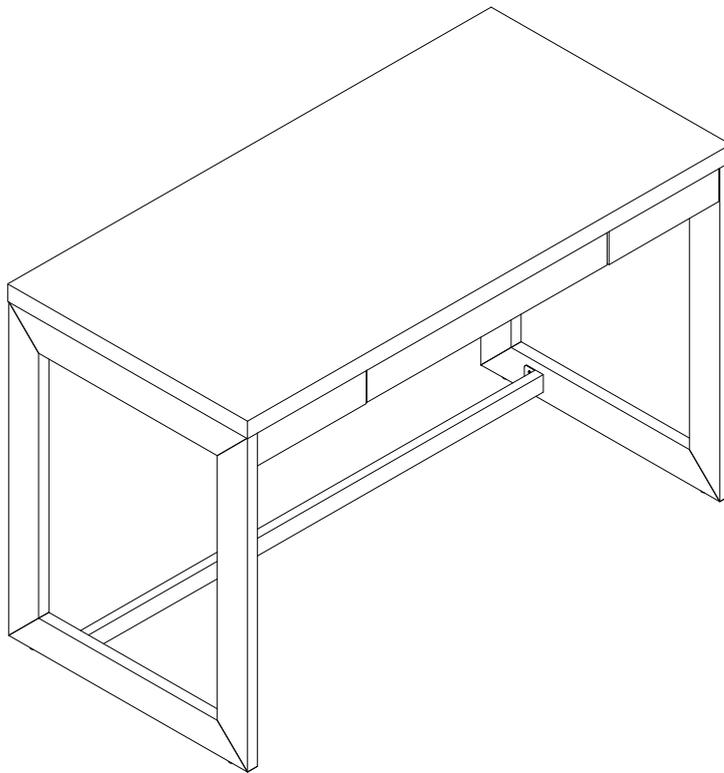


# ASSEMBLE INSTRUCTIONS

## WHISTLER DESK

---



### **Important:**

**Please check you have all hardware before assembling.**

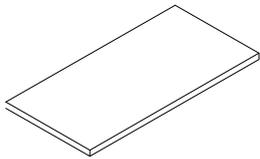


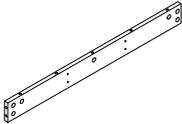
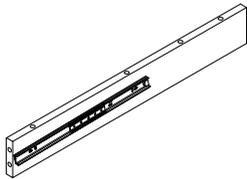
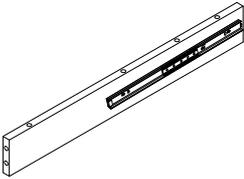


**If you are missing any hardware from the hardware list please email our customer service at**

**MAIL:customerservice@jasperj.co.nz**





**Please ensure you have the name of item, store purchase from, hardware part required and quantity.**

**Please retain your receipt for proof of purchase to validate warranty. Enjoy your new purchase.**

## PARTS IDENTIFICATION

1		Desk top	1 PC
2		Left side frame	1 PC
3		Right side frame	1 PC
4		Back apron	1 PC
5		Inner left panel	1 PC
6		Inner right panel	1 PC
7		Left front apron	1 PC
8		Right front apron	1 PC

## PARTS IDENTIFICATION

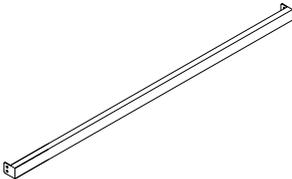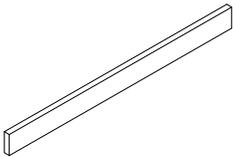
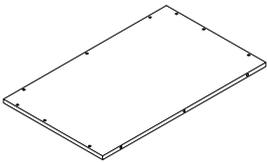
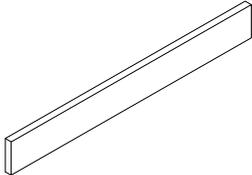
9		Back metal bar	1 PC
10		Drawer back	1 PC
11R		Drawer left side	1 PC
12R		Drawer right side	1 PC
13R		Drawer Bottom	1 PC
14		Drawer Front	1 PC


## HARDWARE IDENTIFICATION

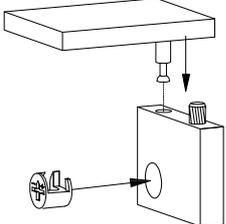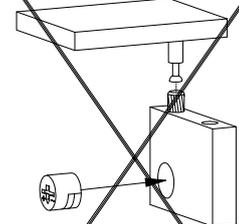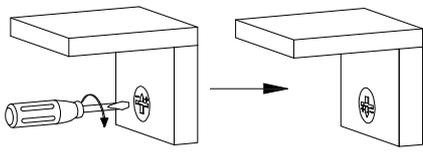A		Machine screw ( Dia. 6 x 30mm L)	10 PCS
B		Large cam lock	30 PCS
C		Large cam screw (35mm)	22 PCS
D		Small cam screw	4 PCS
E		Small cam screw (33mm)	4 PCS
F		Machine cam screw (32mm)	8 PCS
G		Wood dowel ( Dia. 6 x 30mm L)	4 PCS
H		Wood dowel ( Dia. 8 x 30mm L)	9 PCS
I		Plastic cover	2 PCS
J		Wood screw ( 10 x 38mmL )	8 PCS


# STEP 1

## Cam Lock/Dowel Placement Supplement


<p><b>CORRECT 1</b></p>  <p>When inserting the Cam Lock, make sure that the Open End of the Cam Lock faces the Cam Screw Entry. The Dowel will be inserted in the hole NEXT to the Cam Lock/Cam Screw Hole.</p>	<p><b>INCORRECT 2</b></p>  <p>The Cam Lock is backwards in this illustration. The Cam Screw can not connect to the Cam Lock because the Dowel is in the incorrect hole.</p>	<p><b>3</b></p>  <p>To tighten, turn the Cam Lock <b>CLOCKWISE</b> until the arrow or "+" &amp; "-" signs point <b>AWAY</b> from the connected Panel.</p> <p><b>*NOTE: DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS, DO NOT OVER-TIGHTEN.</b></p>
--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

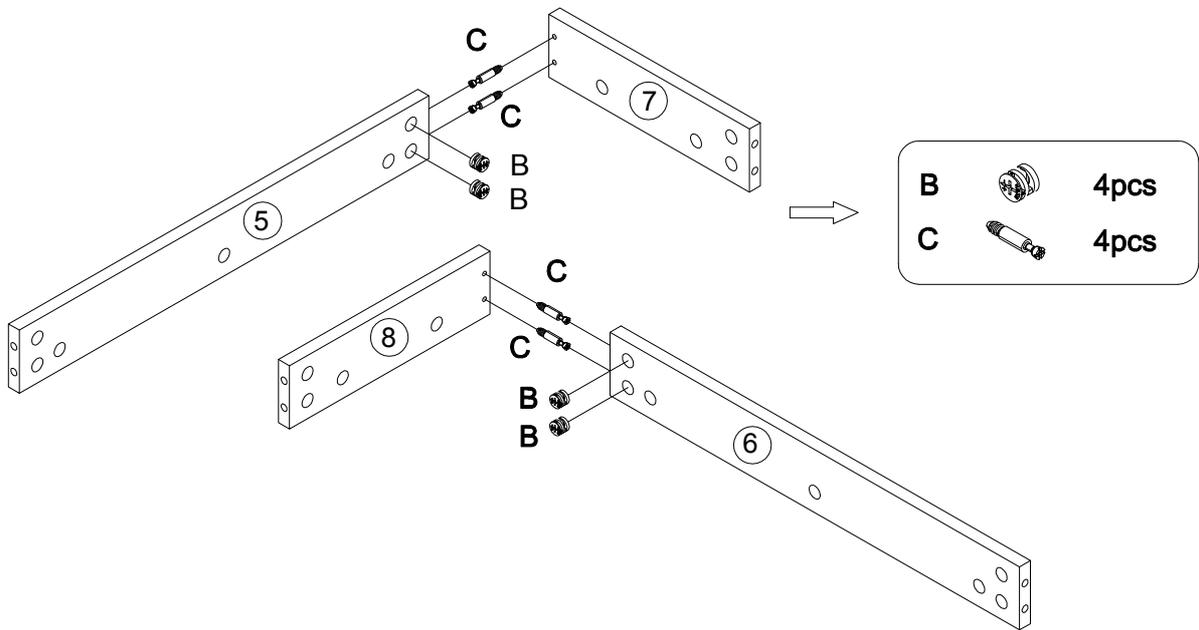


## STEP 2

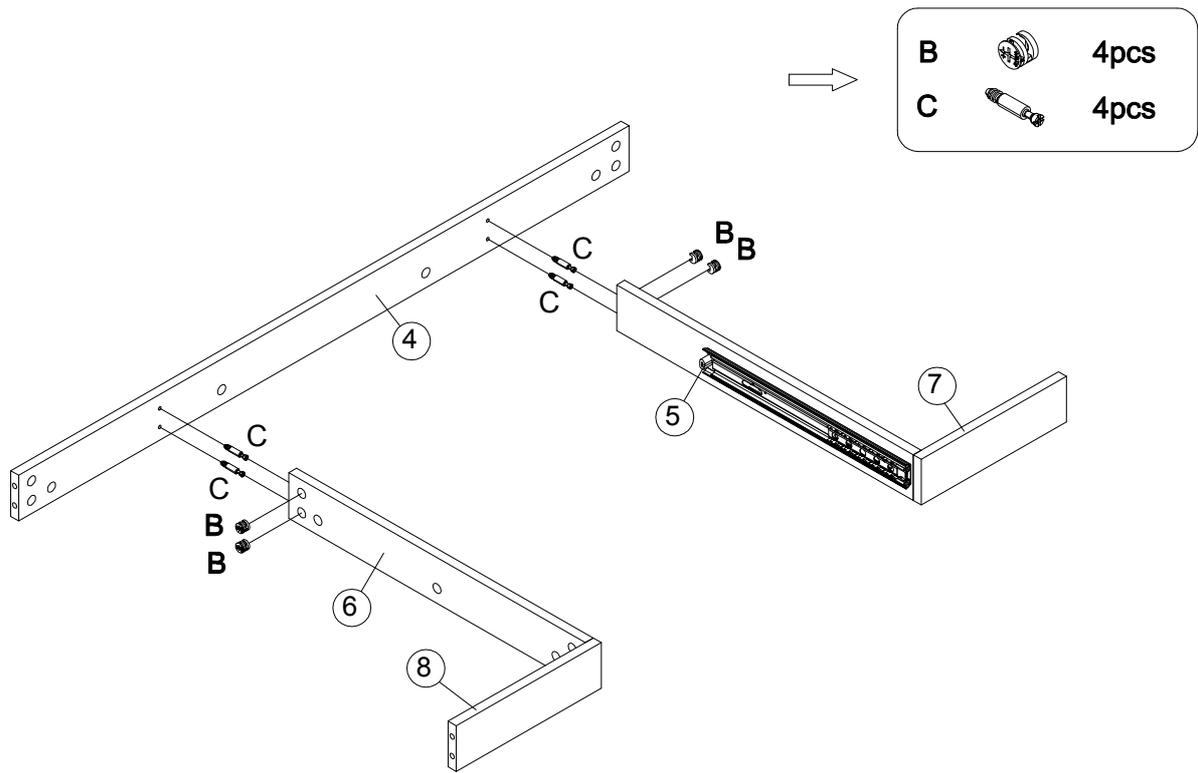


## STEP 3

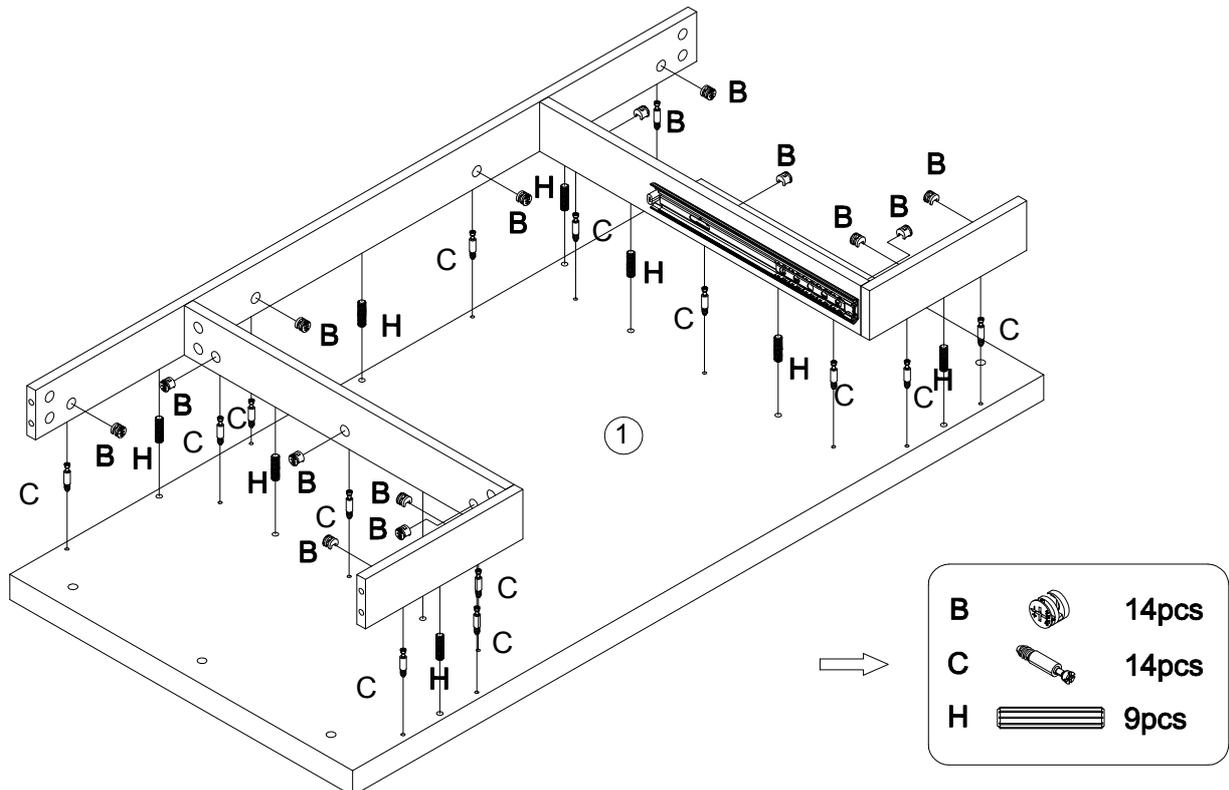


# STEP 4

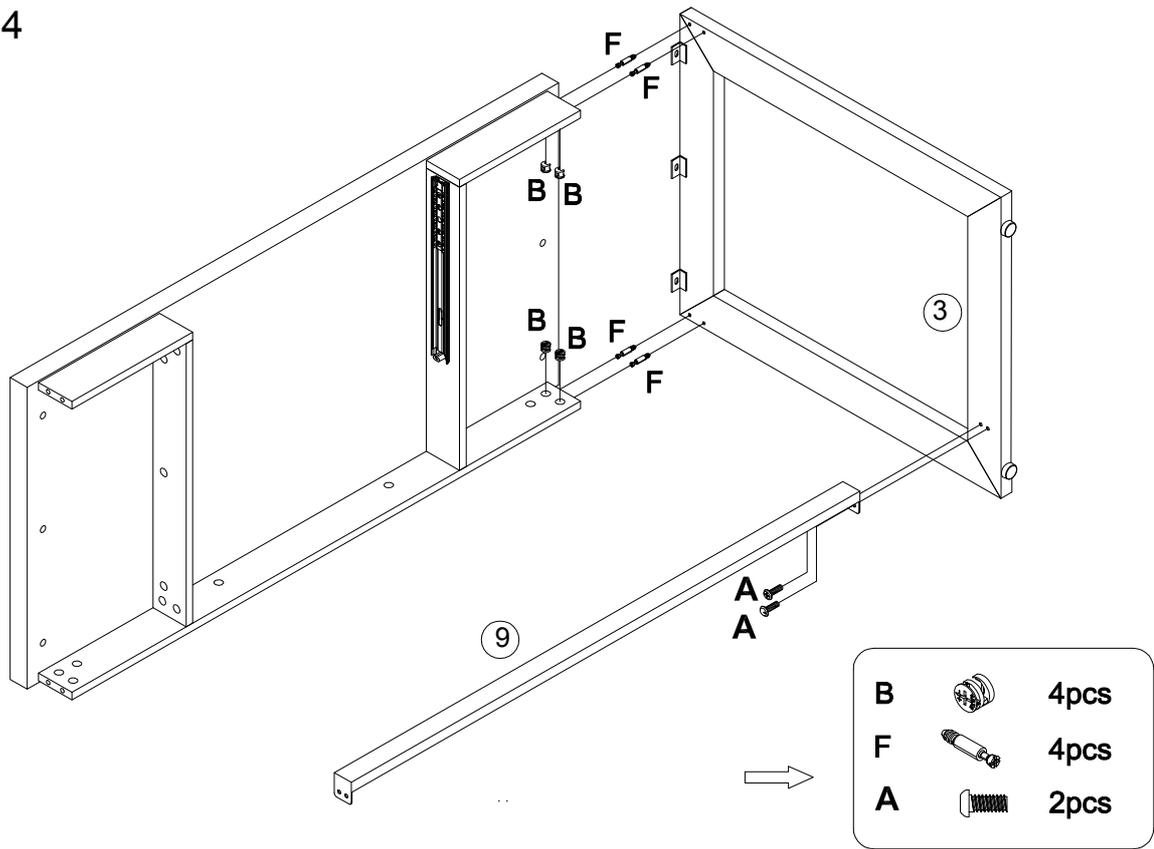


# STEP 5

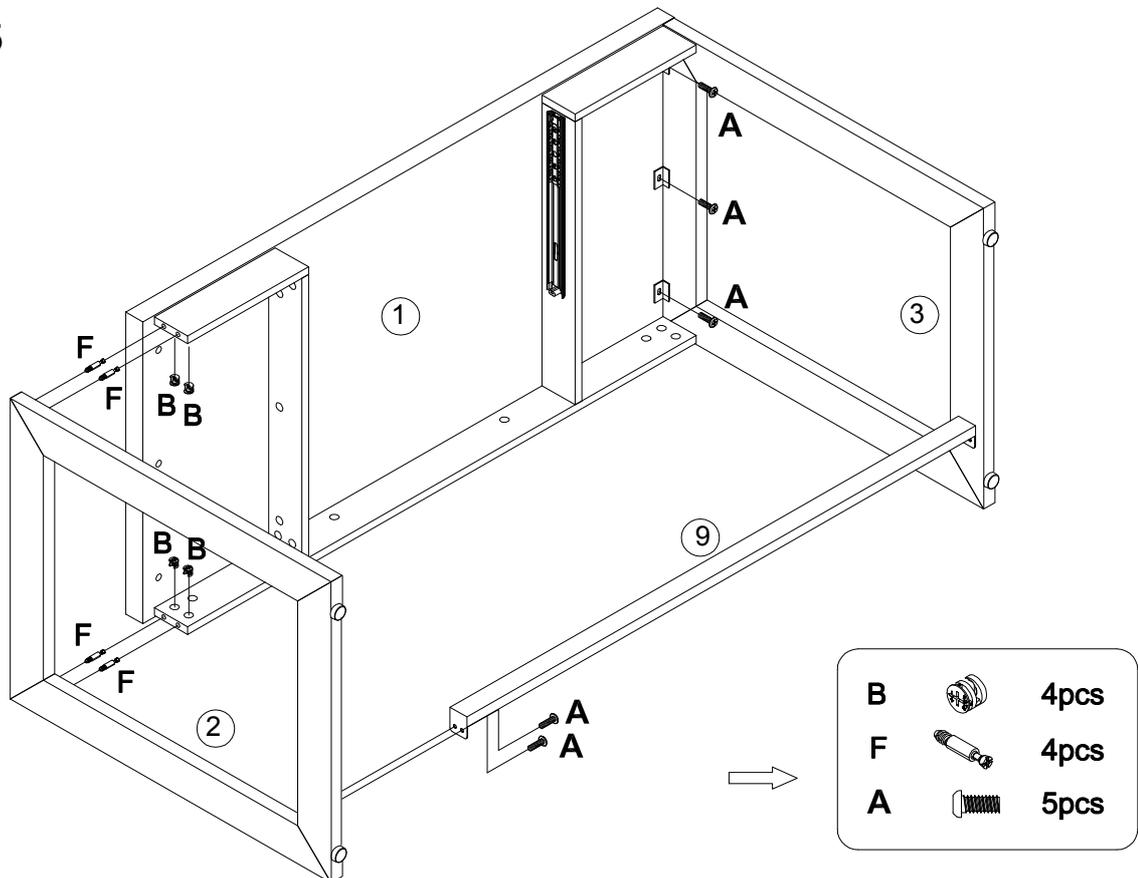


# STEP 6

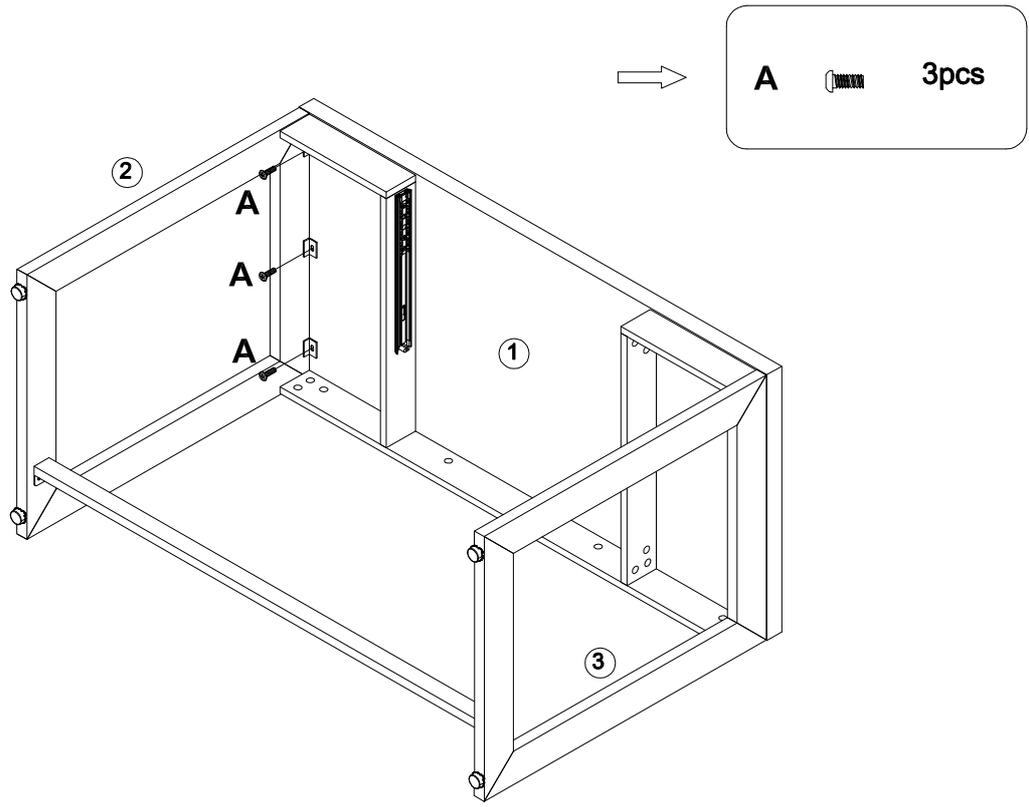

# STEP 7

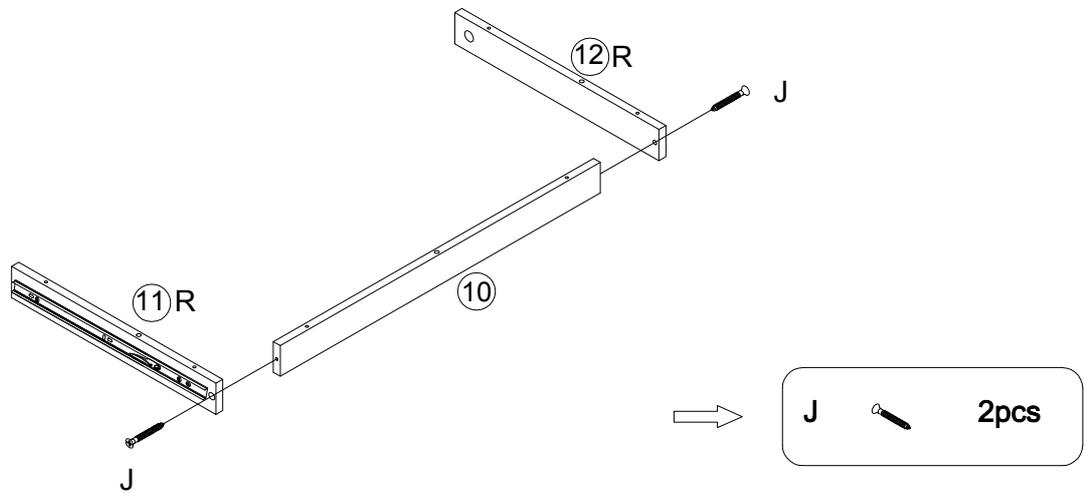


# STEP 8

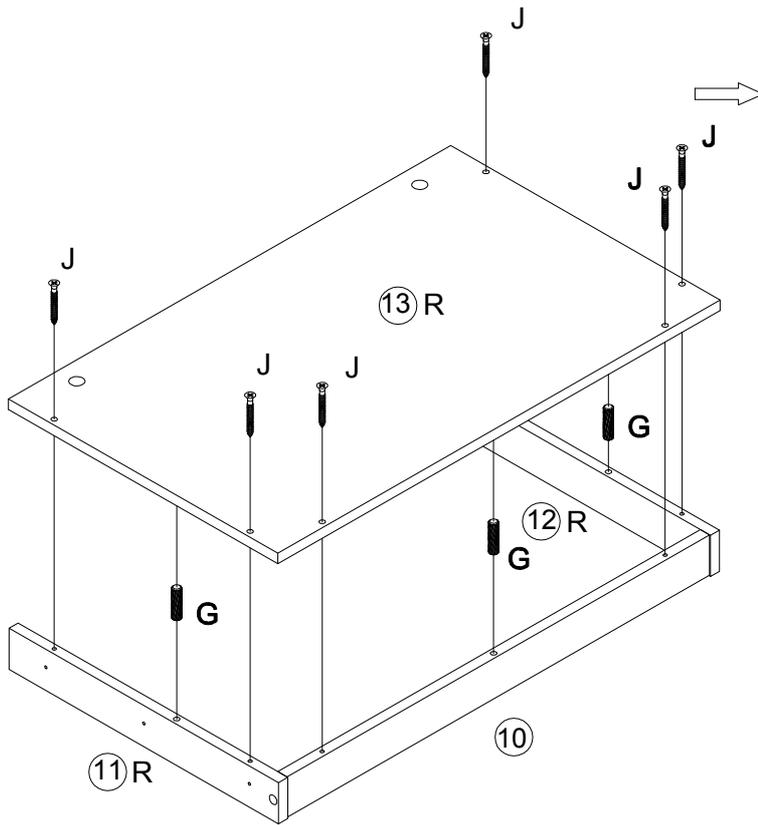


J		6pcs
G		3pcs

# STEP 9

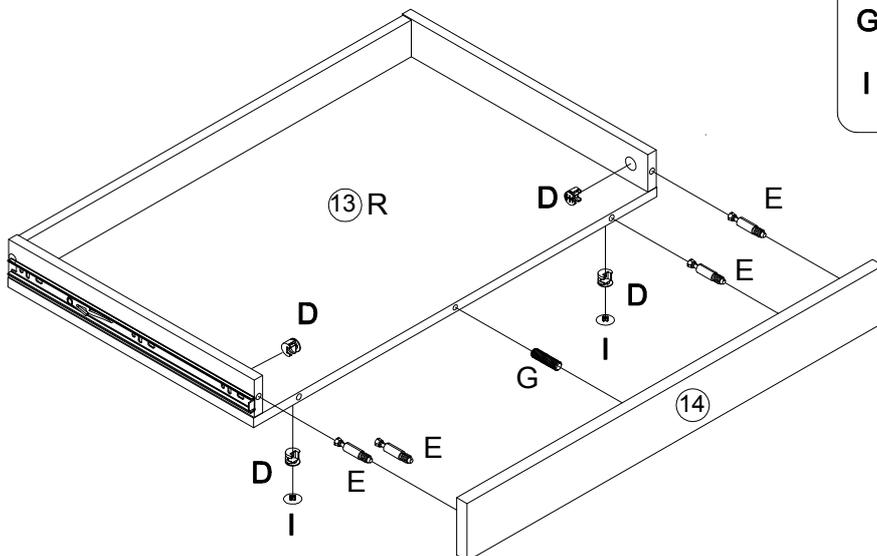

D		4pcs
E		4pcs
G		1pcs
I		2pcs

# STEP 10

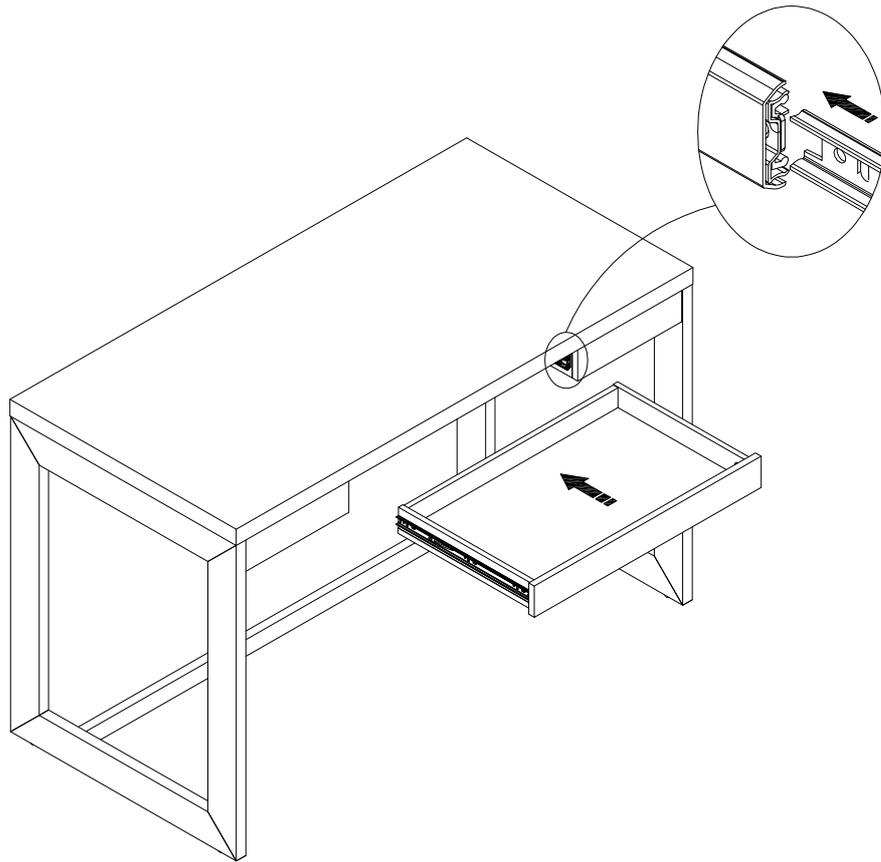

## Maximum Load Capacity

Product overall size : 1200 x 595 x 760mmH

