

# ***Ergoplan*** ***Bow-Front Desk***

## **Assembly Instructions**







---

**Tools Required:** Powered screwdriver.




## Assembly Instructions

- To prevent possible scratches or damage, assemble the desk upside down on a soft surface such as a blanket, carpet or packaging.
- Attach Leg to the top assembly by using bolts, spring washer, flat washer. Tighten using the allen wrench.

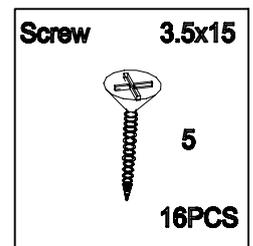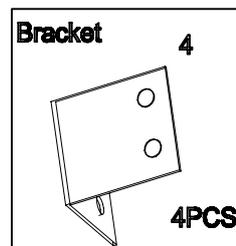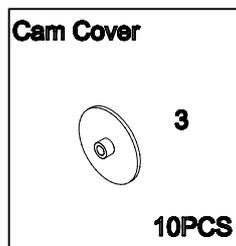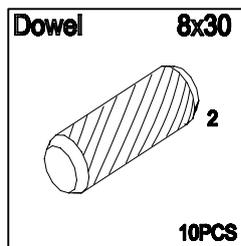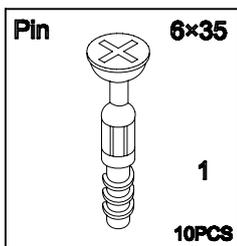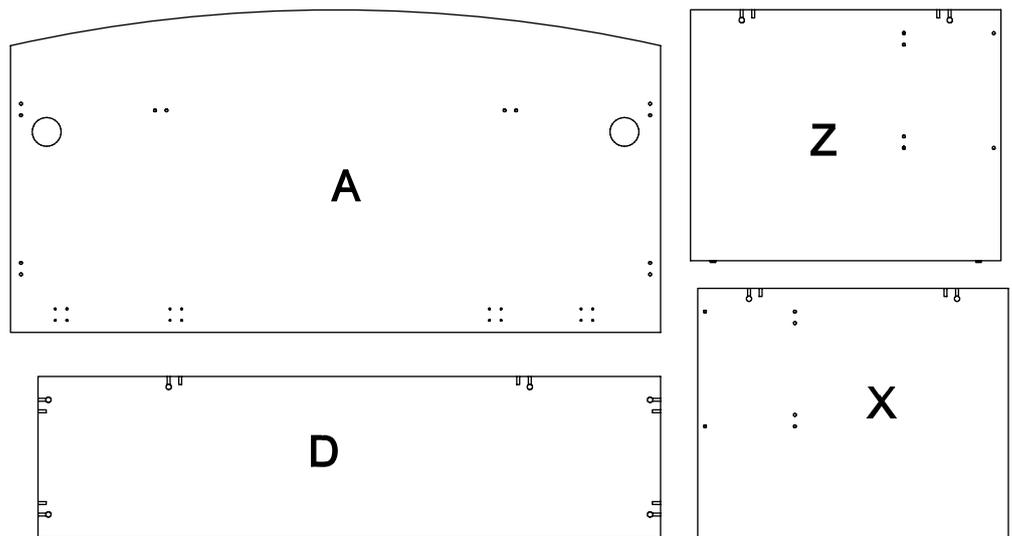


## Assembly Instructions


### Step 1

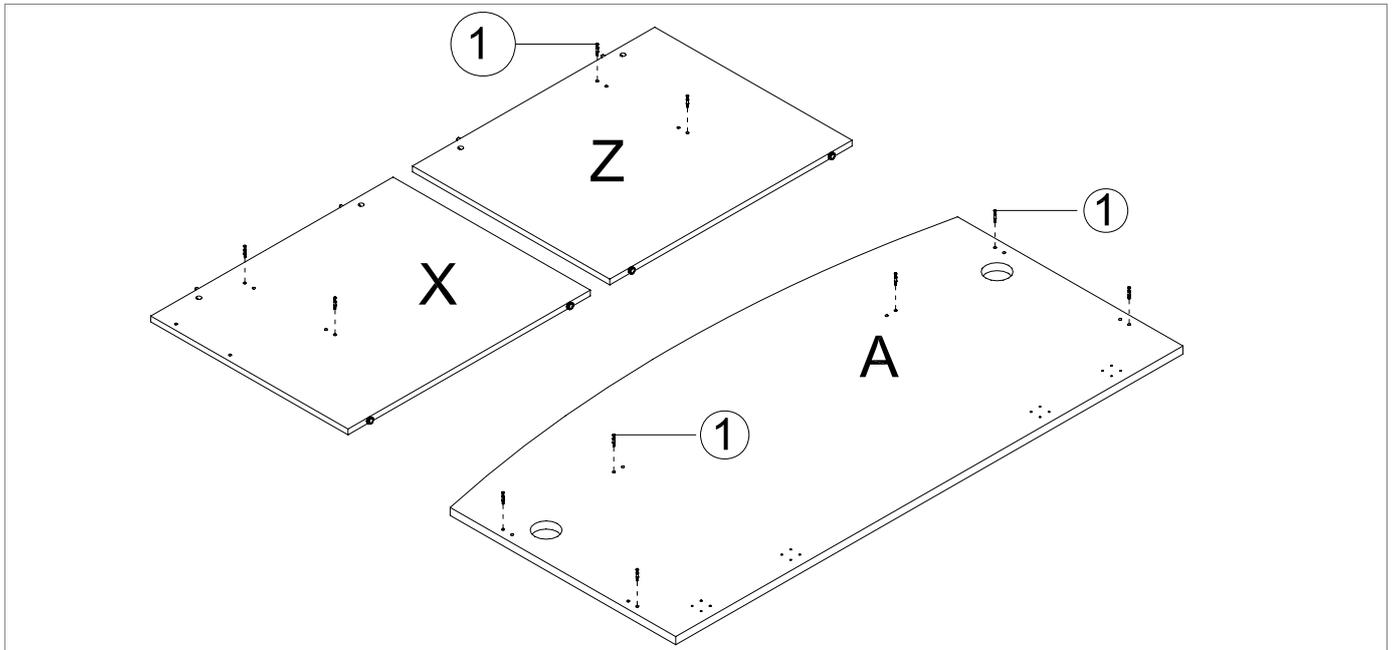

### Step 2

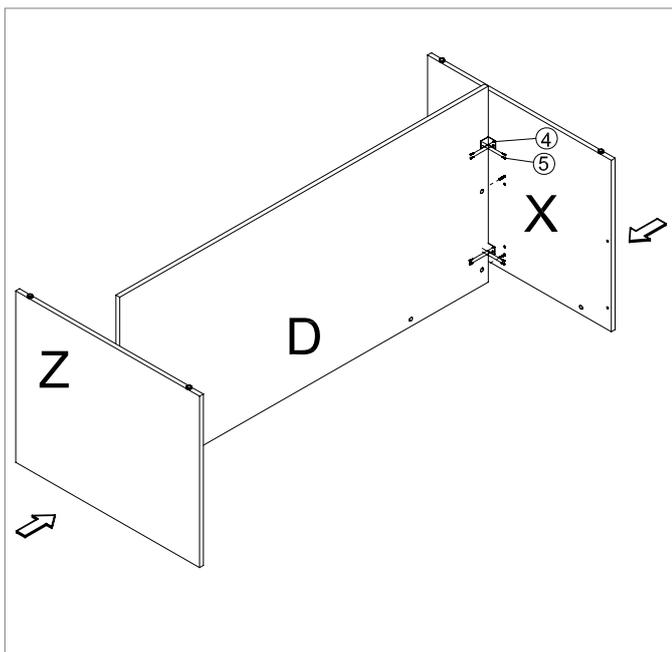

### Step 3

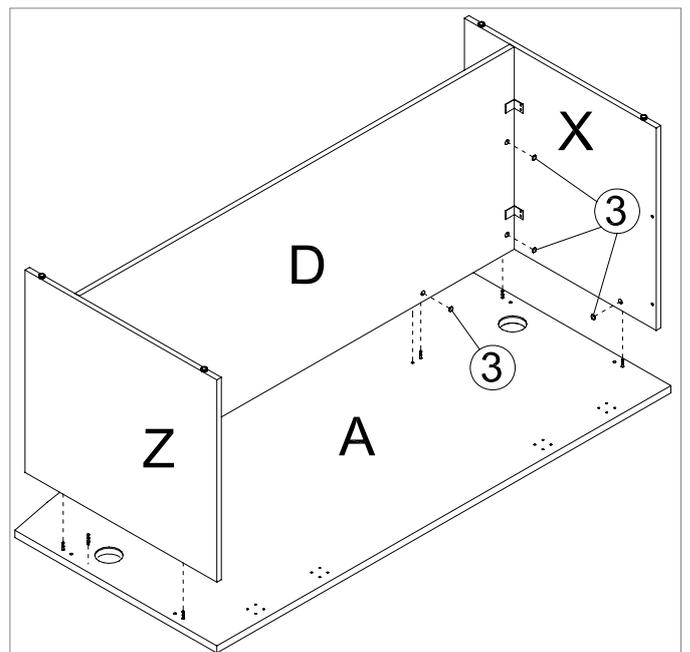

# Complete

---

