


LIVING & CO[®]

Tākiwira 5 Drawer Tallboy

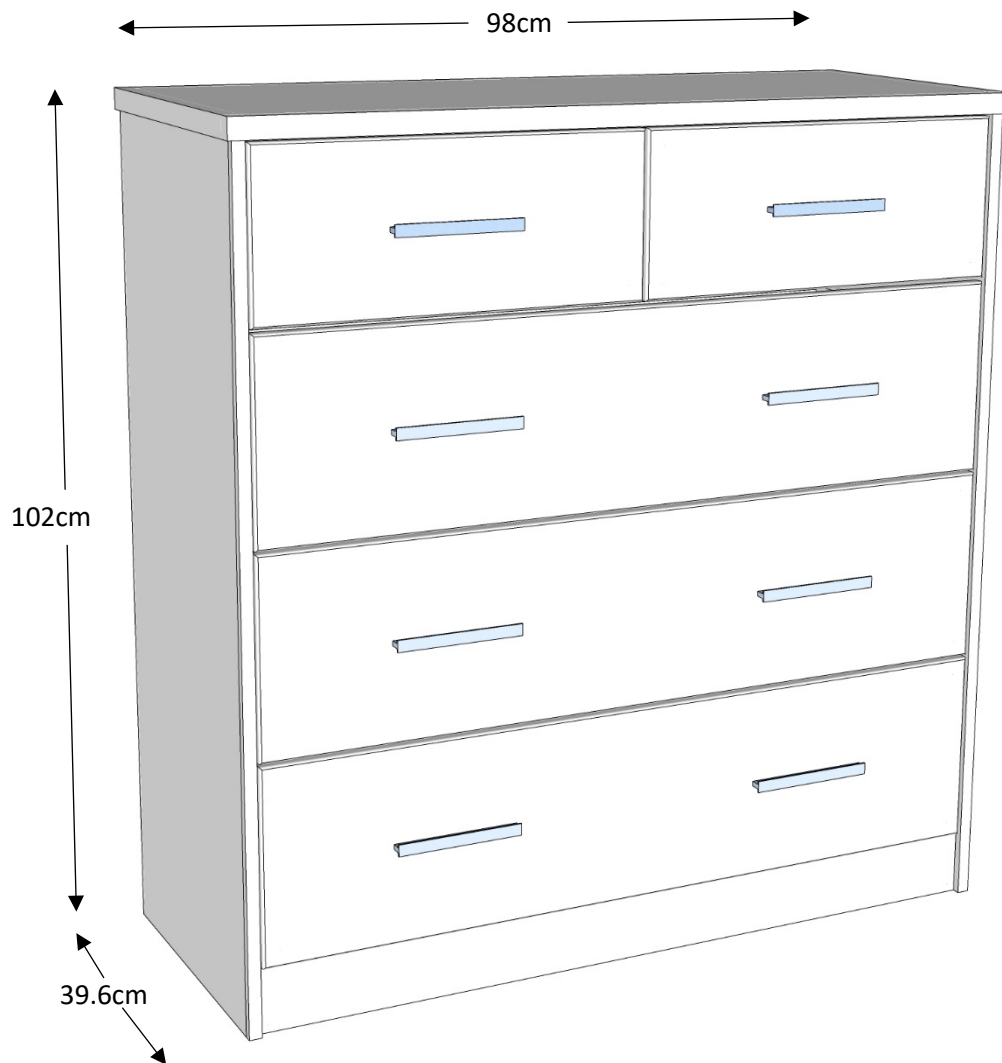




INSTRUCTION MANUAL

Maximum recommended weight is 15kgs per drawer



5 YEAR
WARRANTY

Assembly Details
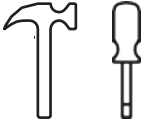
<div>120_{Min}</div> <div>Approximate Assembly Time</div>	<div></div> <div>1 Person Assembly</div>	<div>Floor Area 3m x 4m</div> <div></div> <div>Required Assembly Space</div>
<div></div> <div>Tools Required</div>		

Tips before you start

1. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent damage
2. Please check that all parts are present before you start the assembly of your furniture
3. For ease and speed of assembly, we recommend that you identify all the parts required for each step before commencing with assembly
4. For larger items, please ensure that you have sufficient space (as indicated on page 1)
5. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily
6. During Assembly please take care not to over-tighten hardware as this may damage the product
7. Always place the product on a steady and stable surface
8. Do not use the product as a stepladder
9. This product is intended for indoor, household use only as it is a non-industrial product

Care and Maintenance

- ✓ Please periodically check all things and re-tighten as necessary
- ✓ To clean your item, please use a damp cloth and wipe clean
- ✓ Never allow any kind of liquid on your furniture
- ✓ Please do not place hot items (e.g. Hot drinks) directly on to the surface

Parts List

QTY	PART	MEASUREMENTS	NOTES
1	Top	980 x 396 x 25mm	Laminate on one side
1	LH End	994 x 390 x 15mm	Laminate on both sides
1	RH End	994 x 390 x 15mm	Laminate on both sides
1	Division	194 x 360 x 15mm	Laminate on front edge
1	Toeboard	938 x 80 x 15mm	Laminate on both sides
3	Rail	938 x 80 x 15mm	Unfinished
1	Right Drawer Front	464.5 x 195 x 15mm	Laminate on Front side
1	Left Drawer Front	464.5 x 195 x 15mm	Laminate on Front side
3	Drawer Front	932 x 235 x 15mm	Laminate on Front side
5	Left Hand Drawer Side	340 x 160 x 12mm	Laminate on both sides
5	Right Hand Drawer Side	340 x 160 x 12mm	Laminate on both sides
3	Drawer Bottom Support	328 x 50 x 12mm	Unfinished
2	Top Drawer Back	411.5 x 155 x 12mm	Laminate on one side
3	Drawer Back	888 x 155 x 12mm	Laminate on one side
2	Top Drawer Bottom	421.5 x 339 x 4mm	Laminate on one side
3	Drawer Bottom	898 x 339 x 4mm	Laminate on one side
1	Back Panel	939 x 958 x 4mm	Unfinished

Hardware List



26 x
Connecting
Bolts



14 x Large
Cams
(15mm)




15 x Large
Cams
(15mm)



20 x Drawer
Slide
Screws



19 x Small
Woodscrews



25 x Dowels



9 x Panhead
Screws



4 x Nail on
Glides



5 x Metal
Drawer Slide
Set



5 x Handles




1 x H5 Large
Screw



25 x 31mm
Woodscrew




1 x Washer

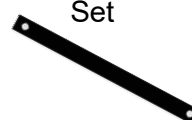

1 x Safety
Strap

Cam Installation & Operation Guide

The Cam and Connecting Bolt system is used to put your unit together. Below is an explanation of how this system works.

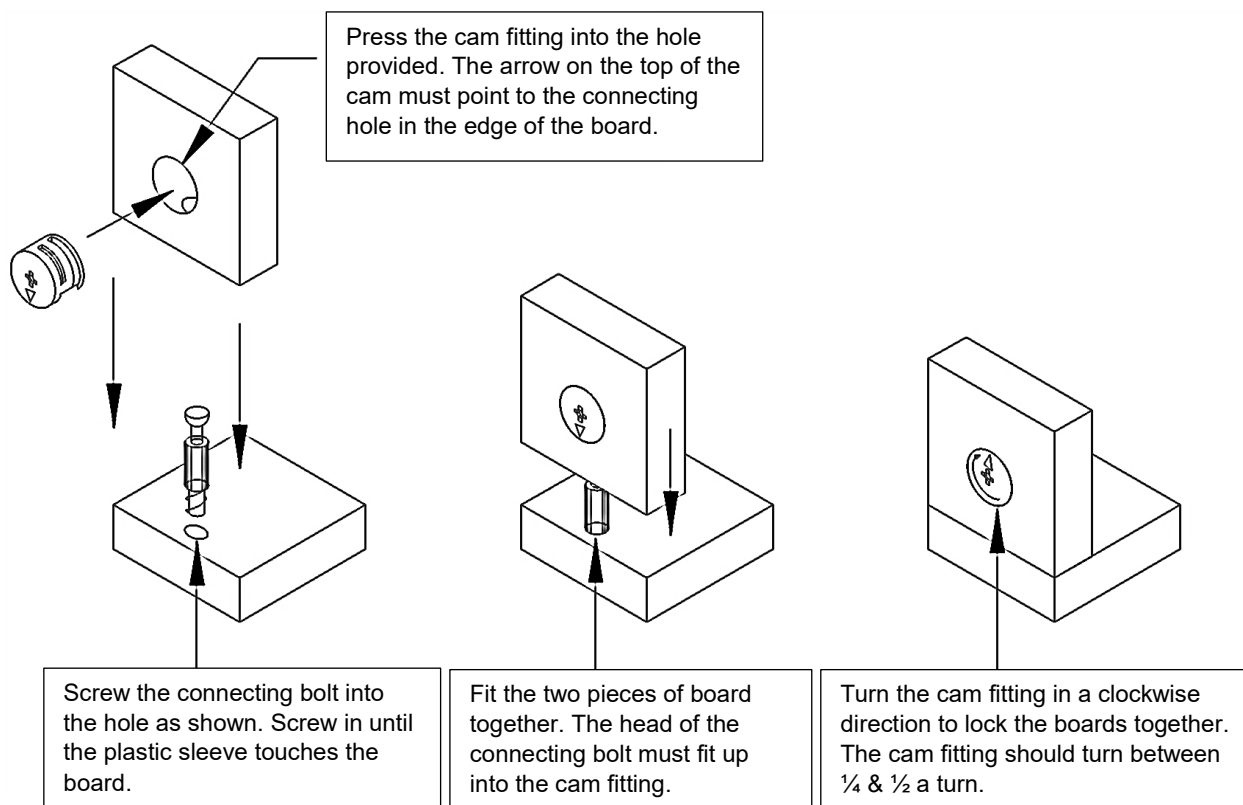


Drawer Slides Guide

Your pack will contain two sets of Metal Drawer Slides. These are bundled together with adhesive tape. The set comprises of 4 components. Undo the tape on one set at a time and separate the parts.




LEFT HAND PART (**DL**)



RIGHT HAND PART (**DR**)

The Drawer Slide components shown *above* are attached to the **drawer**. They have the letters **DL** or **DR** stamped on them to indicate left hand or right-hand components. Put these parts aside for attaching to the drawer later.

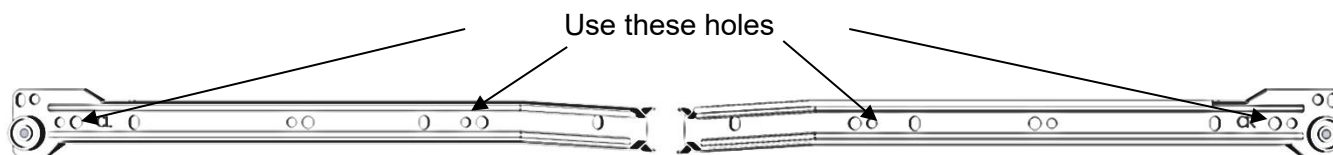


The Drawer Slide components shown *above* are to be attached to the **cabinet**. They have letters **CL** or **CR** stamped on them to indicate left hand or right-hand components. You will need these for steps 1 and 2.

Assembly



STEP 1: Top

- To begin assembly, lay the top finished side down on a clean and clear surface
- Screw six **Connecting Bolts** into the holes as shown
- Using the **Panhead screw**, attach the **Safety Strap** as shown by screwing it first through the **Washer** and then through the eyelet in the Strap, into the hole in the left-hand side of the Top. Make sure that the Strap is positioned so that the tail end falls through the hole in the edge of the Top as shown below.

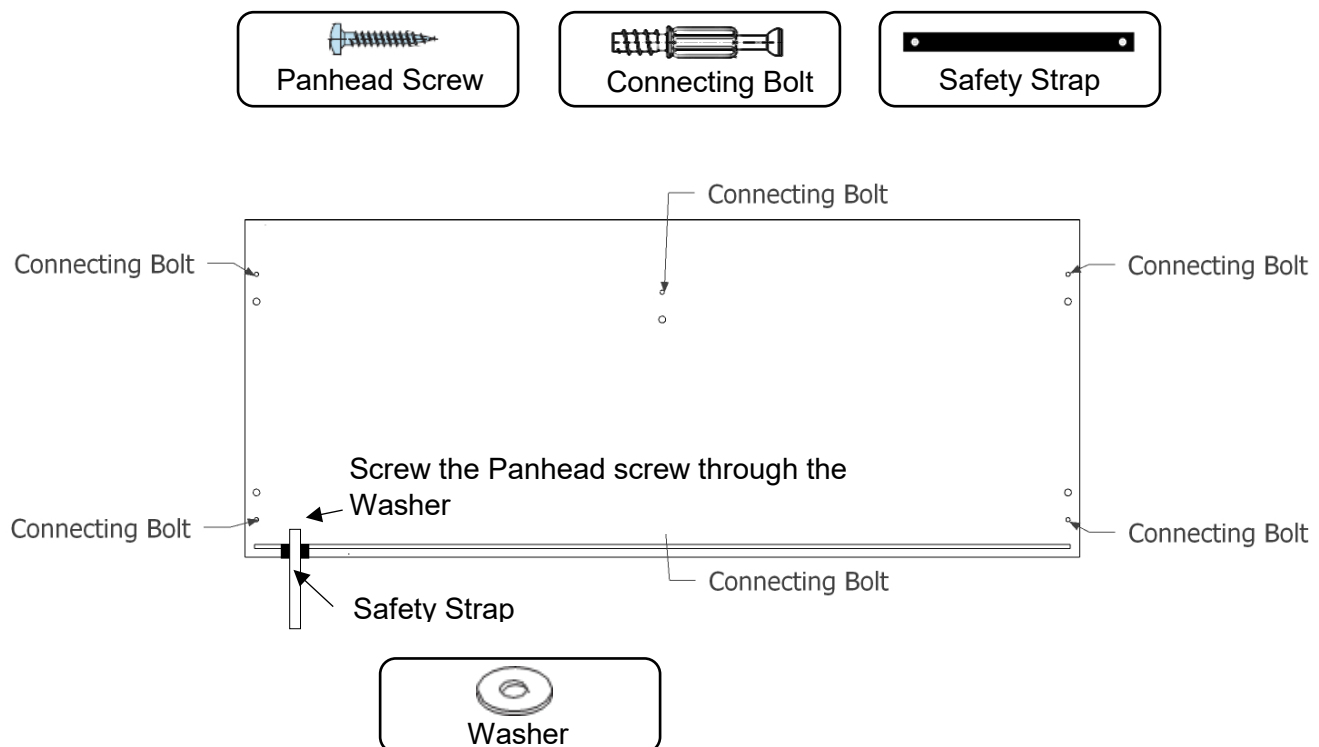



STEP 2: LH End

- Screw the **LH Cabinet Drawer Slides** into the LH End using two Drawer Slide Screws for each slide (*ensure that the end of the slide with the wheel is on the side with the finished edge*).
- Insert **two Large Cams** as shown (make sure the arrow on the top of the Cam points towards the top edge of the End).
- Push **two Dowels** into the top edge of the End
- Screw **two Connecting Bolts** into the holes as shown

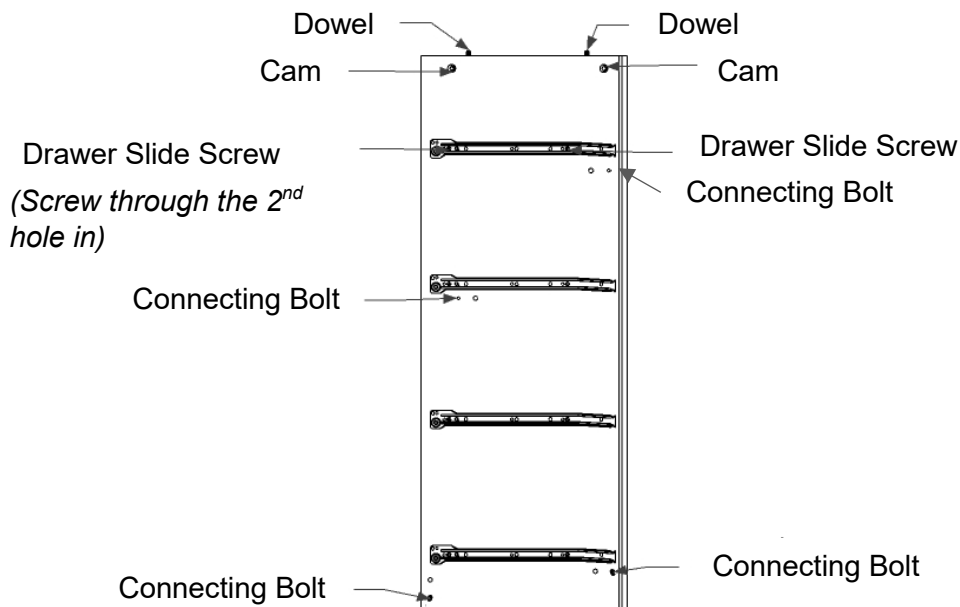



STEP 3: RH End

- Repeat the previous step with the RH End.

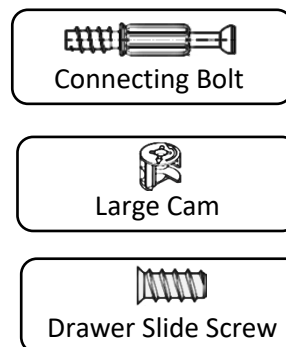
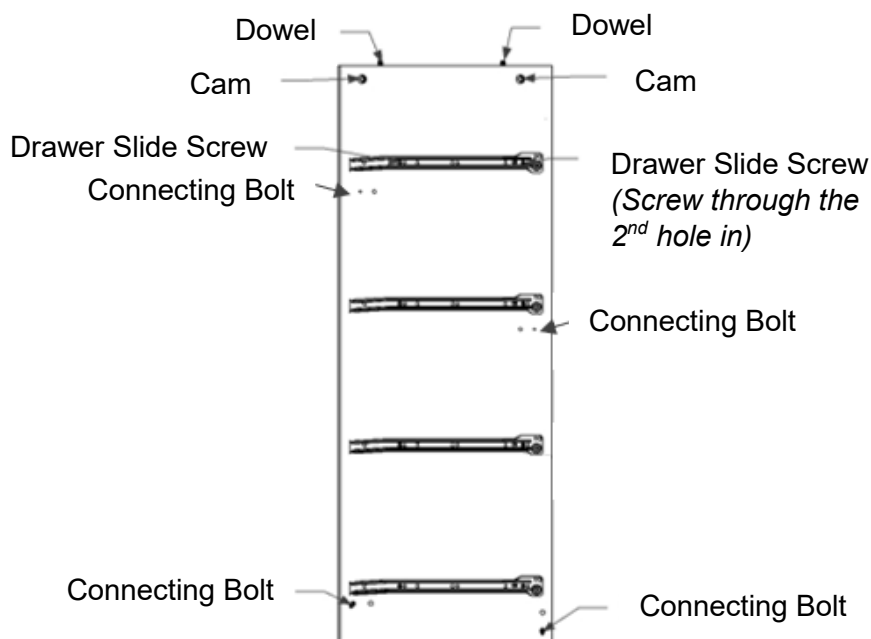


STEP 4: Division

- Install the two **Large Cams** into the Division as shown below – ensure the arrow points towards the top edge of the Division. *NOTE: The holes for the Cams could be on either side of the Division.*
- Insert the three **Dowels** as shown
- Screw the last **LH Drawer Slide (CL)** on using the **Drawer Slide Screws**. Ensure that the end of the slide with the wheel faces towards the Finished edge of the Division.

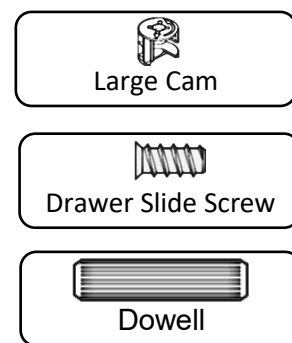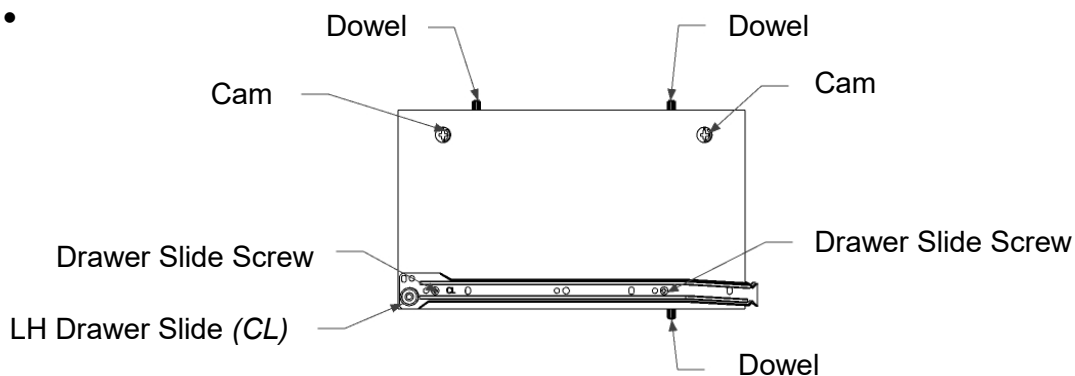


- Turn the Division over and screw the **RH Drawer Slide (CR)** on using the remaining **Drawer Slide Screws**.

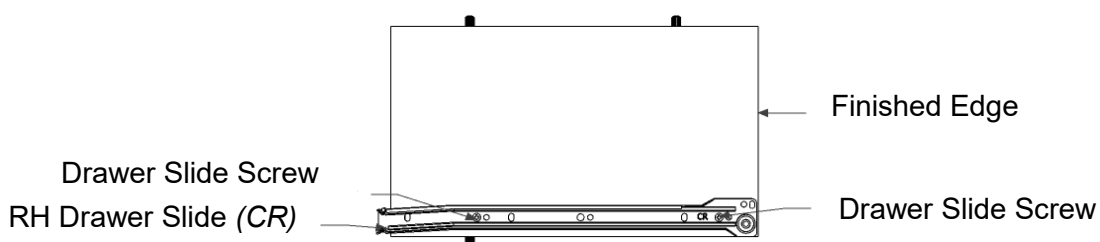

STEP 5: Rails


Your pack will contain 4 boards the same size.

- 1 x Toeboard
- 3 x Rails
- Install two **Large Cams** into each piece as indicated
- Push the **Dowels** into each of the boards as indicated

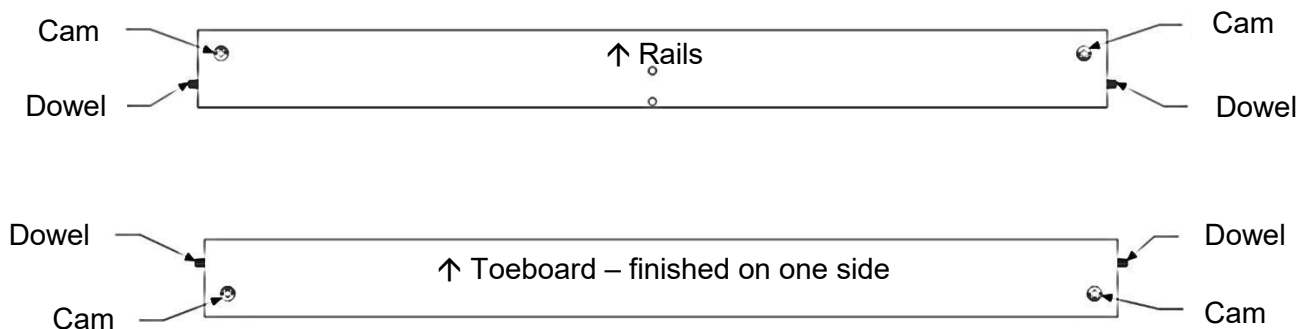


STEP 6: Attach Rails to LH End

- Lay the LH End finished side down on a clean surface that is free of anything that may damage the woodgrain finish. A clean carpeted floor is the most ideal for this.
- Position the Rails and Toeboard over the Connecting Bolts installed in the End – take note of the drawing below to get them in the correct place. **The Rails are interchangeable. Ensure the black surface of the Toeboard faces towards the Front Edge of the unit so the cams cannot be seen when the unit is completed. Make sure the Large Cams face towards the top of the End.**
- Tighten all three Cams in a clockwise direction to lock the Rails and Toeboard to the LH End. The Large Cams should turn at least a $\frac{1}{4}$ of a turn.

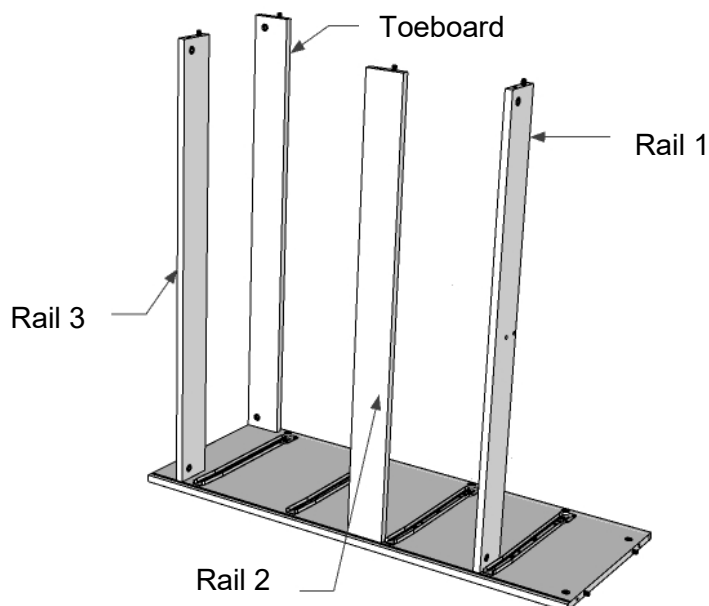


STEP 7: Attach RH End

- Turn the LH End with the Rails and Toeboard attached onto its back edge.
- Fit the RH End to the Rails and Toeboard as shown in the drawing below.
- Lock the RH End to the Rails and Toeboard by tightening **all** the Cams in the Rails and Toeboards in a clockwise direction.

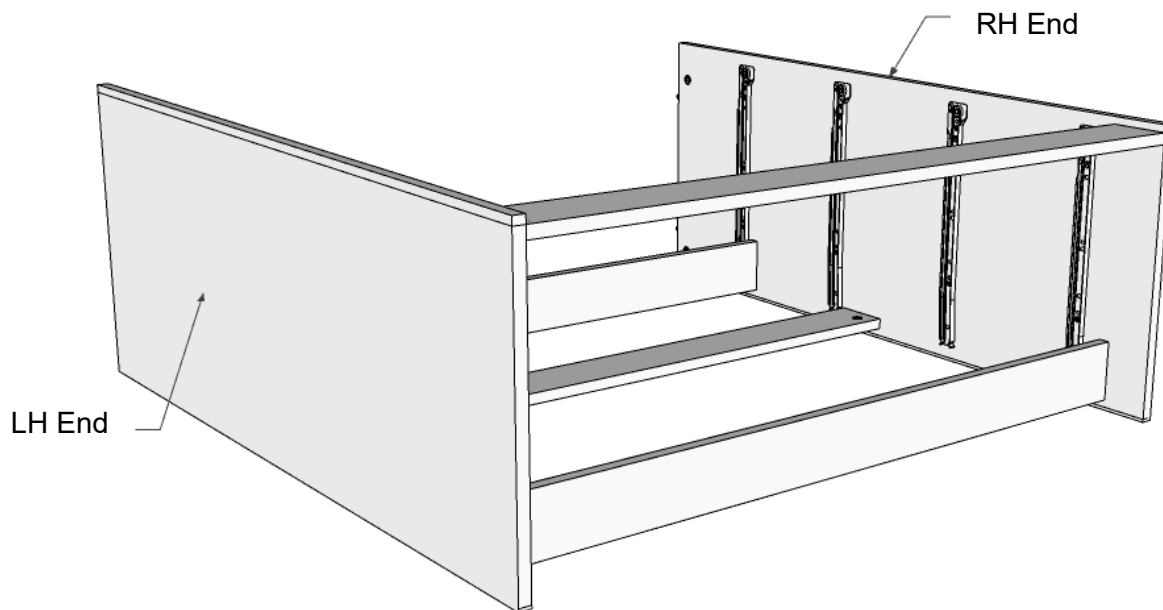


STEP 8: Attach Division to Top

- Lay the Top on a clean, clear surface
- Attach the Division to the Top by fitting it down over the Connecting Bolts installed in the Top. Make sure the Finished edge of the Division faces the front of the Top.
- Tighten the two Large Cams in the division in a clockwise direction to lock the Division to the Top.

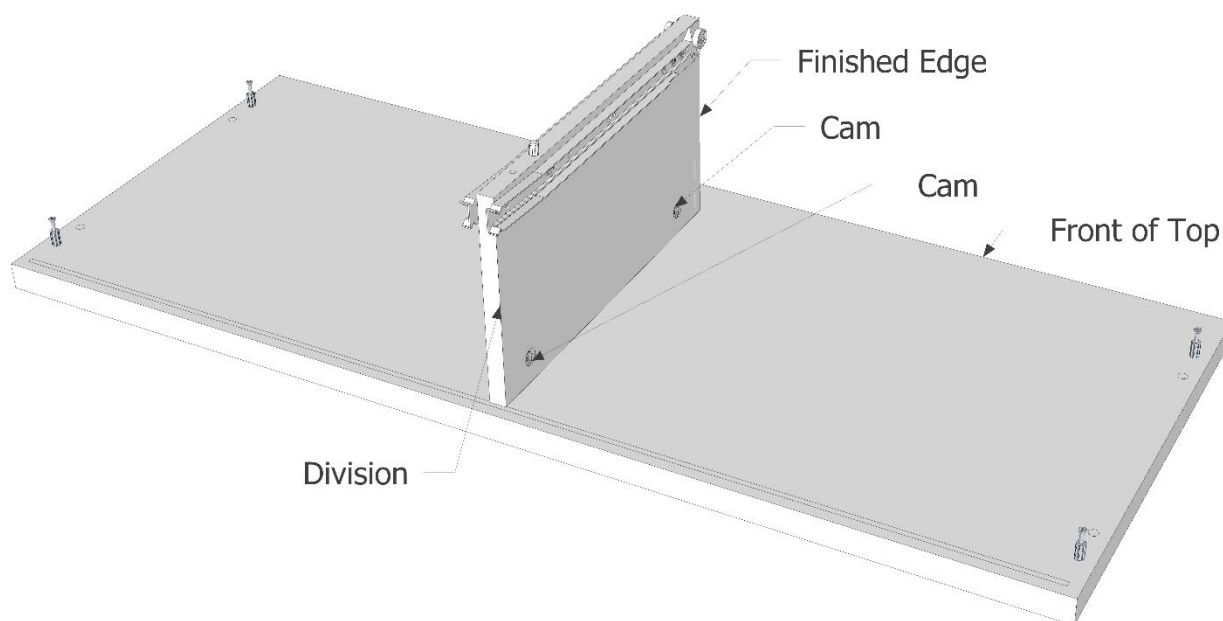


STEP 7: Attach Top and Glide Feet

- Turn the Top with the Division attached on its back edge. Fit in onto the top of the ends as shown below. The connecting Bolts in the Top will fit down into the Cams in the Ends.
 - Turn all four Cams in a clockwise direction to lock the Top to the Ends
 - Use the **H5 Large Screw** to attach the Division to the Back Rail as shown below. The **H5 Large Screw** will screw up through a hole in the Back Rail and into a hole in the Division. Before doing this, you may need to tap the rail upwards a bit to ensure that the H15 Dowel fits into the hole in the Back Rail.
- Tap the 4 x **Nail on Furniture Glides** into the bottom edge of the Ends. Space them about 40mm in from the edge.

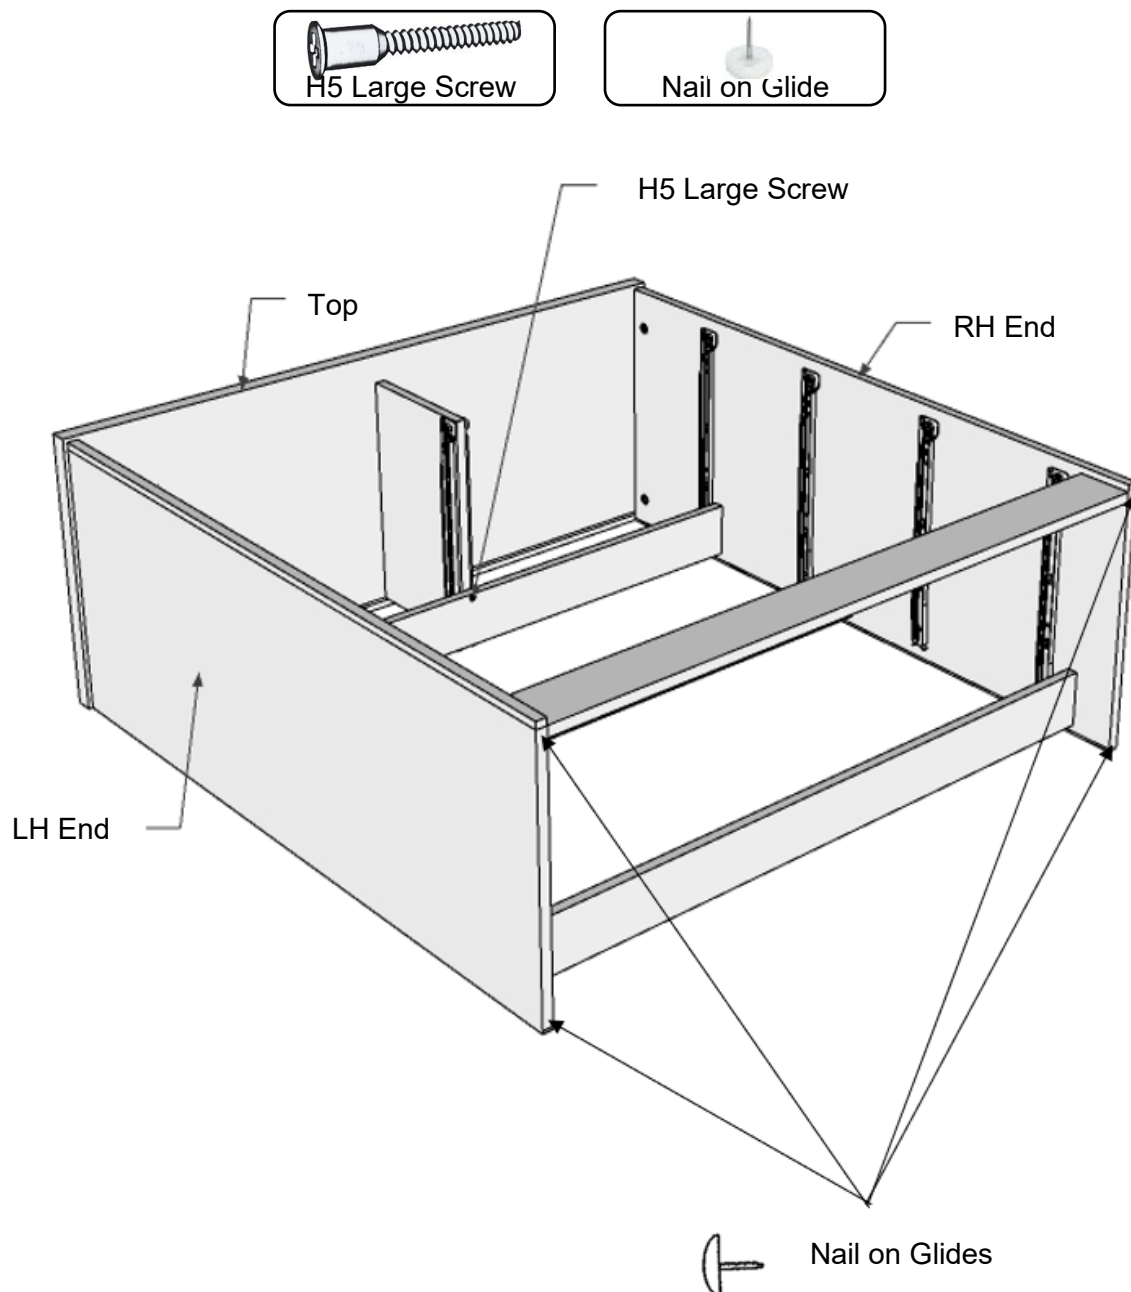


STEP 10: Back Panel

- Turn the Tallboy onto its front edge. Make sure the surface is clear and free of anything that may damage the laminate finish.
- Slide the Back Panel in place (**please ensure that the end with the predrilled holes part way down the panel is at the top**)
- Secure the Back Panel in place as shown with the 8 Panhead Screws as indicated.

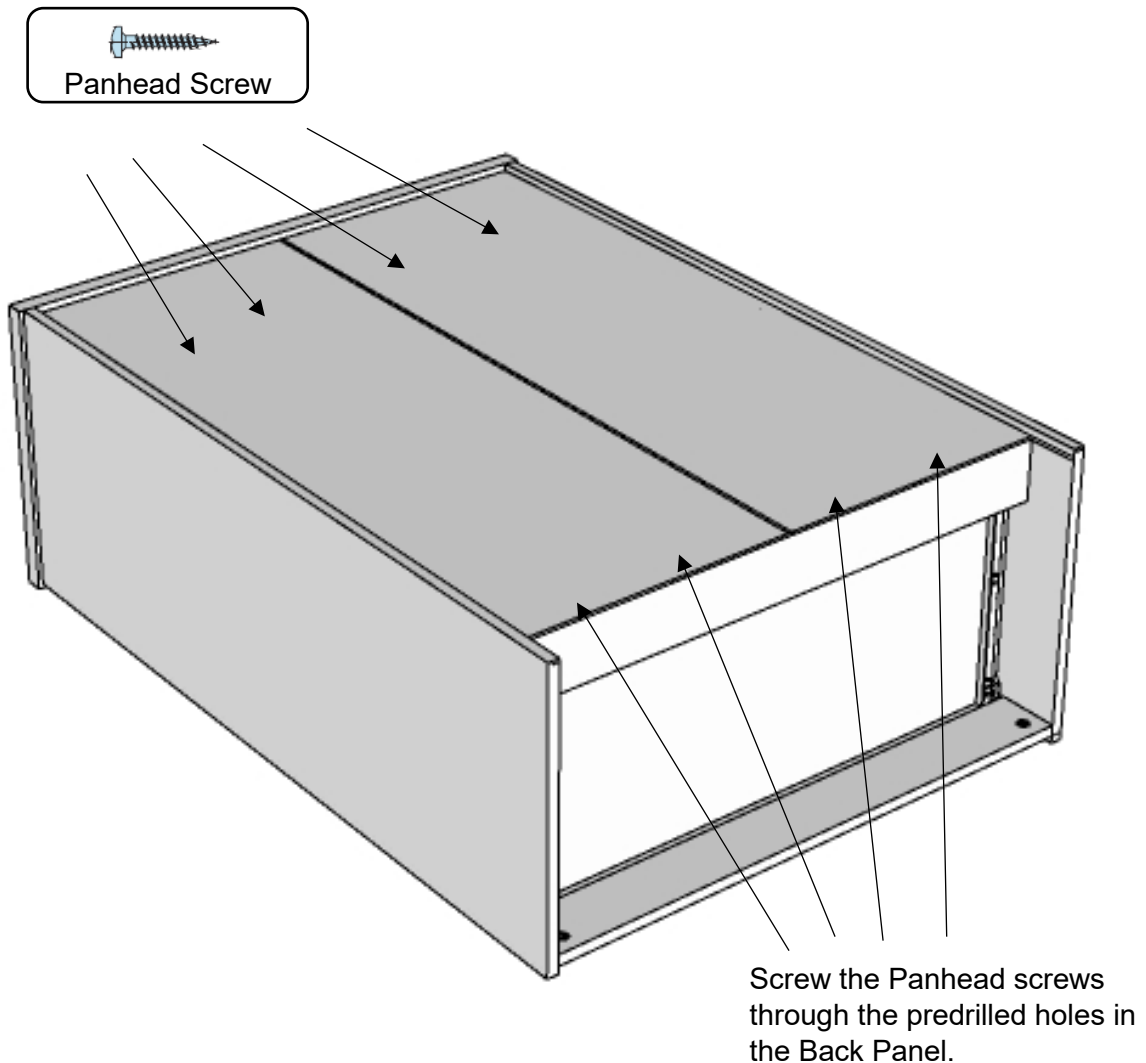

Assemble the Small Drawers

Your **Tākiwira Tallboy** will have two shallow top drawer and four deeper bottom drawers. Begin with assembling the small drawers.

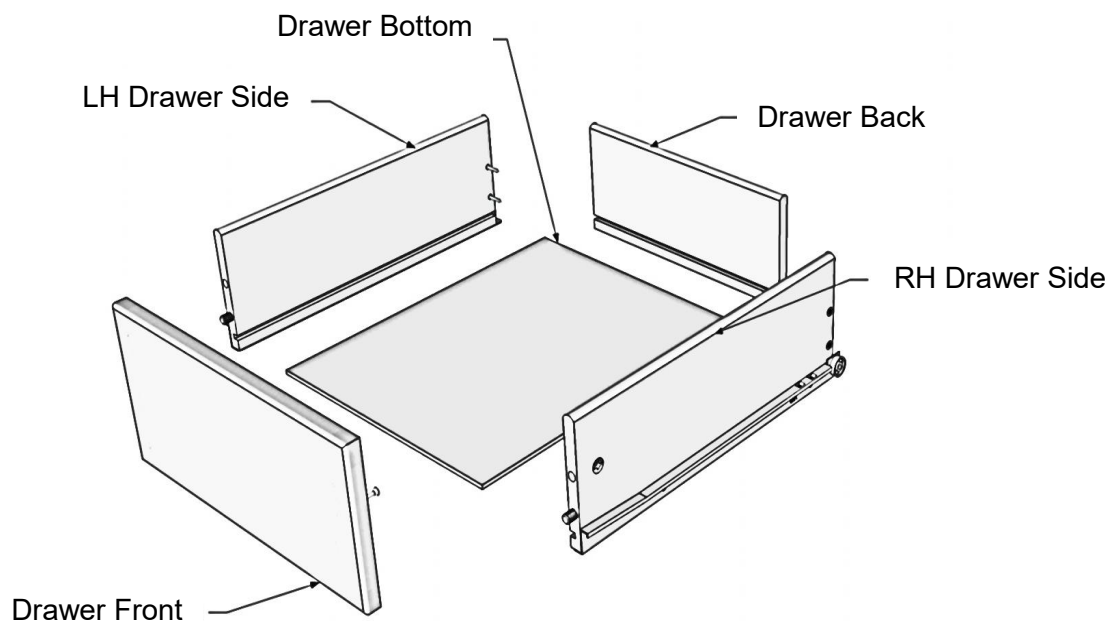


STEP 11: Install Hardware




- Install the hardware in the Drawer parts as shown below.

Note: Be sure that the arrow on the Small Cam points to the end of the drawer side nearest it.

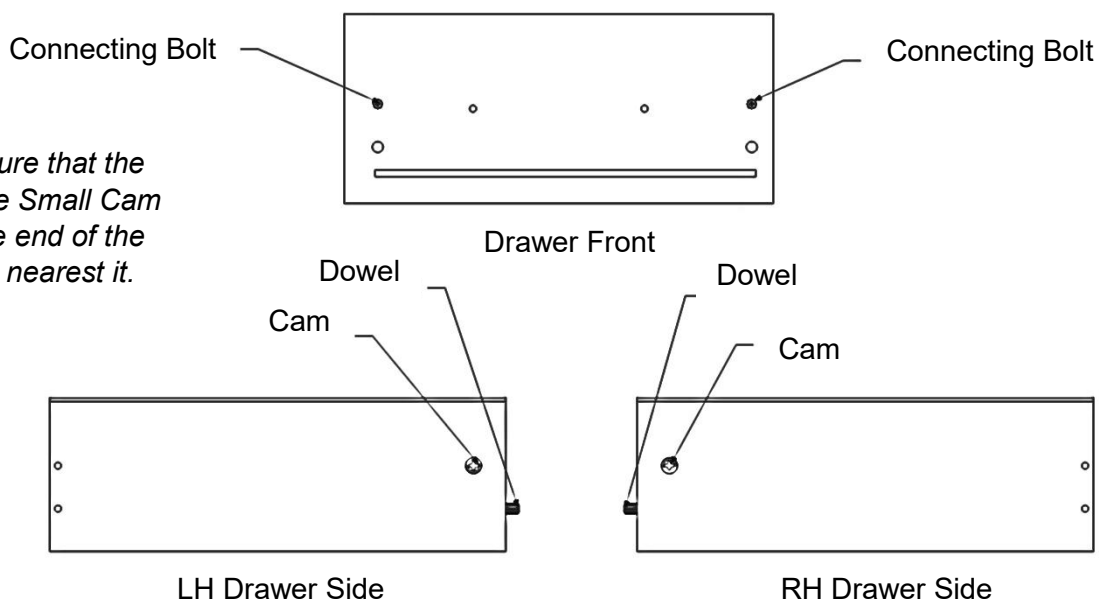



STEP 12: Assemble the Drawer

- Lay the Drawer Front finishes side down on a smooth, clean surface.
- Attach the **LH** and **RH Drawer Sides** by fitting them into place over the Connecting Bolts installed in the **Drawer Front**.
- Turn the Small Cams in a clockwise direction to lock the **Drawer Sides** in place.
- Slide the **Drawer Bottom** into place in the grooves in the **Drawer Sides** and **Drawer Front**.
- Fit the **Drawer Back** into place (*finished side up*) between the **Drawer Sides**. The groove in the **Drawer Back** will fit over the end of the **Drawer Bottom**.
- Secure the **Drawer Sides** to the **Drawer Back** with four Woodscrews as shown below.

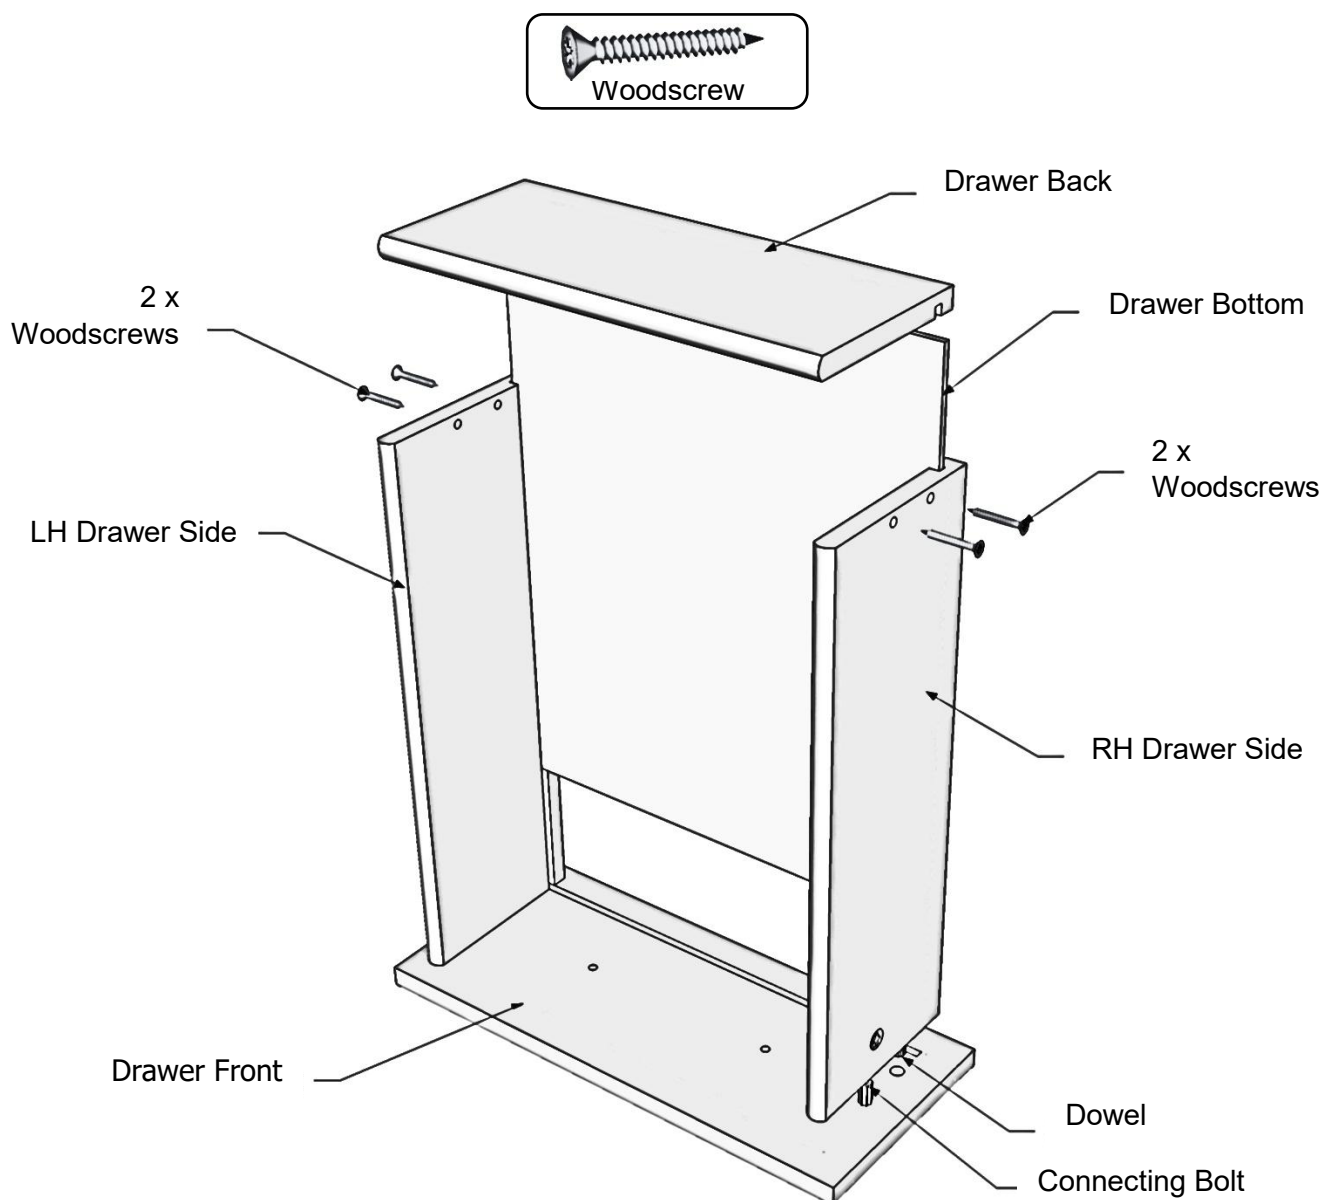


STEP 13: Attach the Drawer Slides

- Turn the drawer upside-down as shown and attached the Drawer Slides (DL and DR) with the four woodscrews as shown below. Ensure that the ends of the slides without the wheels are hard up against the back of the Drawer Front. **Each slide requires two screws.**
- **Repeat steps 12 and 13 to complete the 2 small top drawers.**

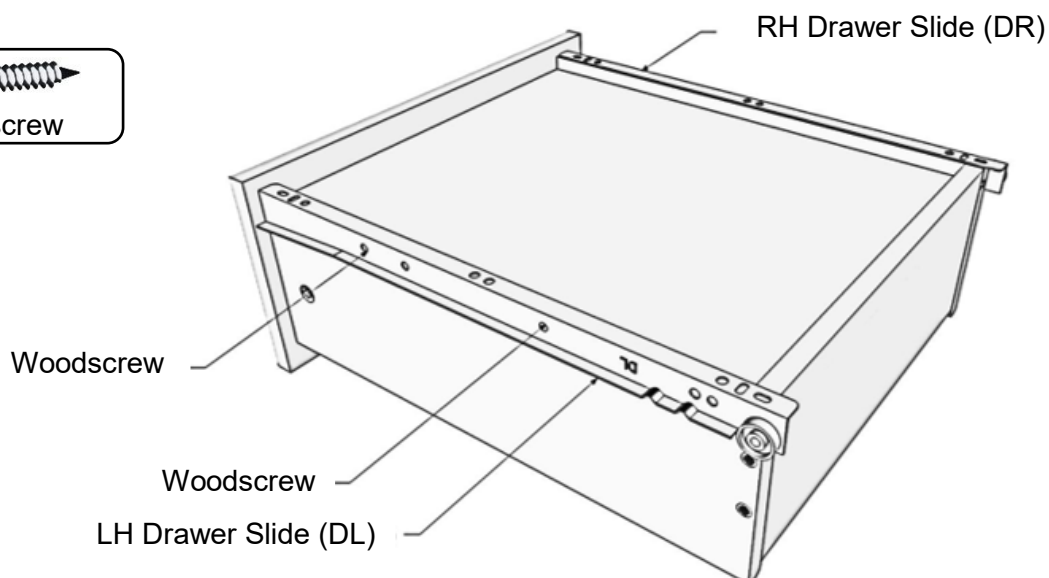


Assemble the Large Drawers

Your Tallboy has 3 large drawers – these are constructed slightly different from the two small top drawers – please follow these instructions to ensure you assemble them correctly.

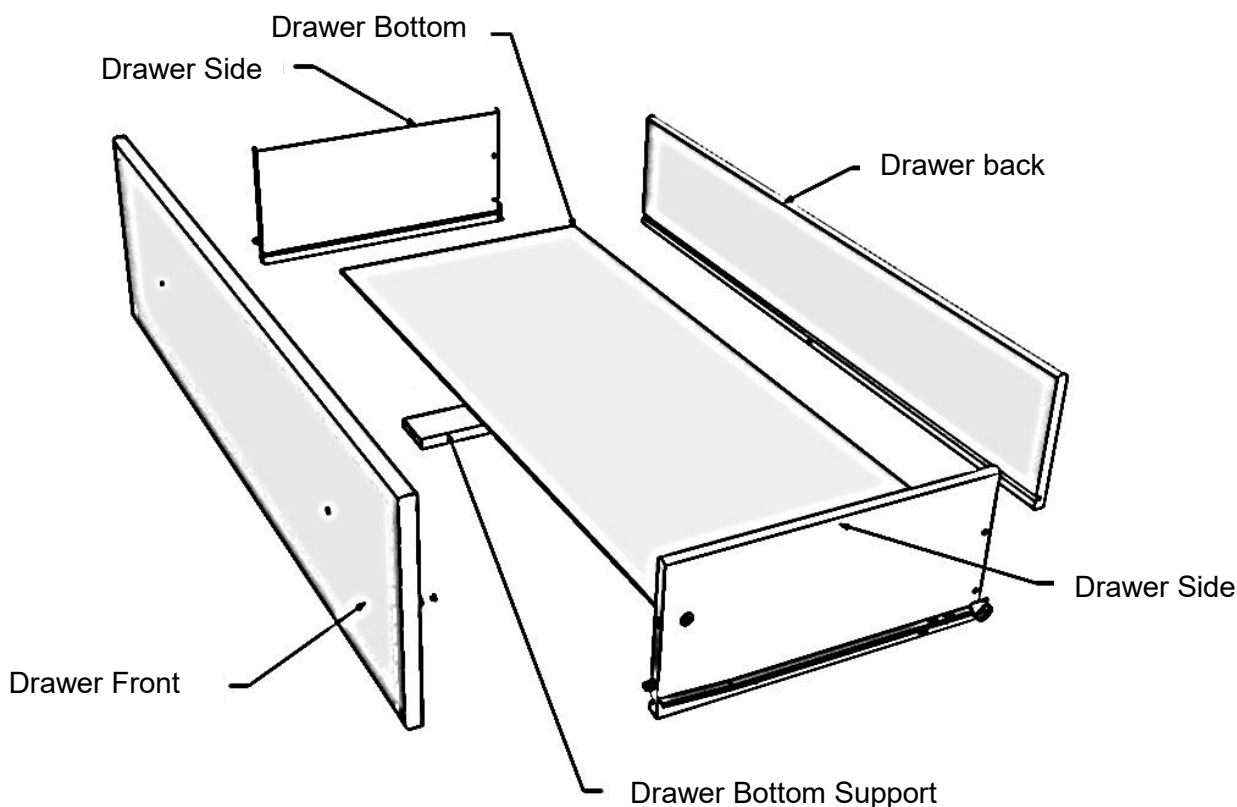


STEP 14: Install the Hardware (large drawers)

- Install the hardware in the Drawer Parts as shown below.

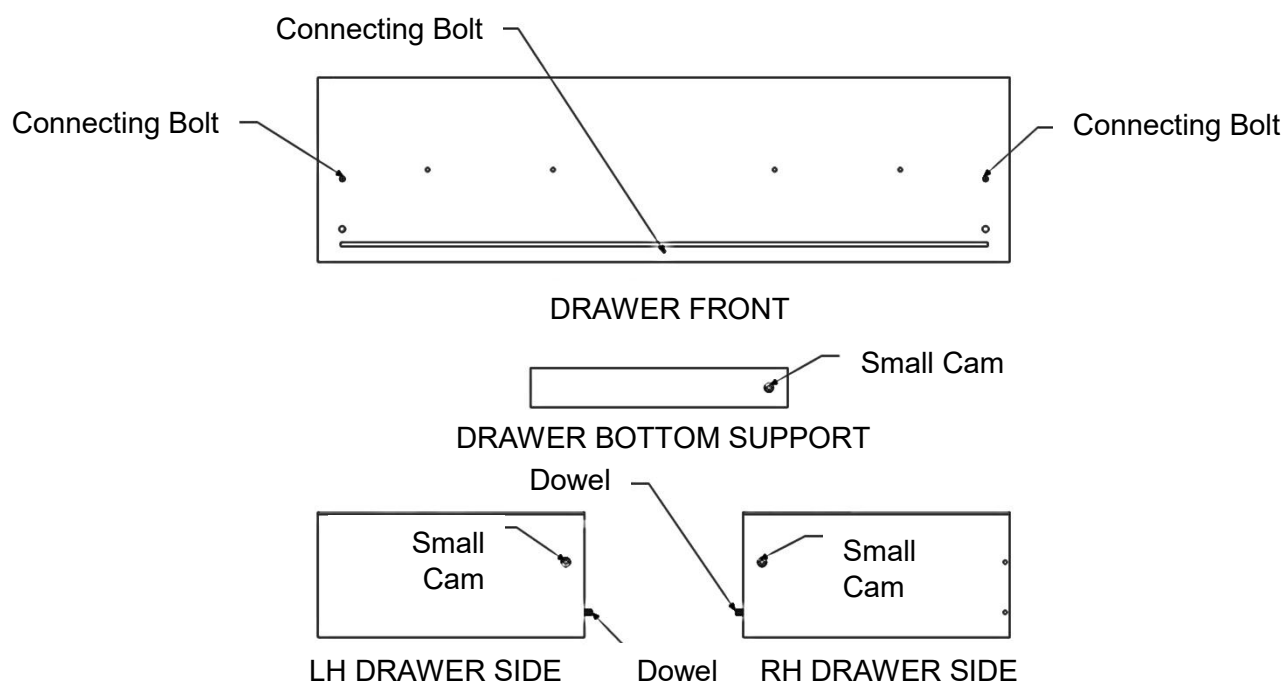


STEP 15: Install the Hardware (large drawers)

- Lay the Drawer Front face down on a smooth, clean surface
- Attach the LH and RH Drawer Sides by fitting them into place over the Connecting Bolts installed in the Drawer Front
- Turn the Small Cams clockwise to lock the Drawer Sides in place
- Slide the Drawer Bottom into place in the grooves in the Drawer Sides and Drawer Front

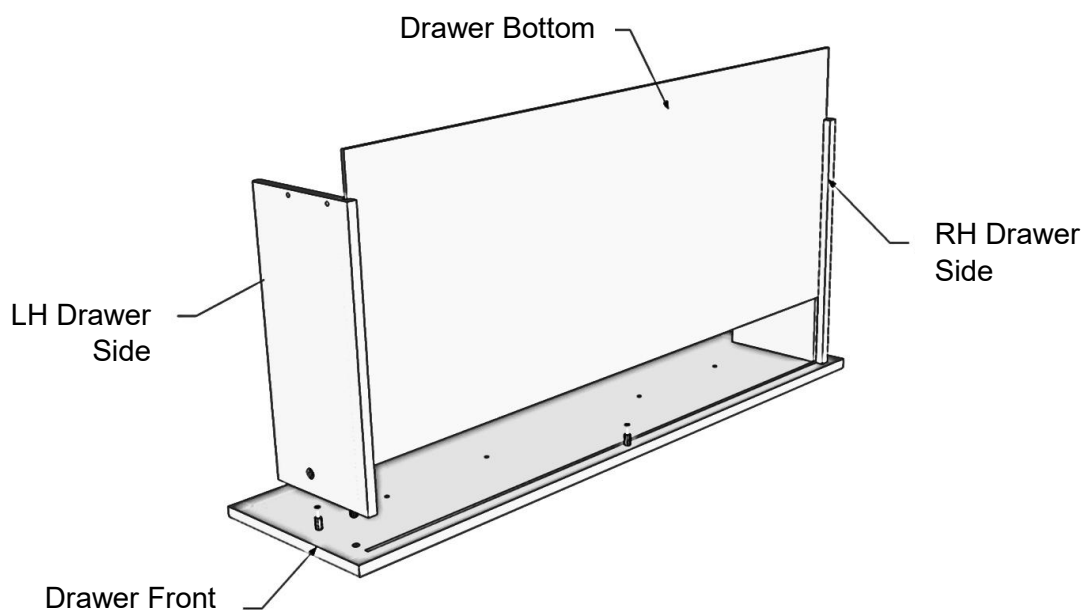


STEP 16: Attach Drawer Back

- Fit the Drawer Bottom Support into place underneath the Drawer Bottom, the Connecting Bolt in the centre back of the Drawer Front will fit up into the Small Cam.
- Turn the Small Cam in a clockwise direction to lock the Drawer Bottom Support in place.
- Fit the Drawer Back into place (*finished side up*) between the Drawer Sides. The groove in the Drawer Back will fit over the end of the Drawer bottom.
- Secure the Drawer Sides to the Drawer Back with Four Woodscrews as shown below.

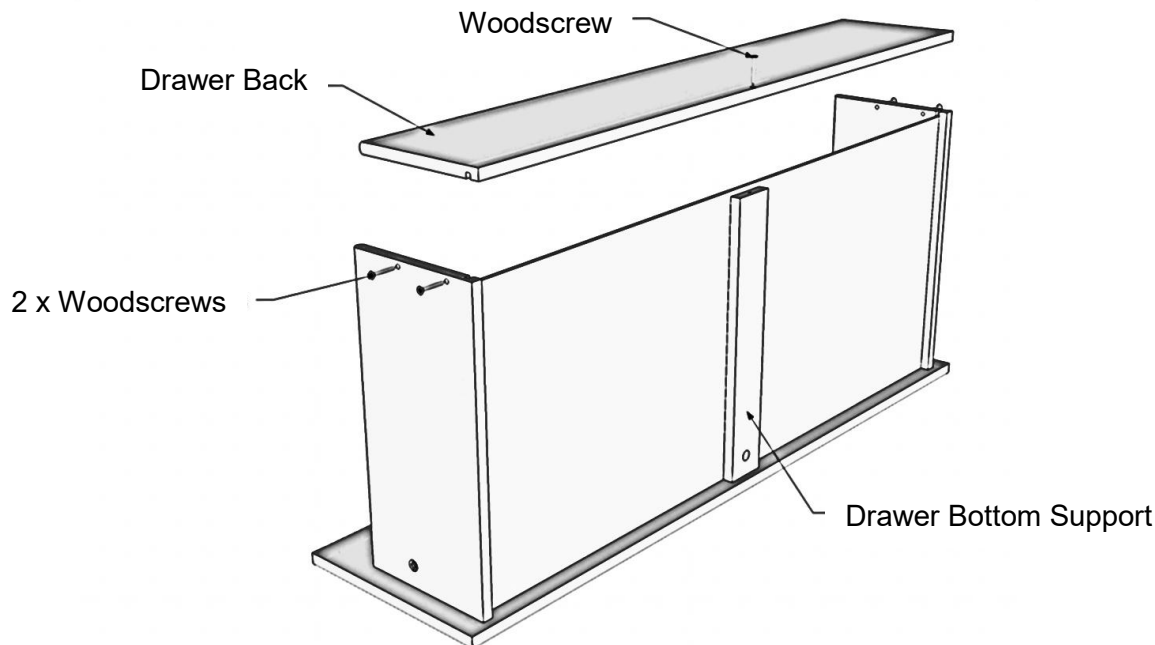


STEP 17: Attach Drawer

- Turn the drawer upside-down as shown and attached the Drawer Slides (**DR** and **DL**) with the four **Small Woodscrews** as shown below. Ensure that the ends of the slides without the wheels are hard up against the back of the drawer front. **Each slide requires two screws.**
- **Repeat steps 14 – 17 to make the three bottom drawers.**

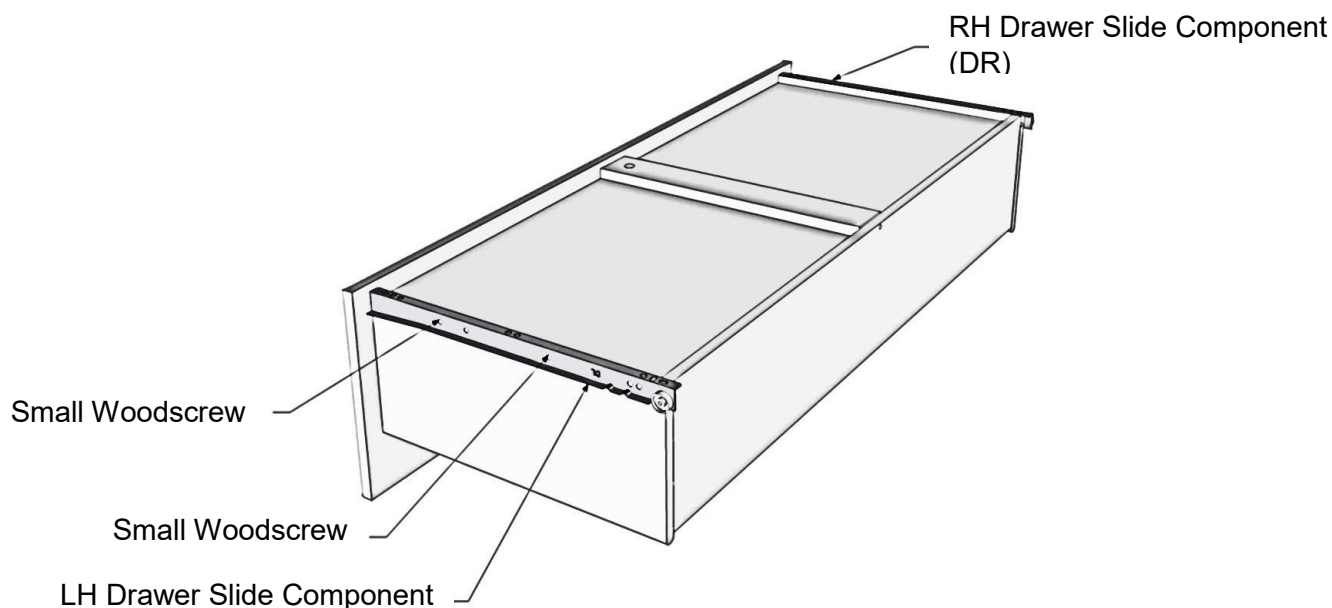

STEP 18: Attach the Handles and Insert the Drawers

- Attach the Bar Handles to the Drawer Front using the screws provided
- Fit the drawers into the Bedside.

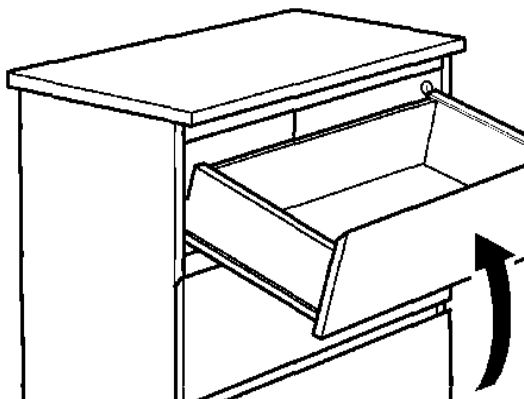


Angle the drawer slightly to ensure that the wheel at the back of the drawer slide goes behind the front wheel on the cabinet slide. Then lift the drawer up and slide it into the channel of the drawer slide.



STEP 12: Attach the Handle and Insert the Drawers

Compac Furniture strongly recommends using a safety strap on all furniture, especially if small children are around.

Secure your unit to the wall using the Safety Strap and a screw suitable for your wall (**not supplied**). We recommend you screw into a stud. If you cannot locate a stud, use a wall anchor appropriate for your wall.

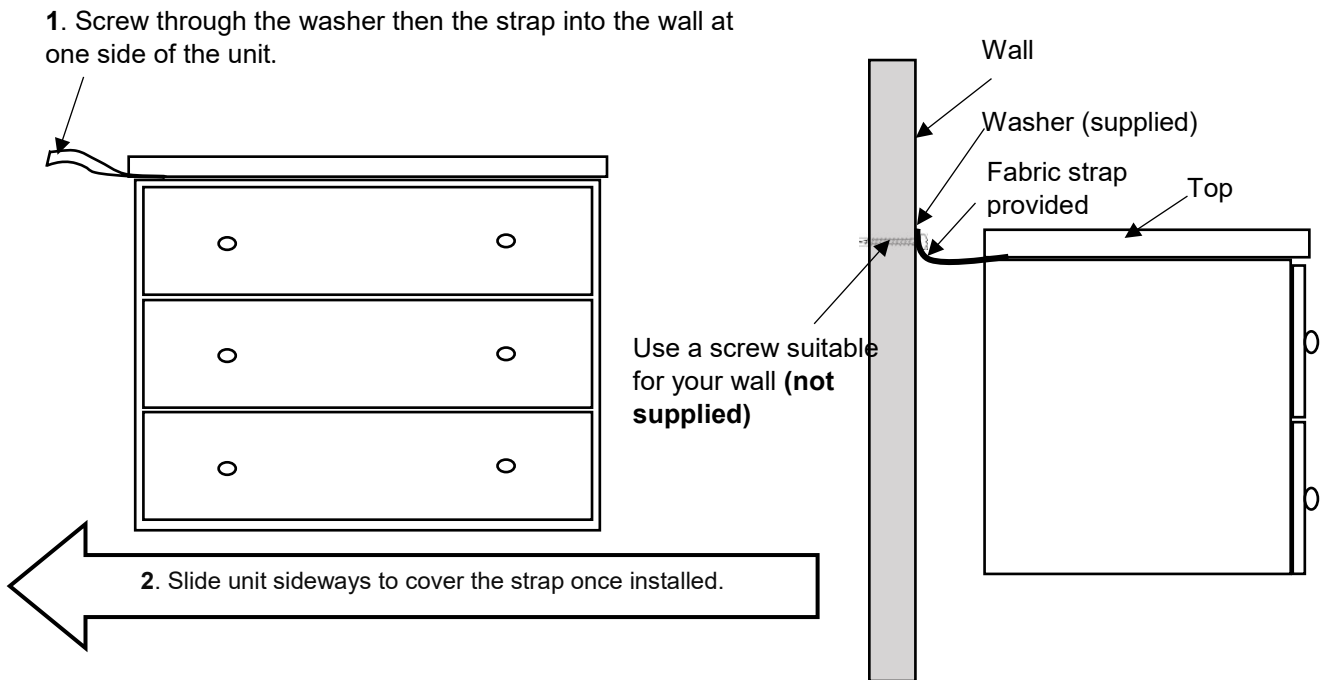

Please note: This is a precautionary measure. The use of tip-over restrains may only reduce but not eliminate the risk of tip over. Compac Furniture can take no responsibility.

Congratulations, your Tākiwira 5 Drawer Tallboy is now complete.

Thank you for supporting New Zealand Made furniture.



LIVING & CO[®]

WARRANTY

We pride ourselves on producing a range of quality products that are both packed with features and completely reliable.

We are so confident in our products, we back them up with a five-year warranty. Now you too can relax knowing that you are covered.

For parts and assistance, call the manufacturer direct on 0800 100 858. Please do not call the store you purchased the cabinet from as they will be unable to help you.

This product is covered by five-year warranty when accompanied by proof of purchase.



5 YEAR
WARRANTY

AFTER SALES SUPPORT

www.compacfurniture.co.nz or 0800 100 858