


Agile


Installation Guide - Fixed Height

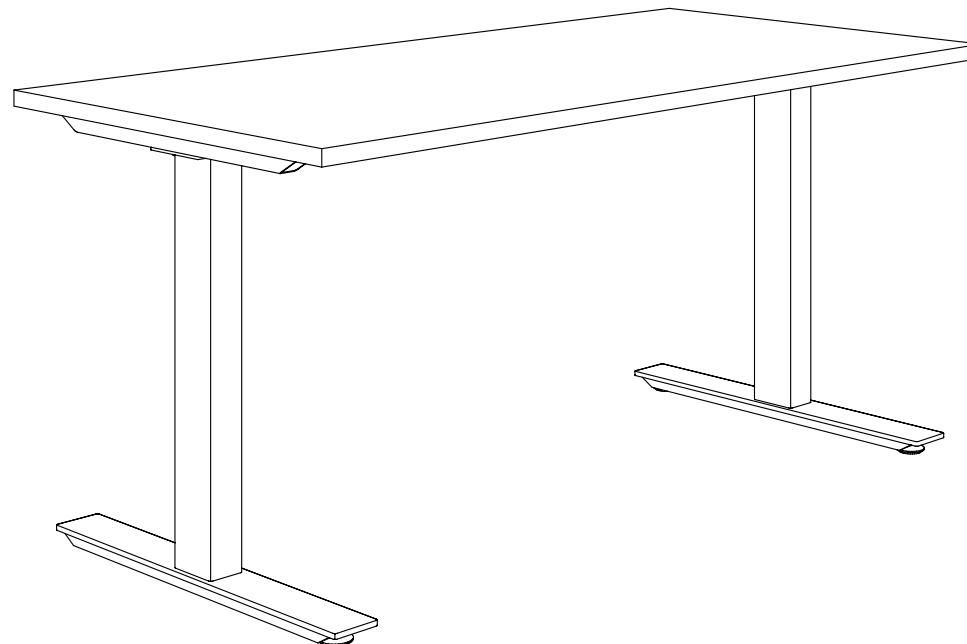


freeway




Parts:

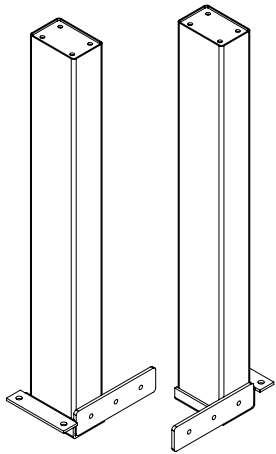


1 x L&R Leg Pair

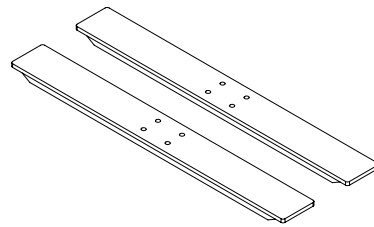


2 x Foot

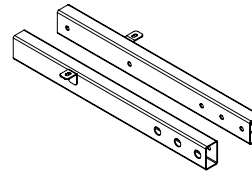


1 x L&R Leg Rail Pair

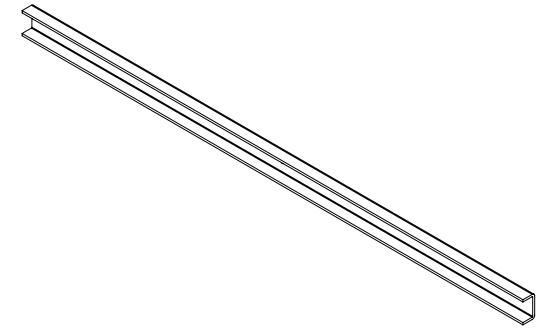


1 x Cross Rail

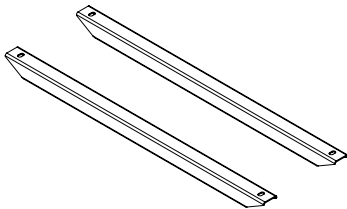

1 x L&R Support Bar Pair

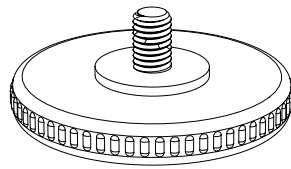

4 x Levelling Foot



8 x M8x25



10 x M8x10





6 x ST5.0x23

Step 1





6 x M8x10

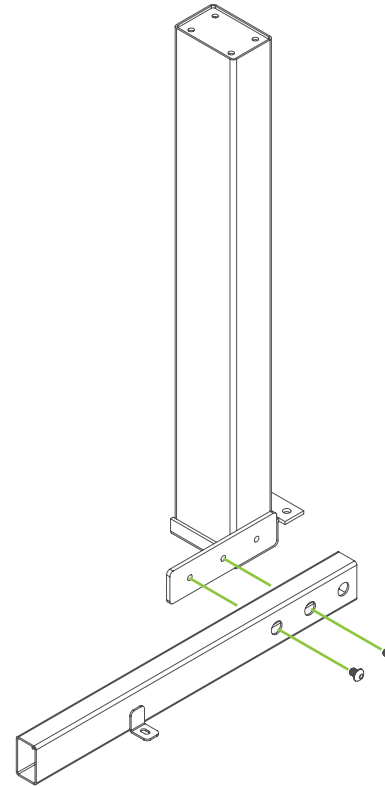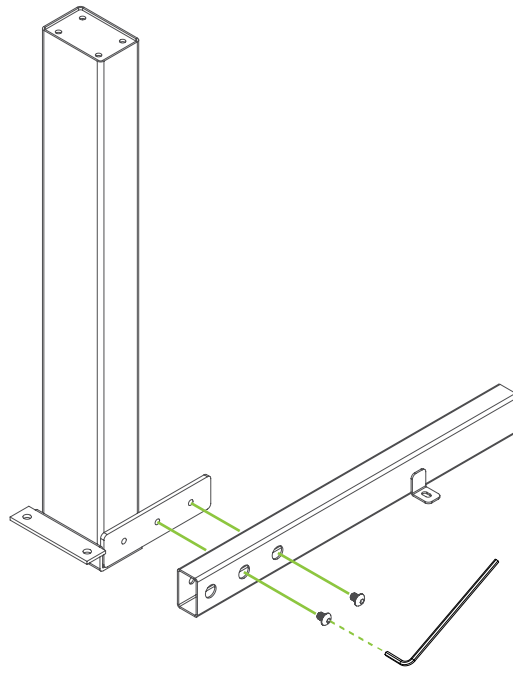


Step 2





4 x M8x10

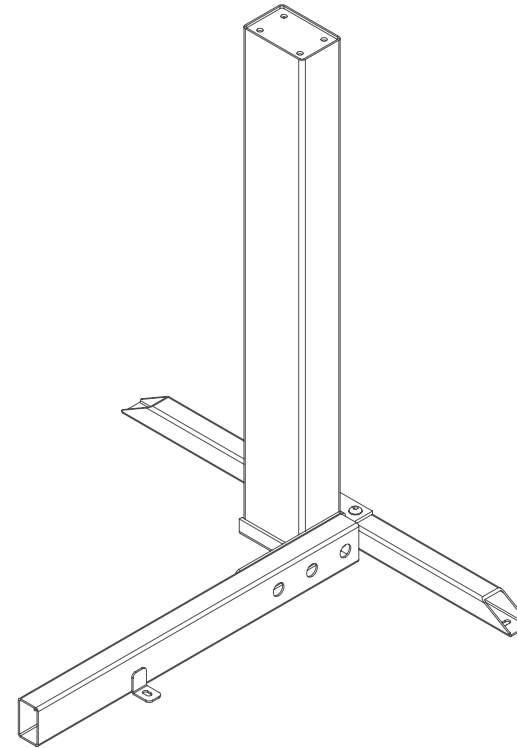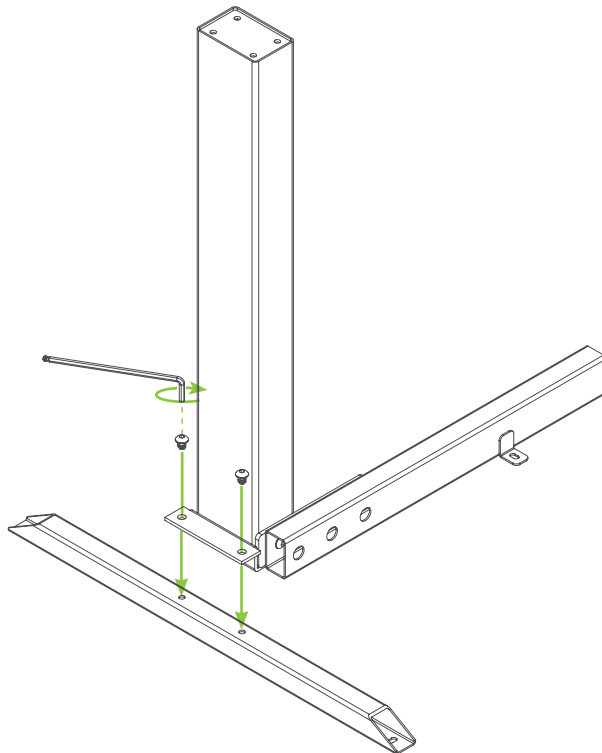



Step 3

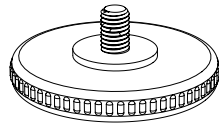


4 x Levelling Foot

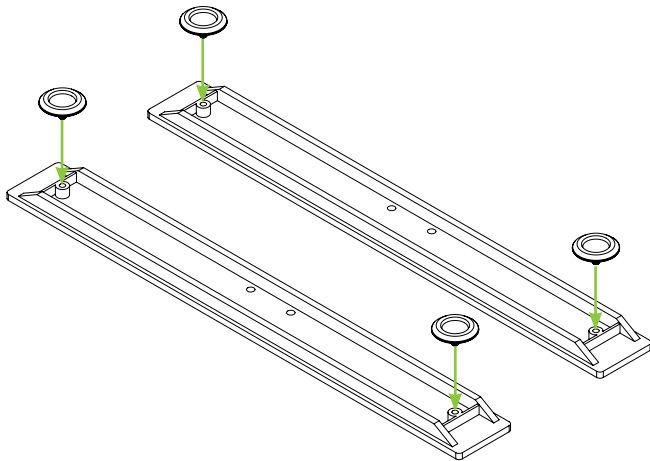

8 x M8x25

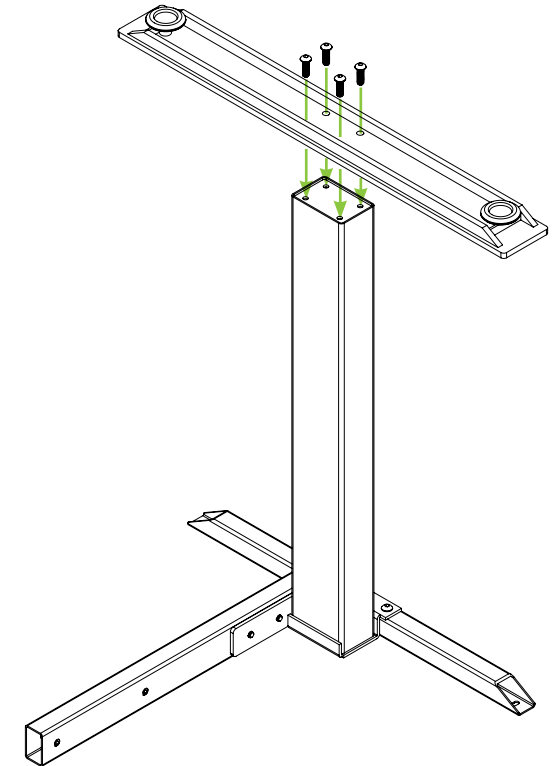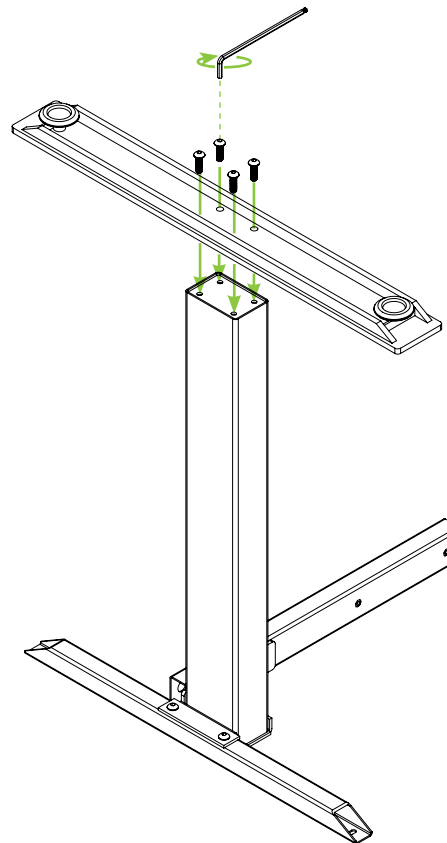


Step 4

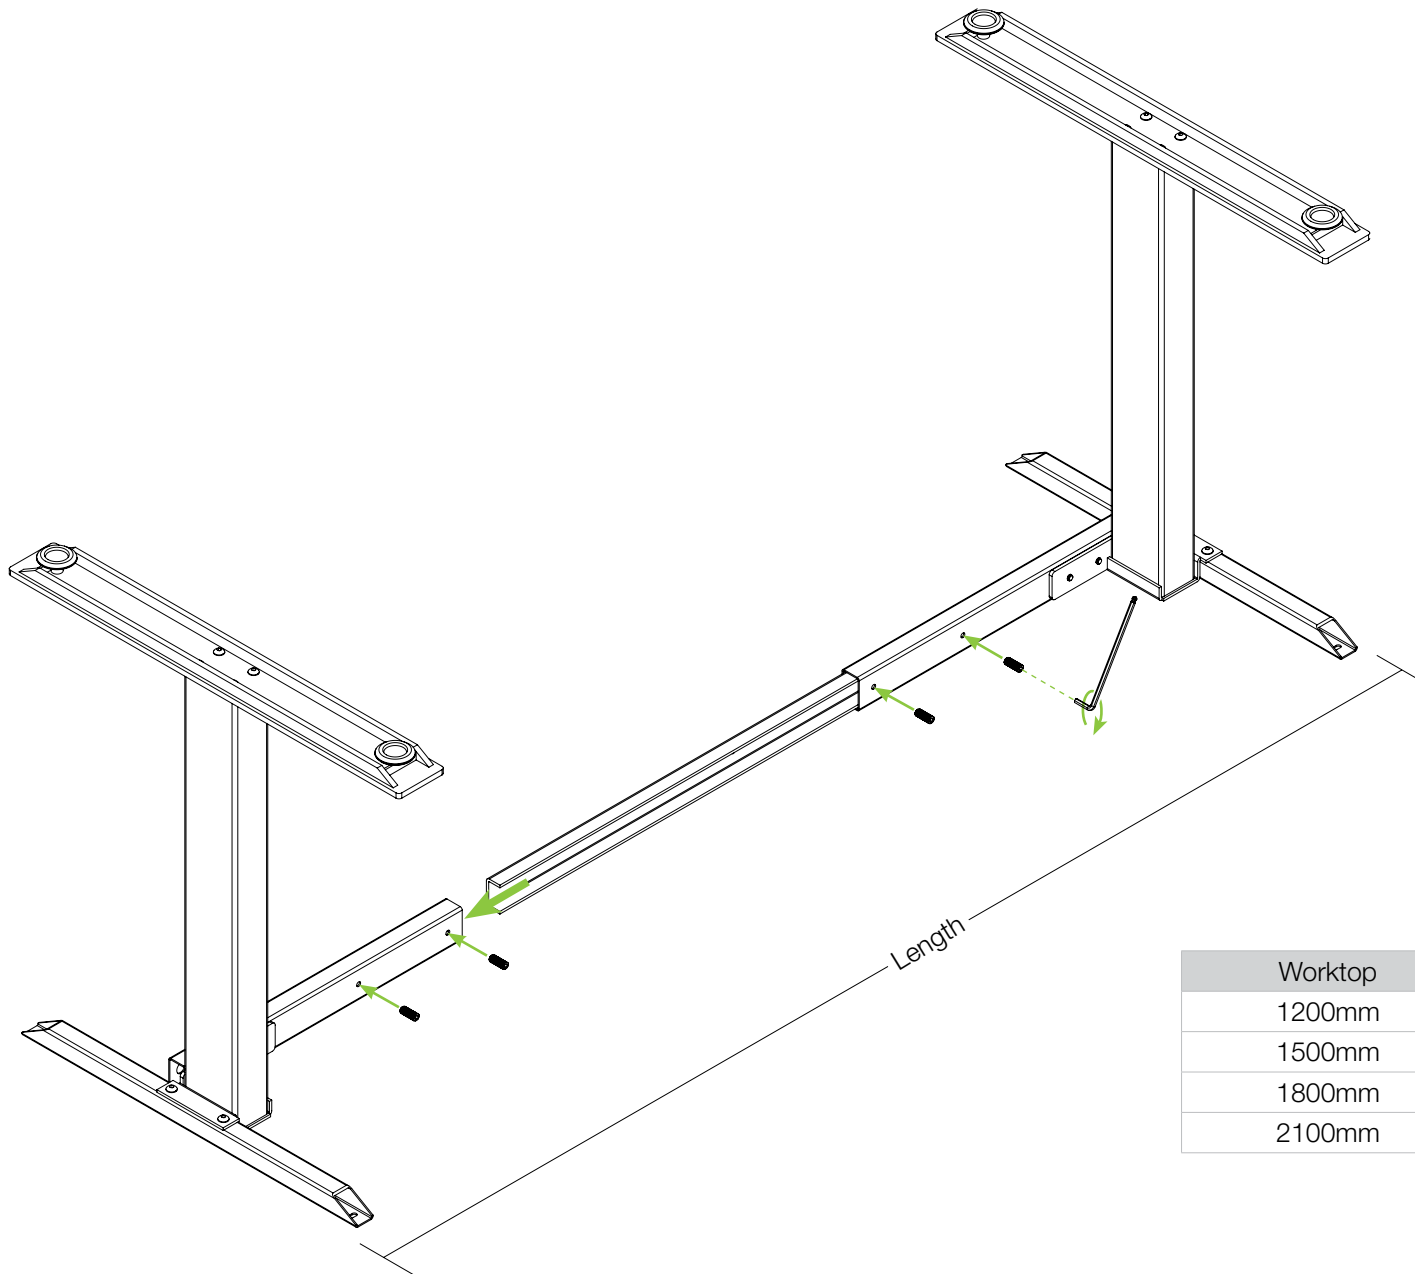


Worktop	Length
1200mm	1125mm
1500mm	1425mm
1800mm	1725mm
2100mm	2025mm


Step 5



6 x ST5.0x23

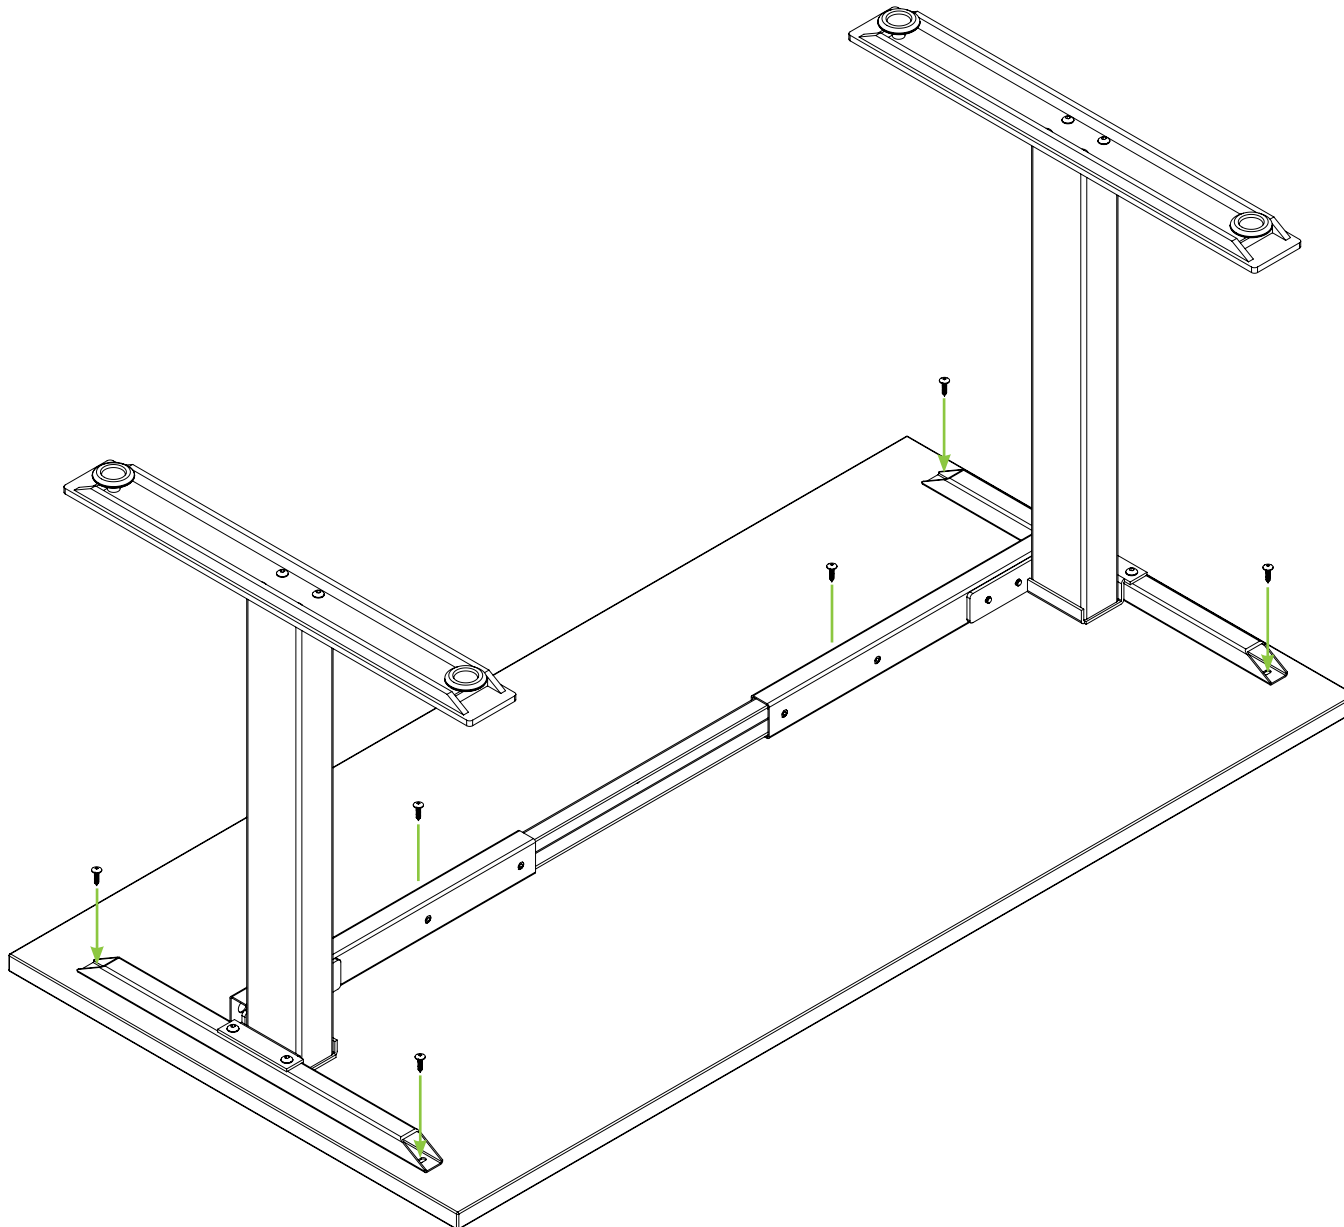

Completed

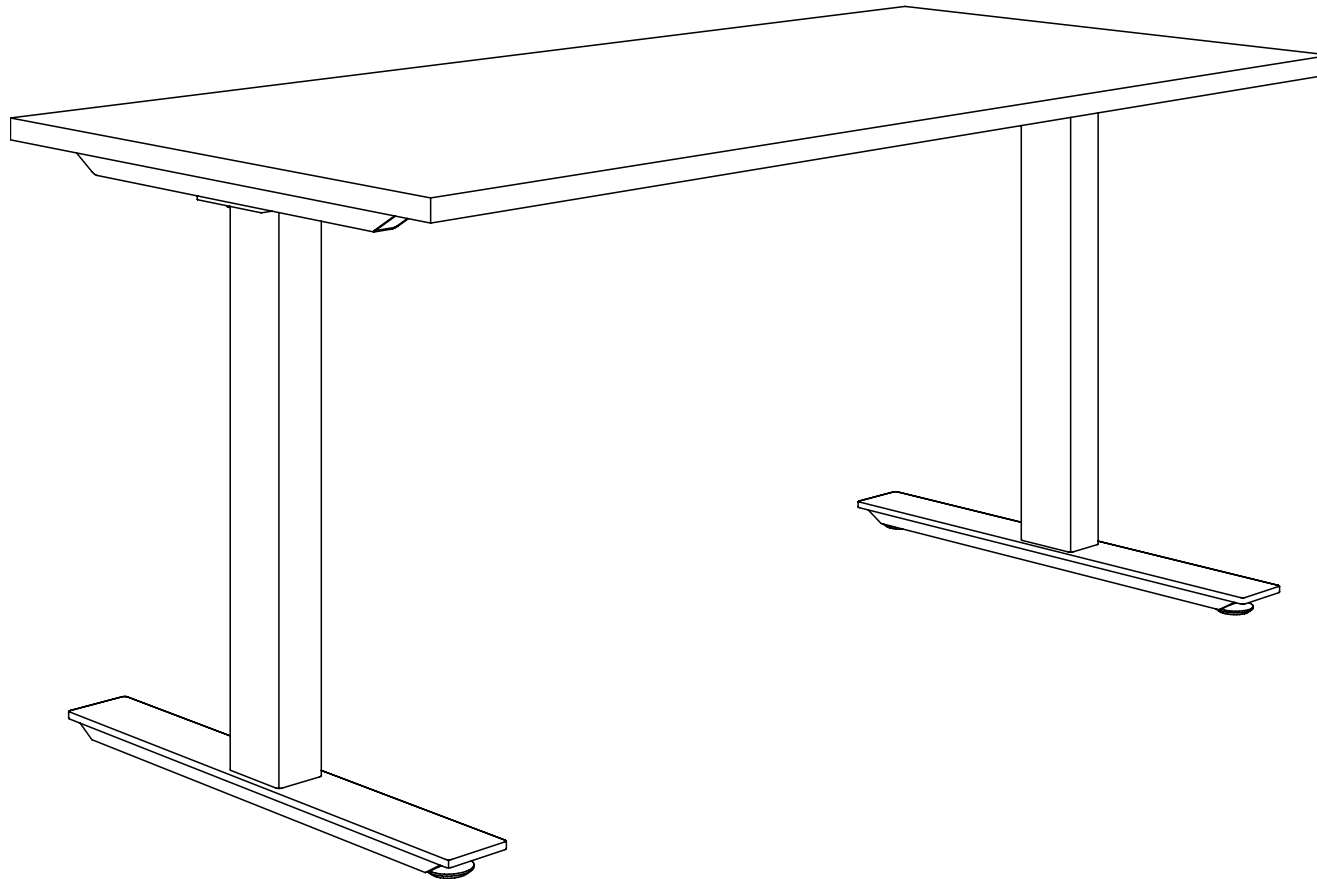


Optional Desk Hung Screen

Installation Guide

Page 9


Step 1

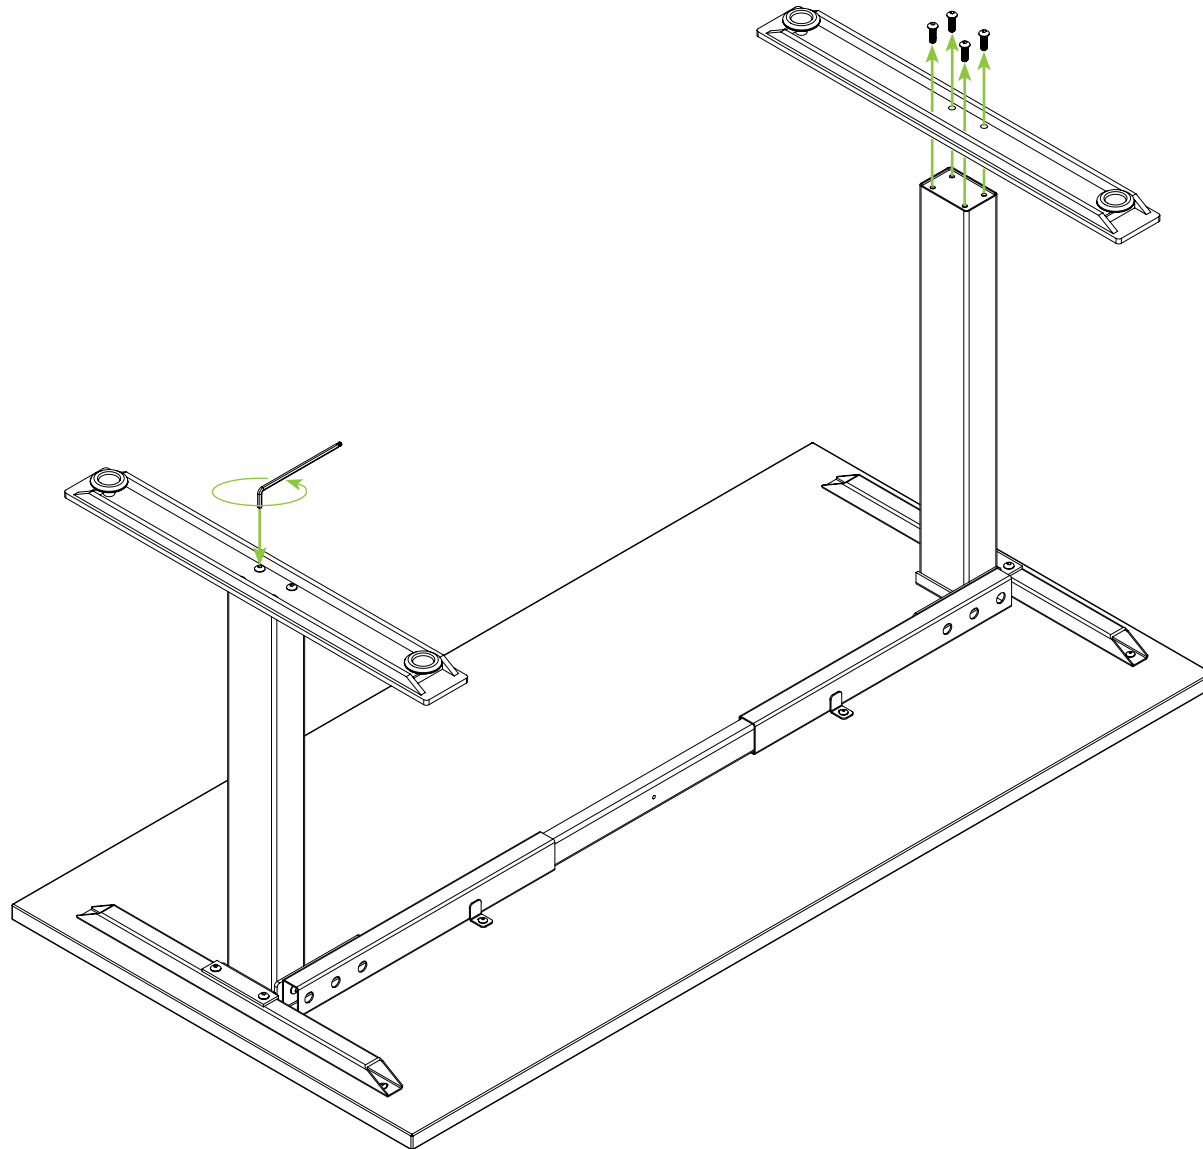

Optional Desk Hung Screen

Installation Guide

Step 2

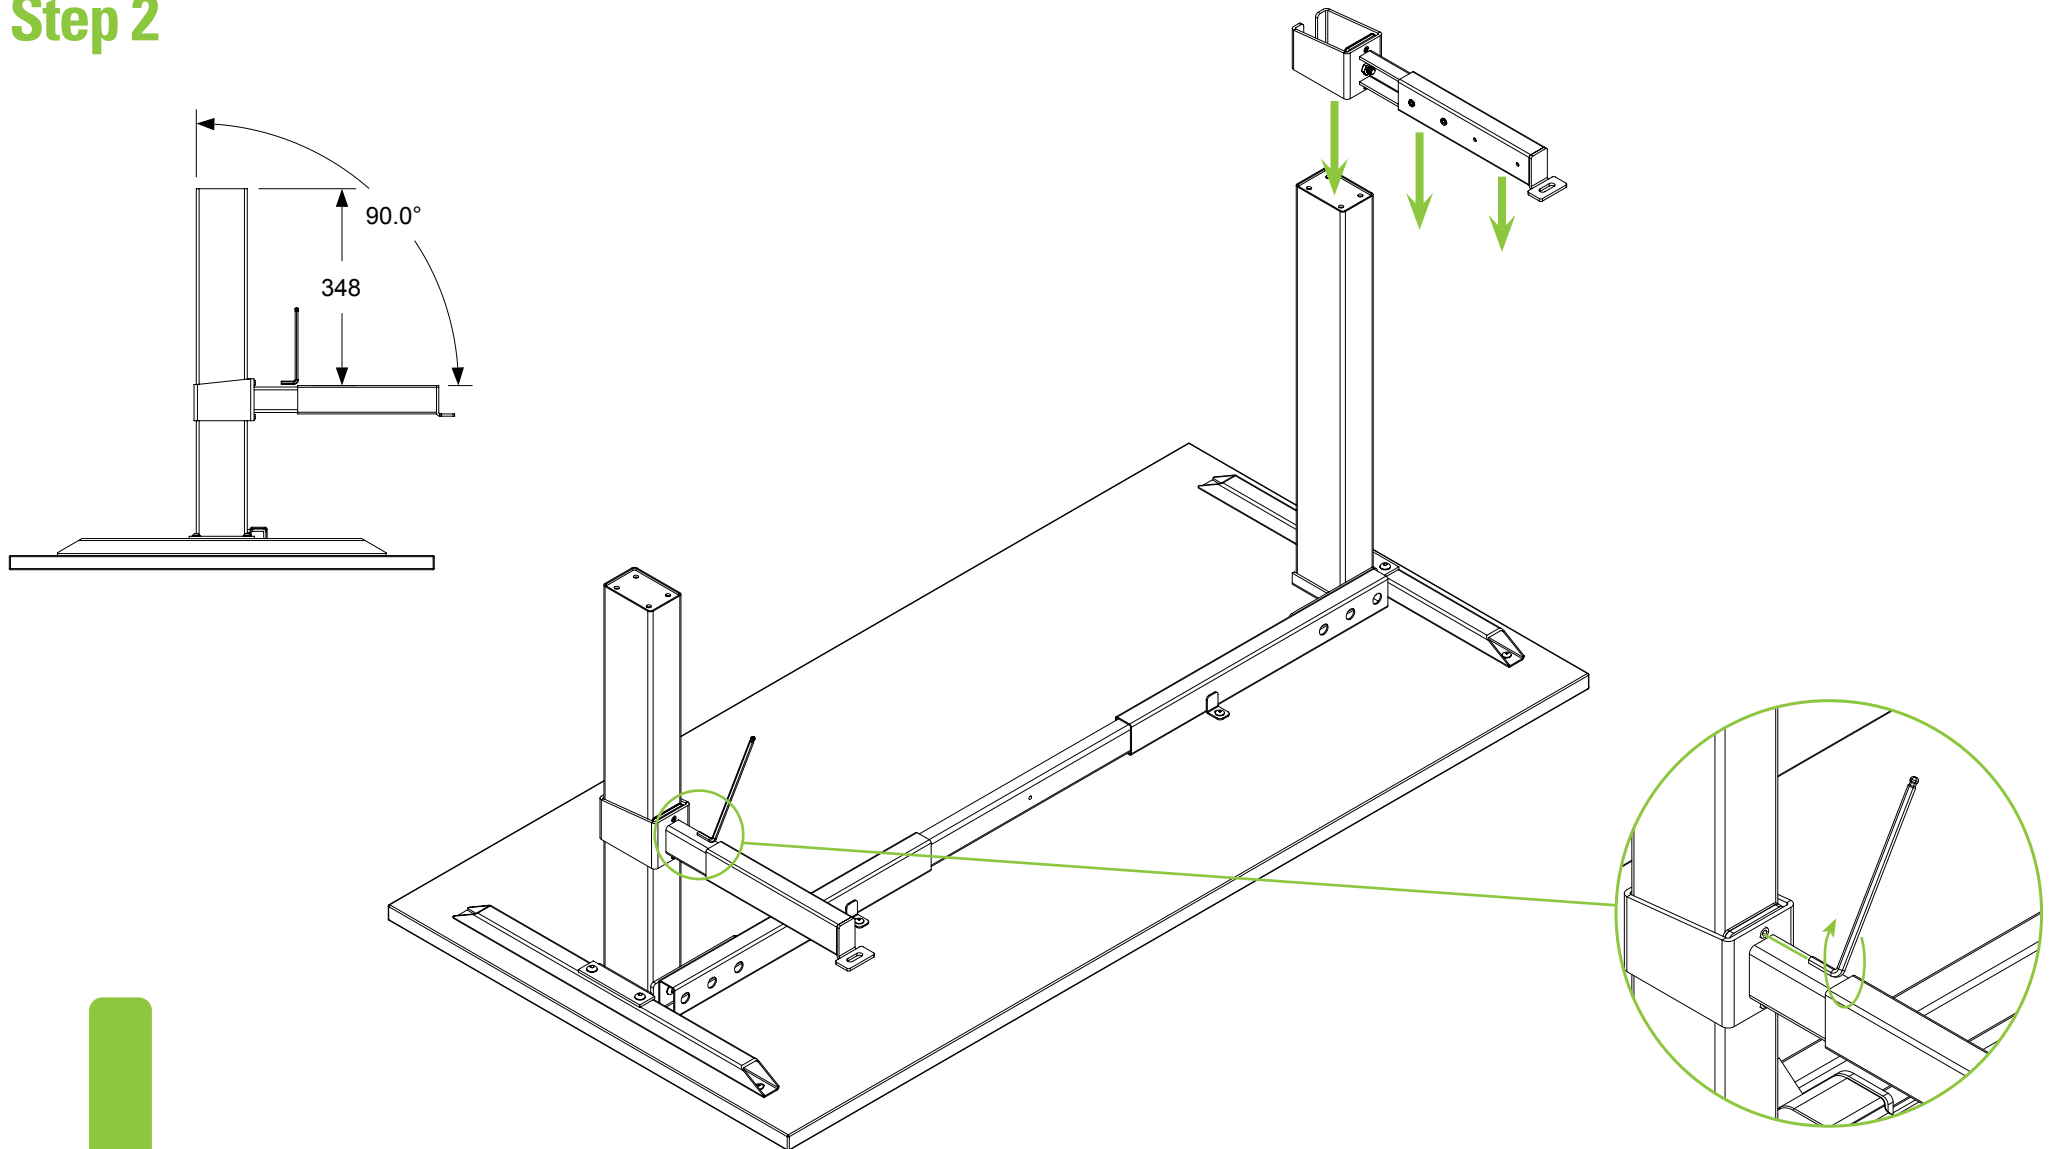


Optional Desk Hung Screen

Installation Guide

Page 11

Step 3

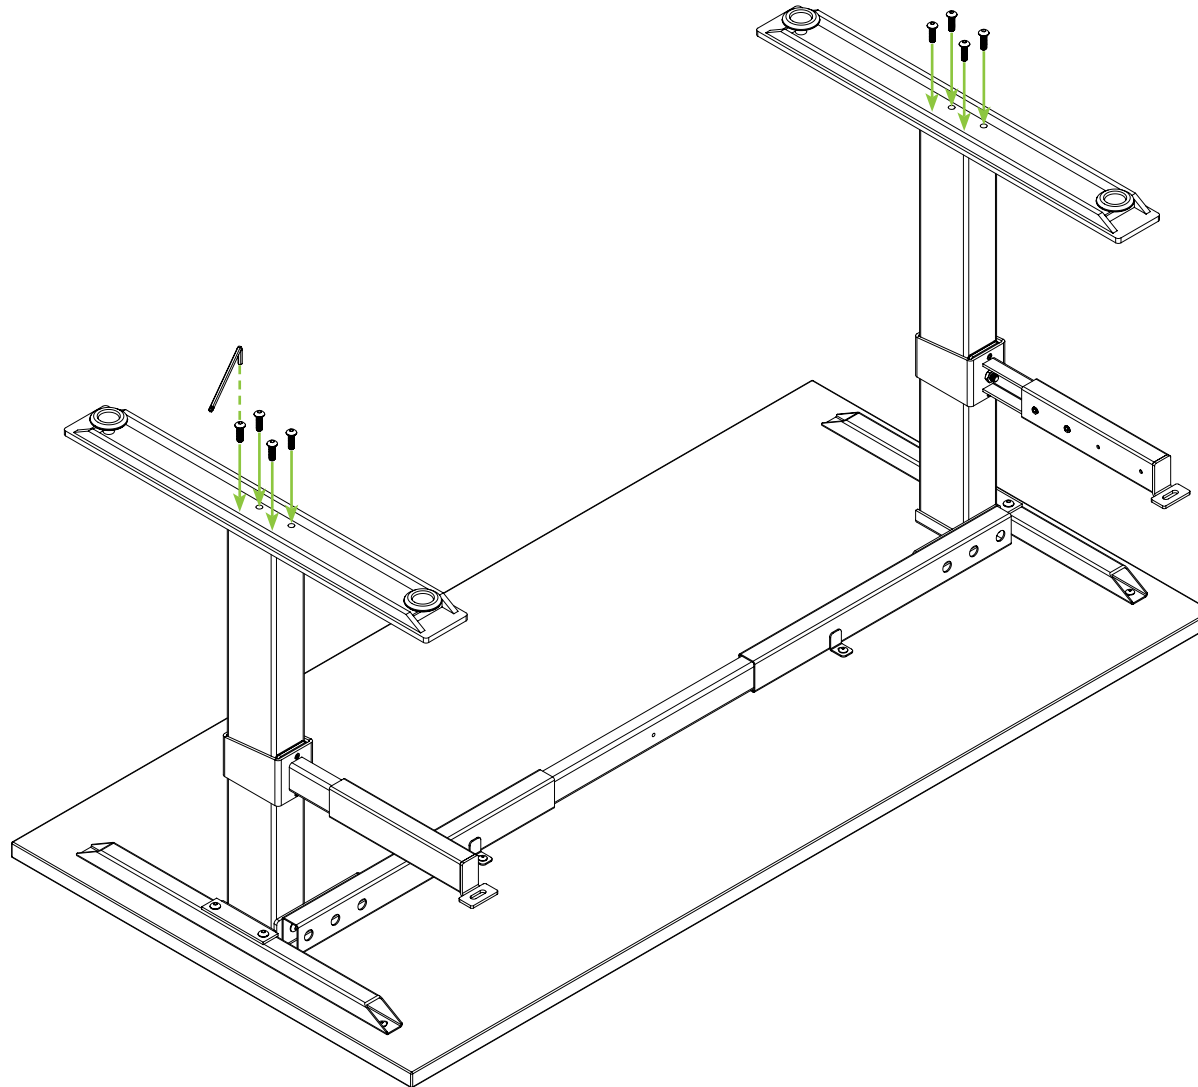


Optional Desk Hung Screen

Installation Guide

Page 12

Step 4

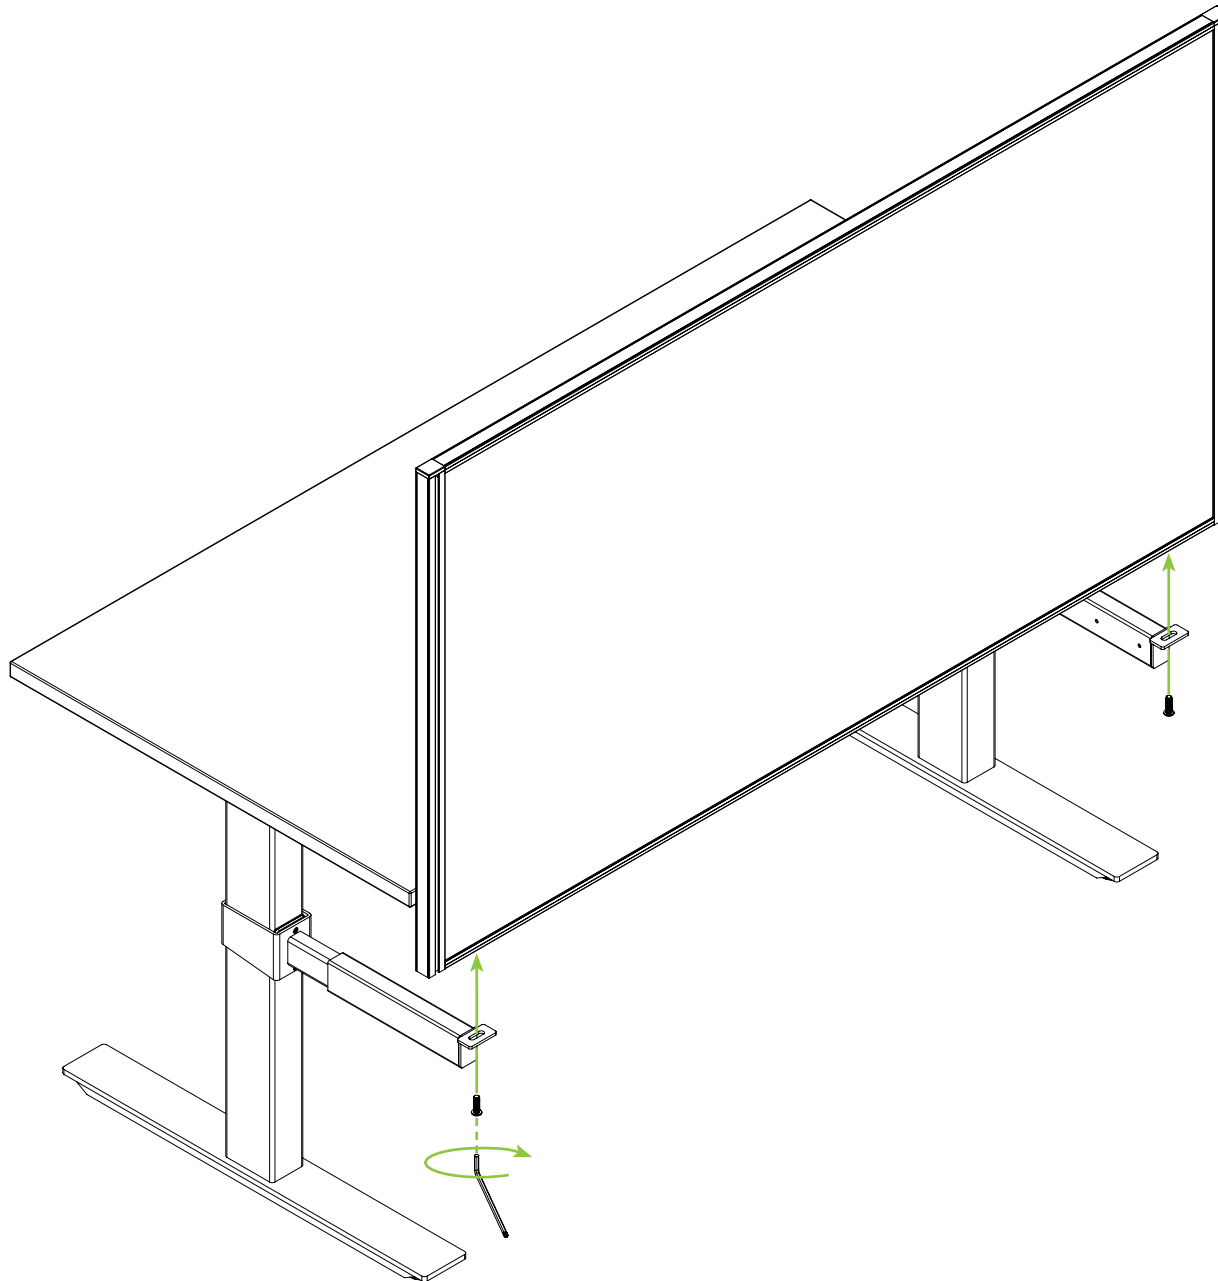


Optional Desk Hung Screen

Installation Guide

Page 13



Step 5

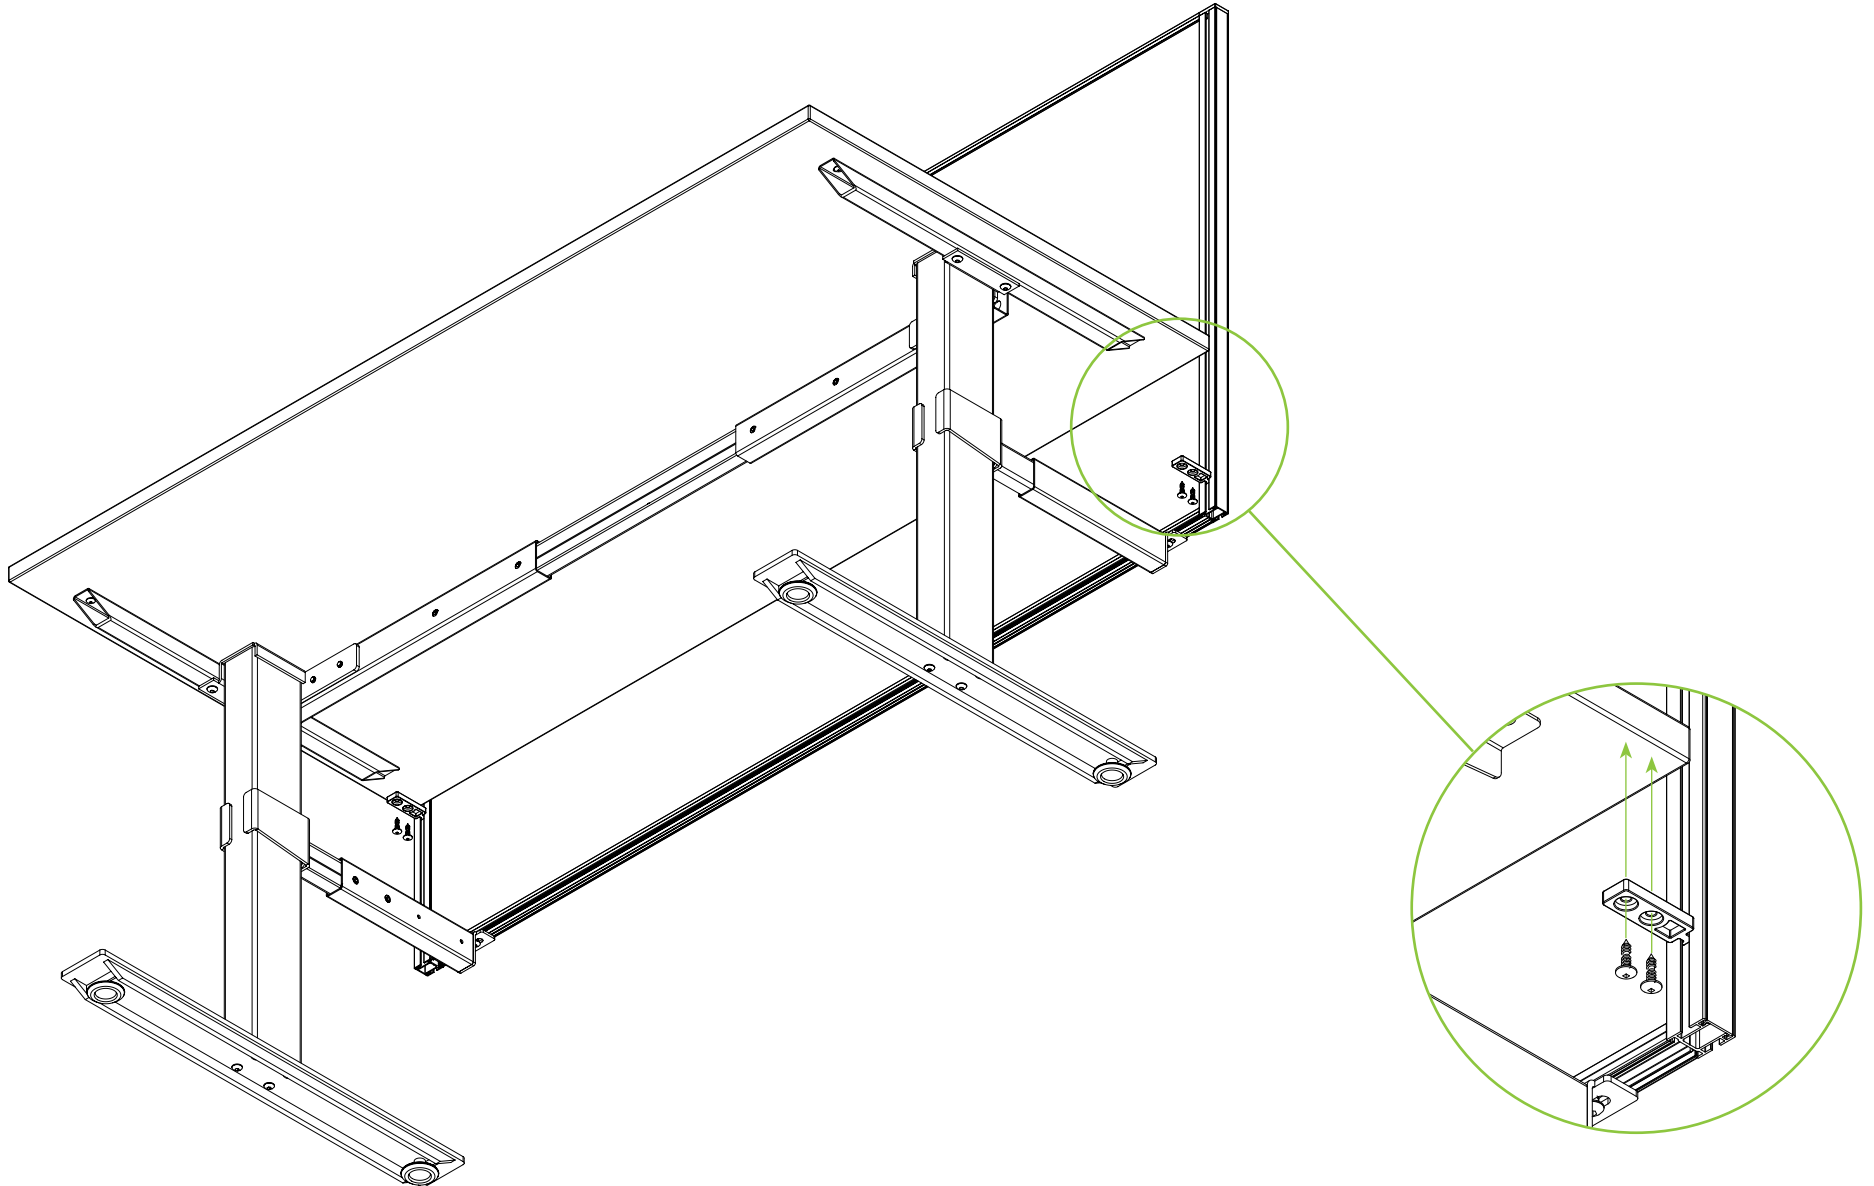


Optional Desk Hung Screen

Installation Guide

Step 6

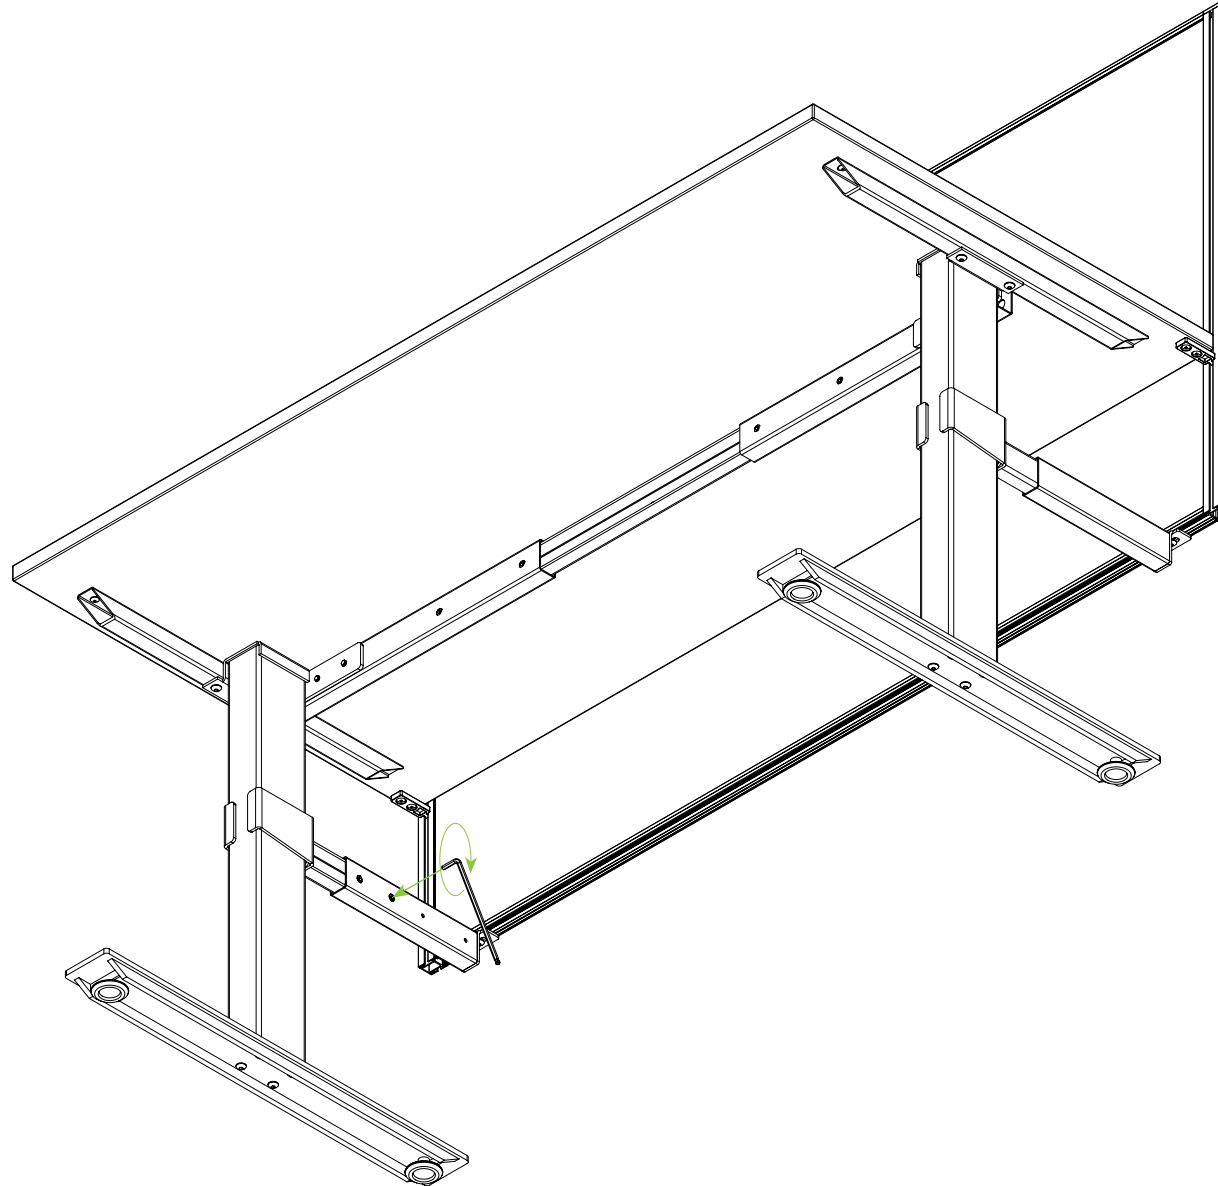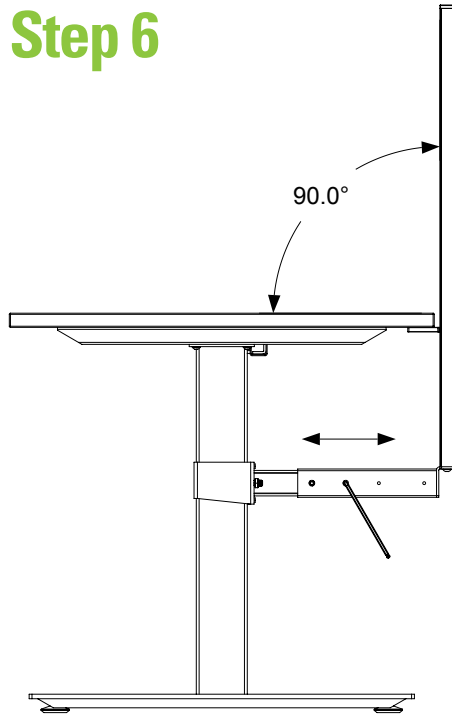


Step 1

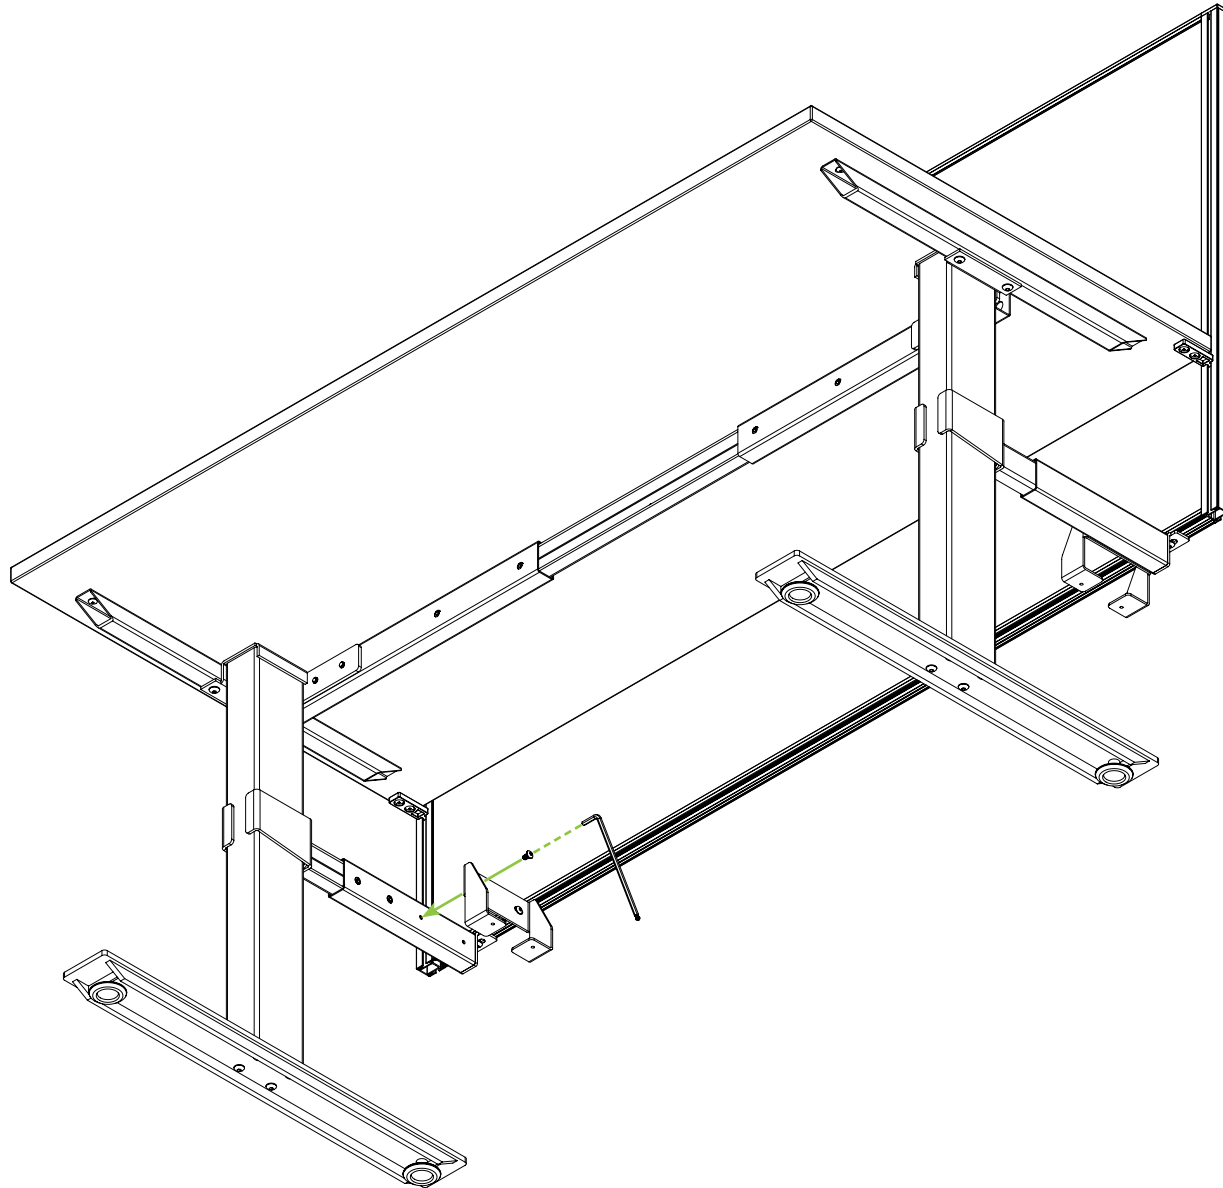


Step 2




4 x M5x6

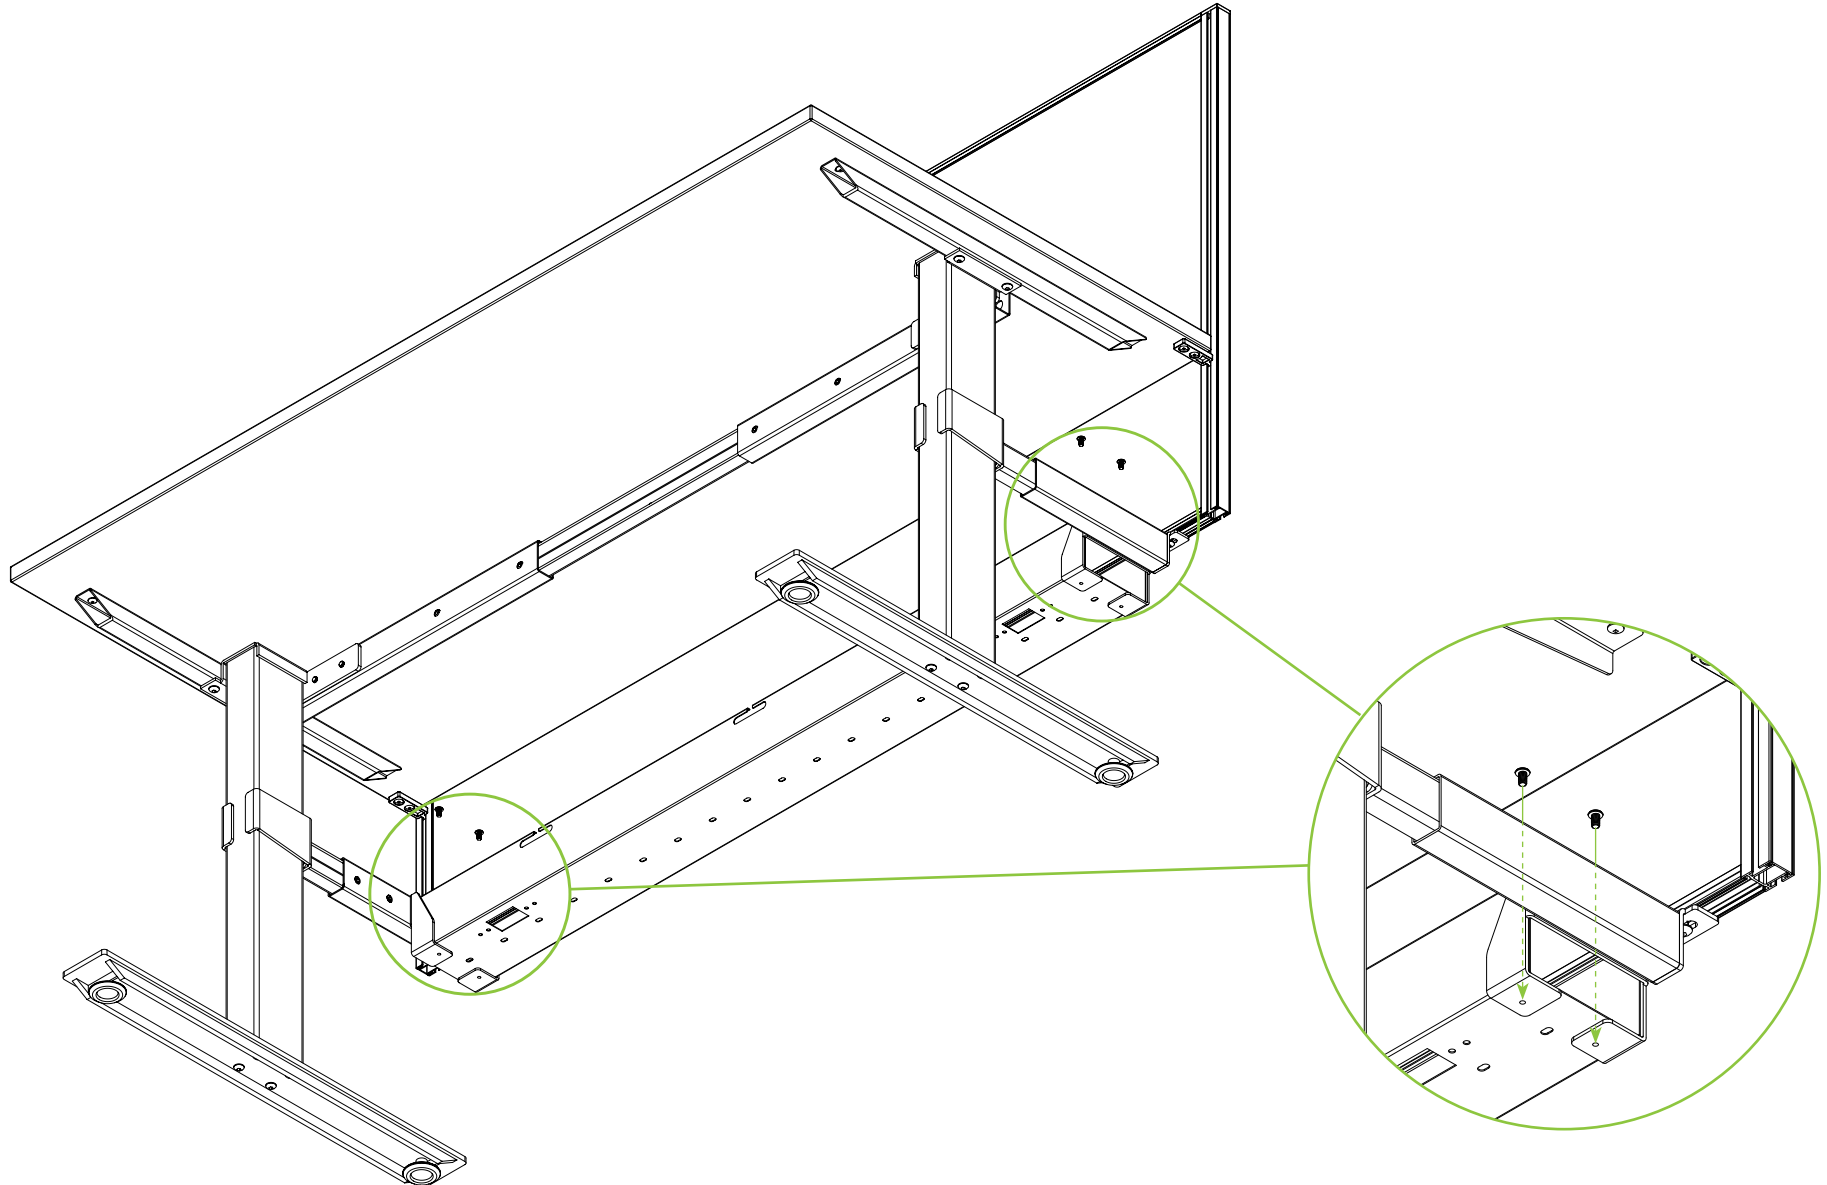

Step 1 & 2

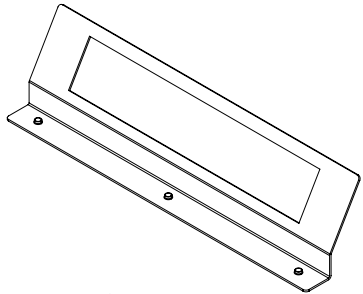



1 x Power Plate

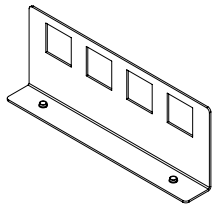

1 x Data Plate



5 x Screw

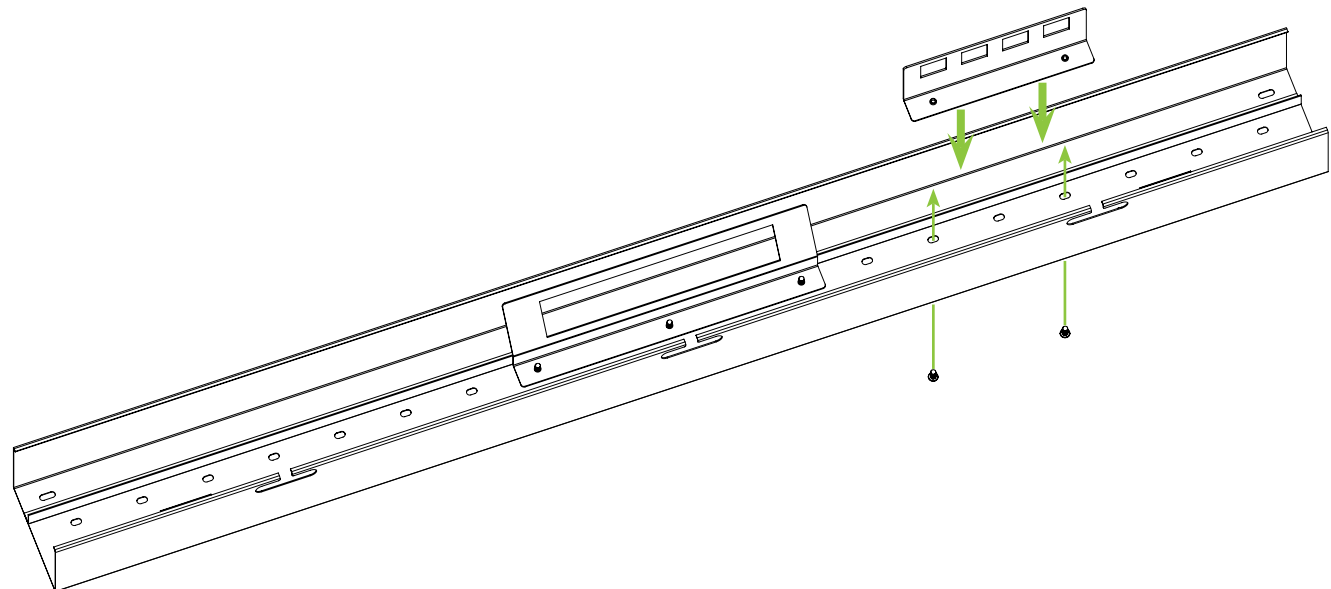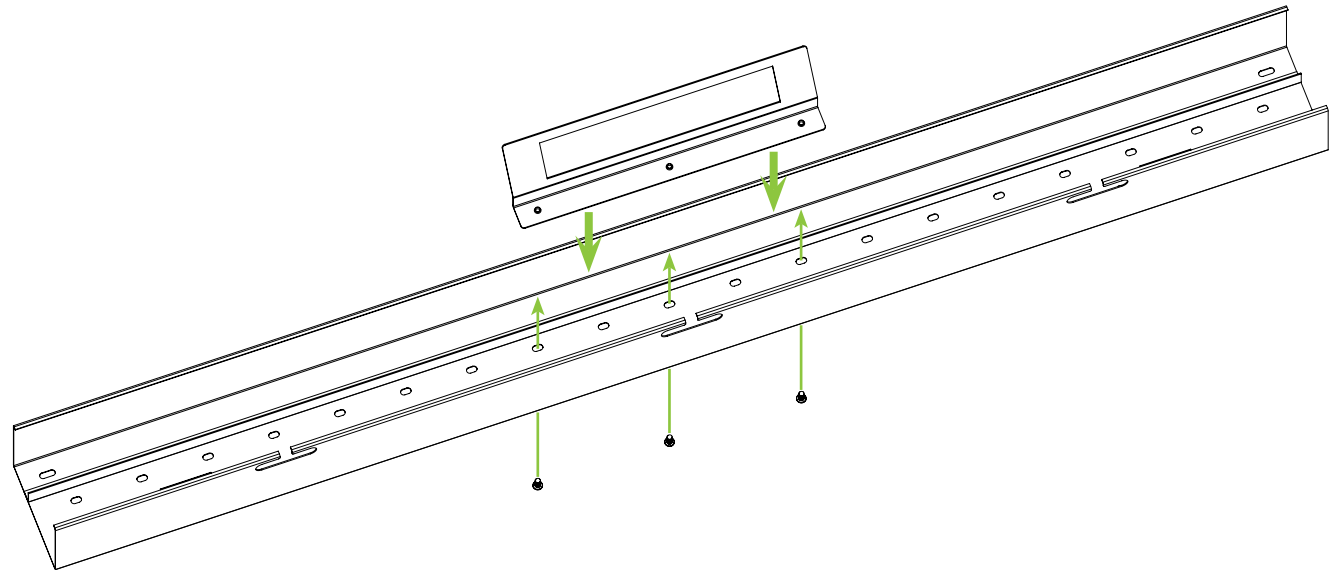

Step 3 & 4

