


Cubit Cupboard (1800mm High)



















Assembly Instructions

Tools Required: Powered screwdriver.

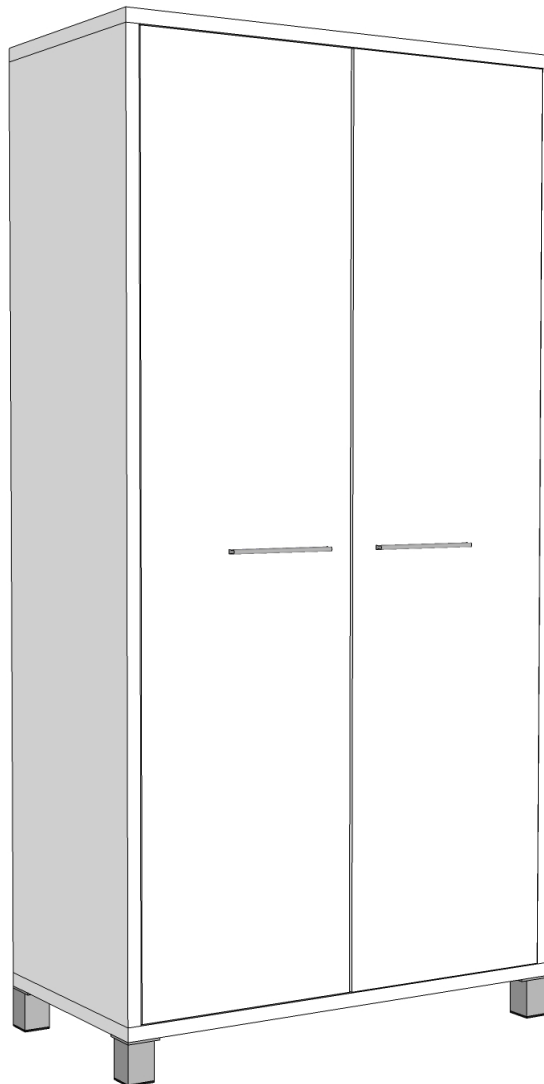


Assembly Instructions

· To prevent possible scratches or damage, assemble the cupboard on a soft surface such as a blanket, carpet or packaging.

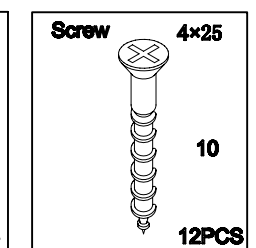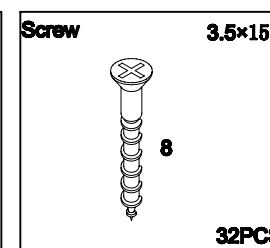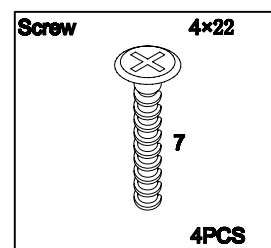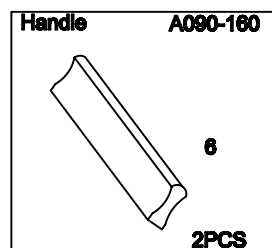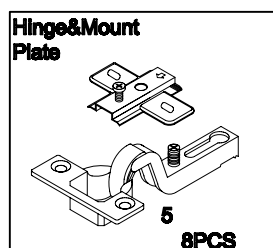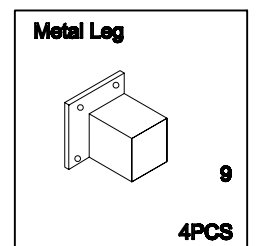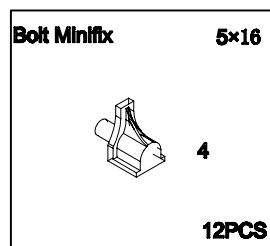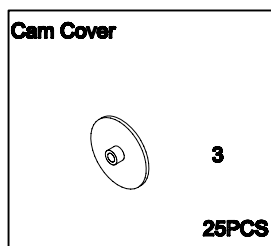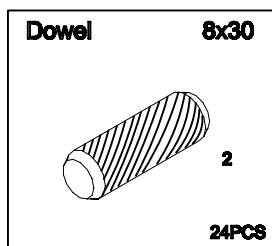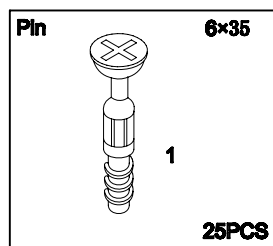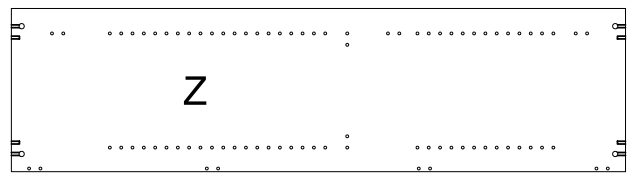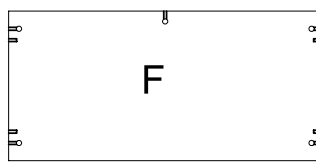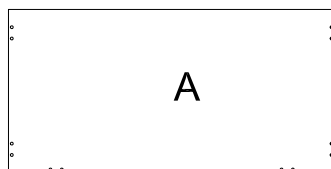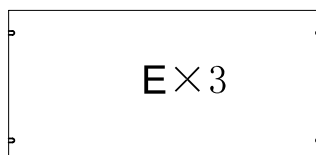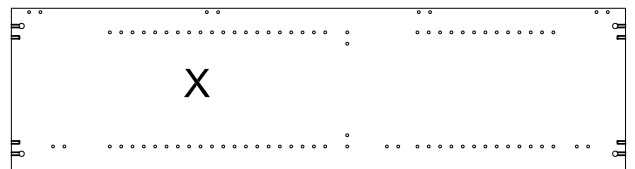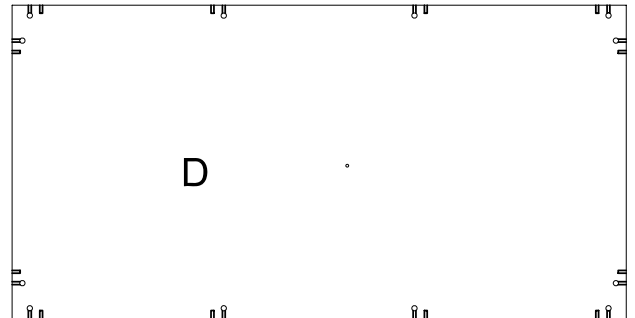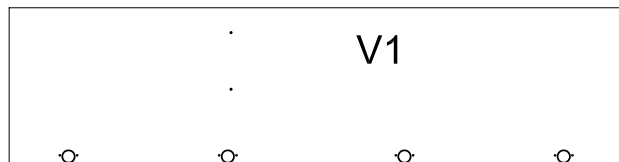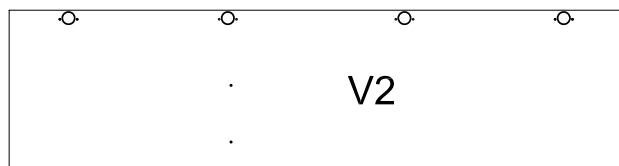


Assembly Instructions

Step 1

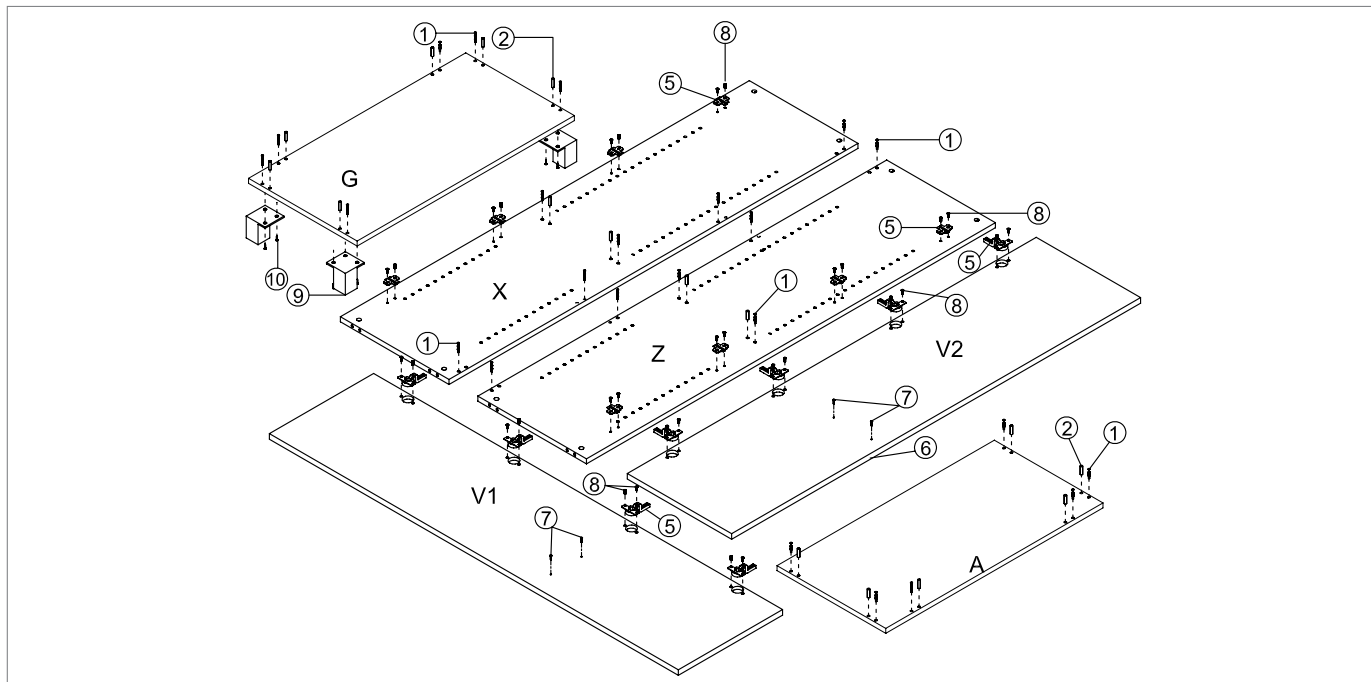


Step 2

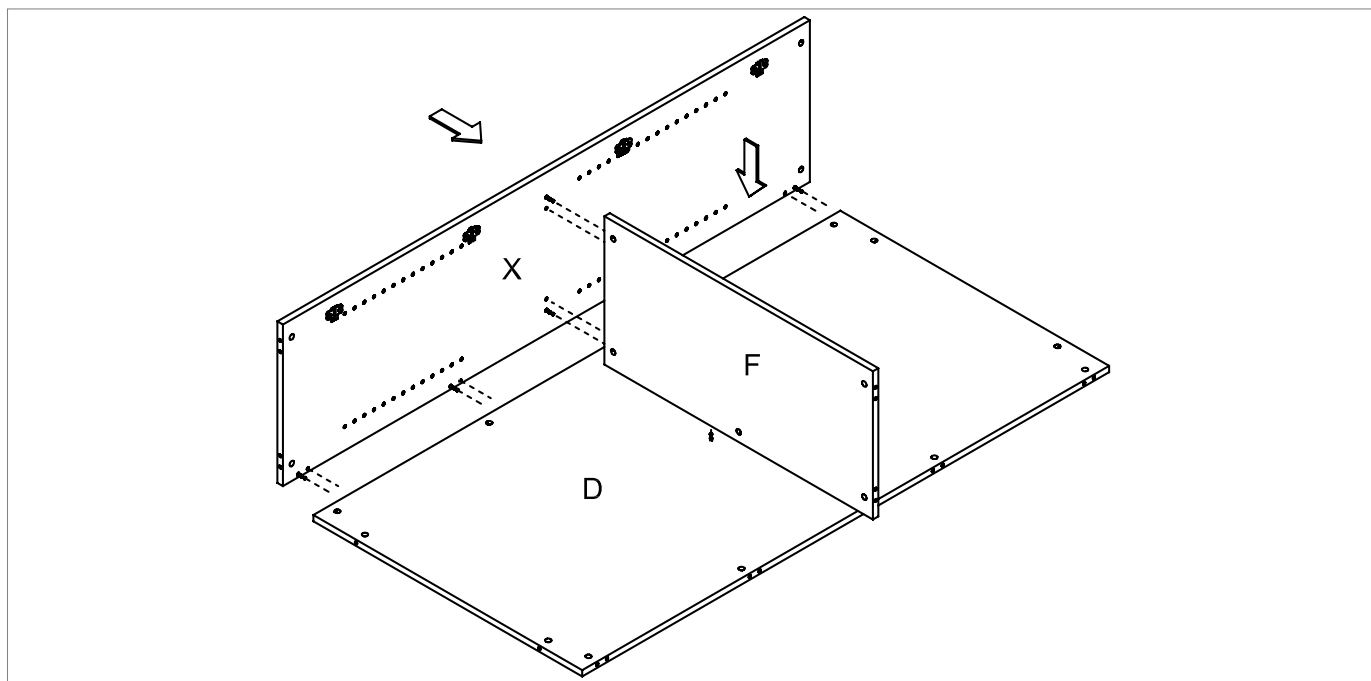


Assembly Instructions

Step 3

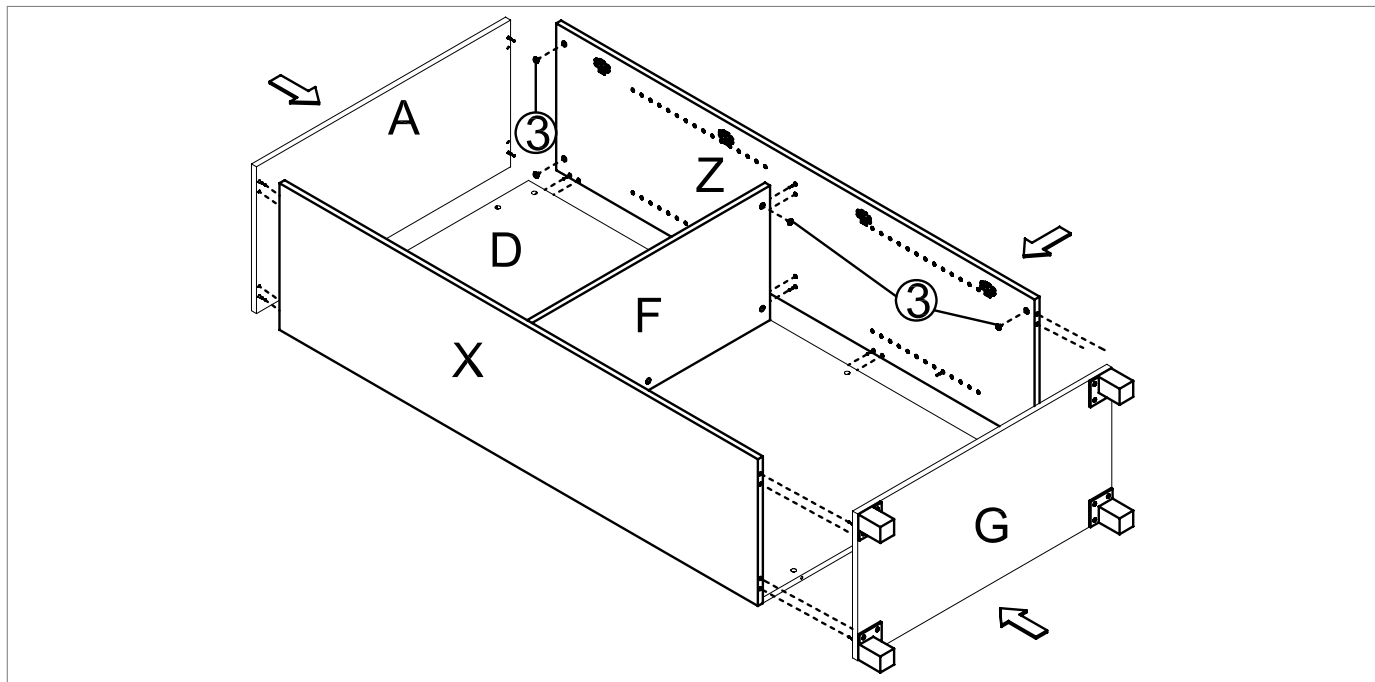


Step 4

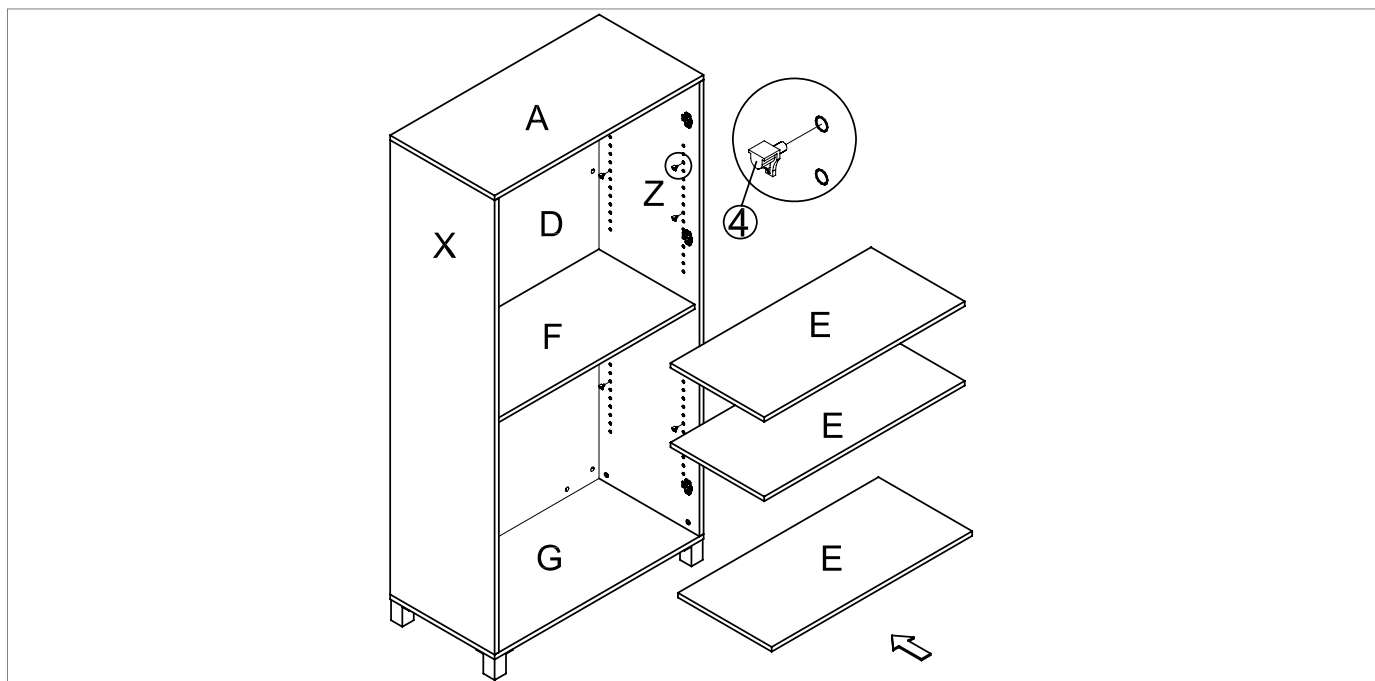


Assembly Instructions

Step 5

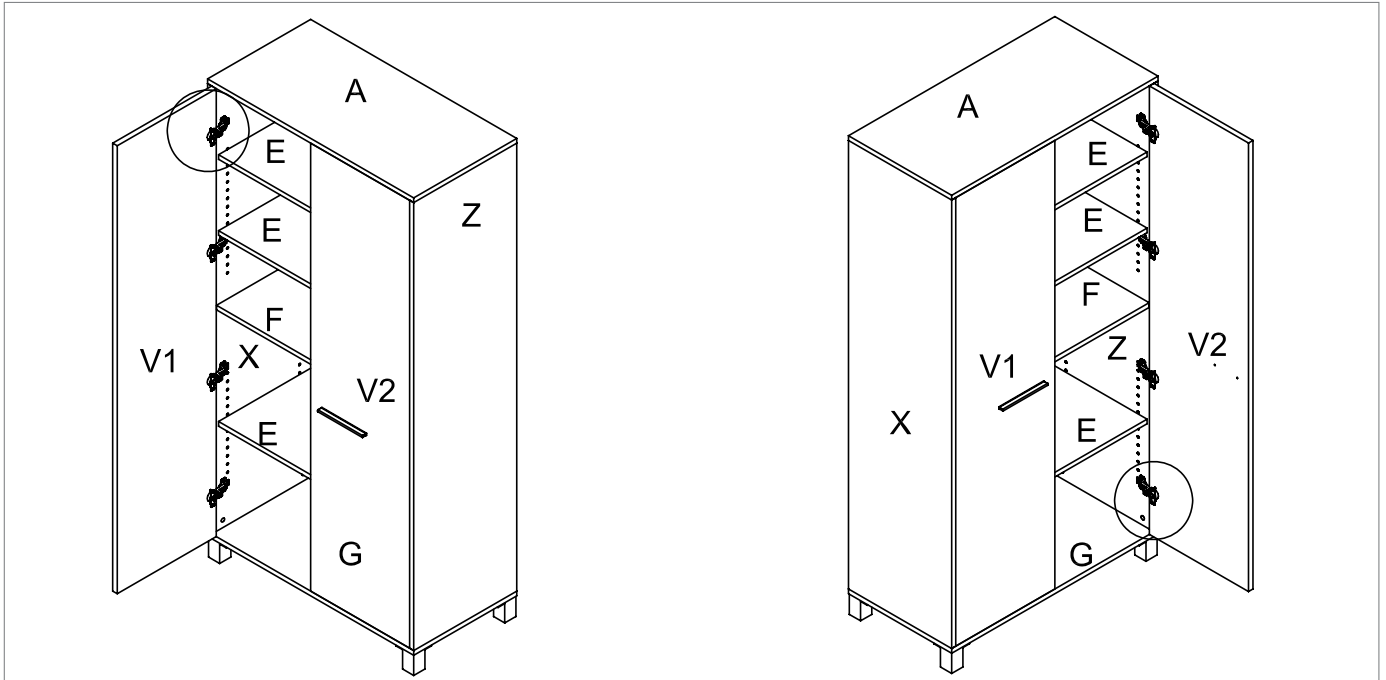

Step 6

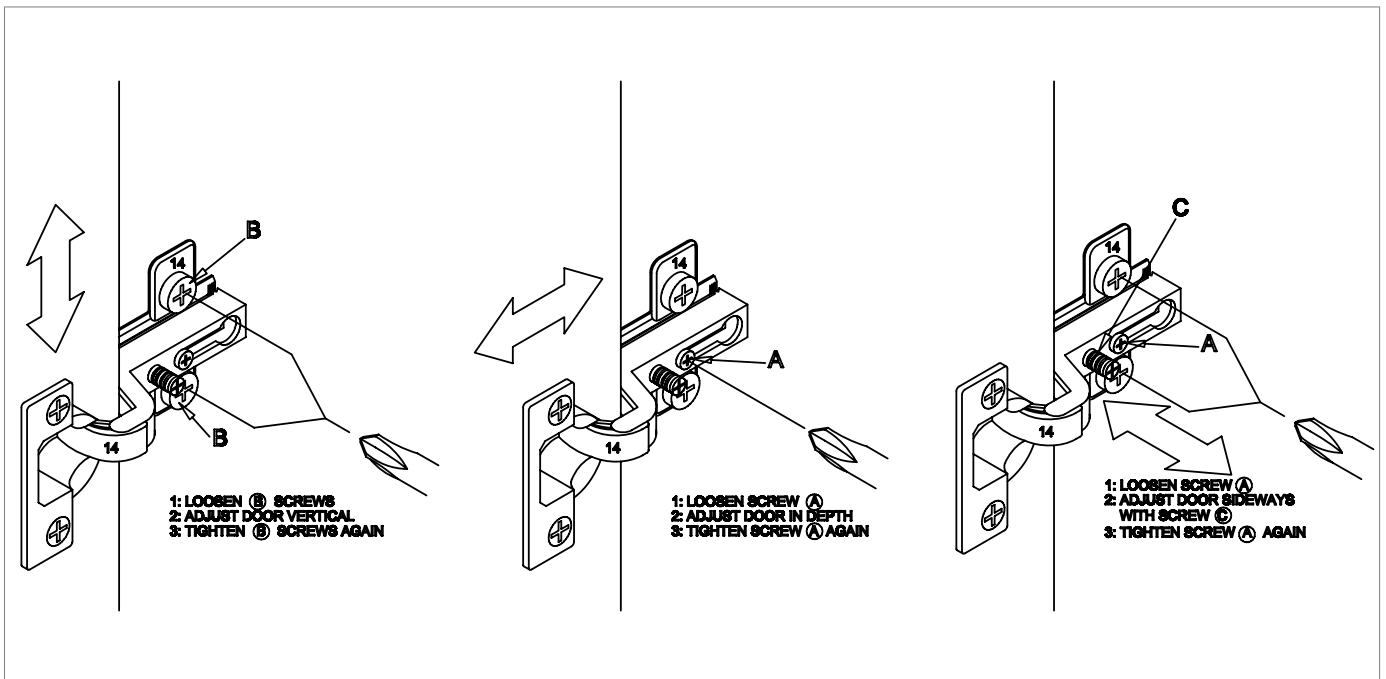

Assembly Instructions

Completed

