

# *Ergoplan Credenza*

## **Assembly Instructions**

---


**Tools Required:** Powered screwdriver.



## Assembly Instructions

---


· To prevent possible scratches or damage, assemble the credenza on a soft surface such as a blanket, carpet or packaging.

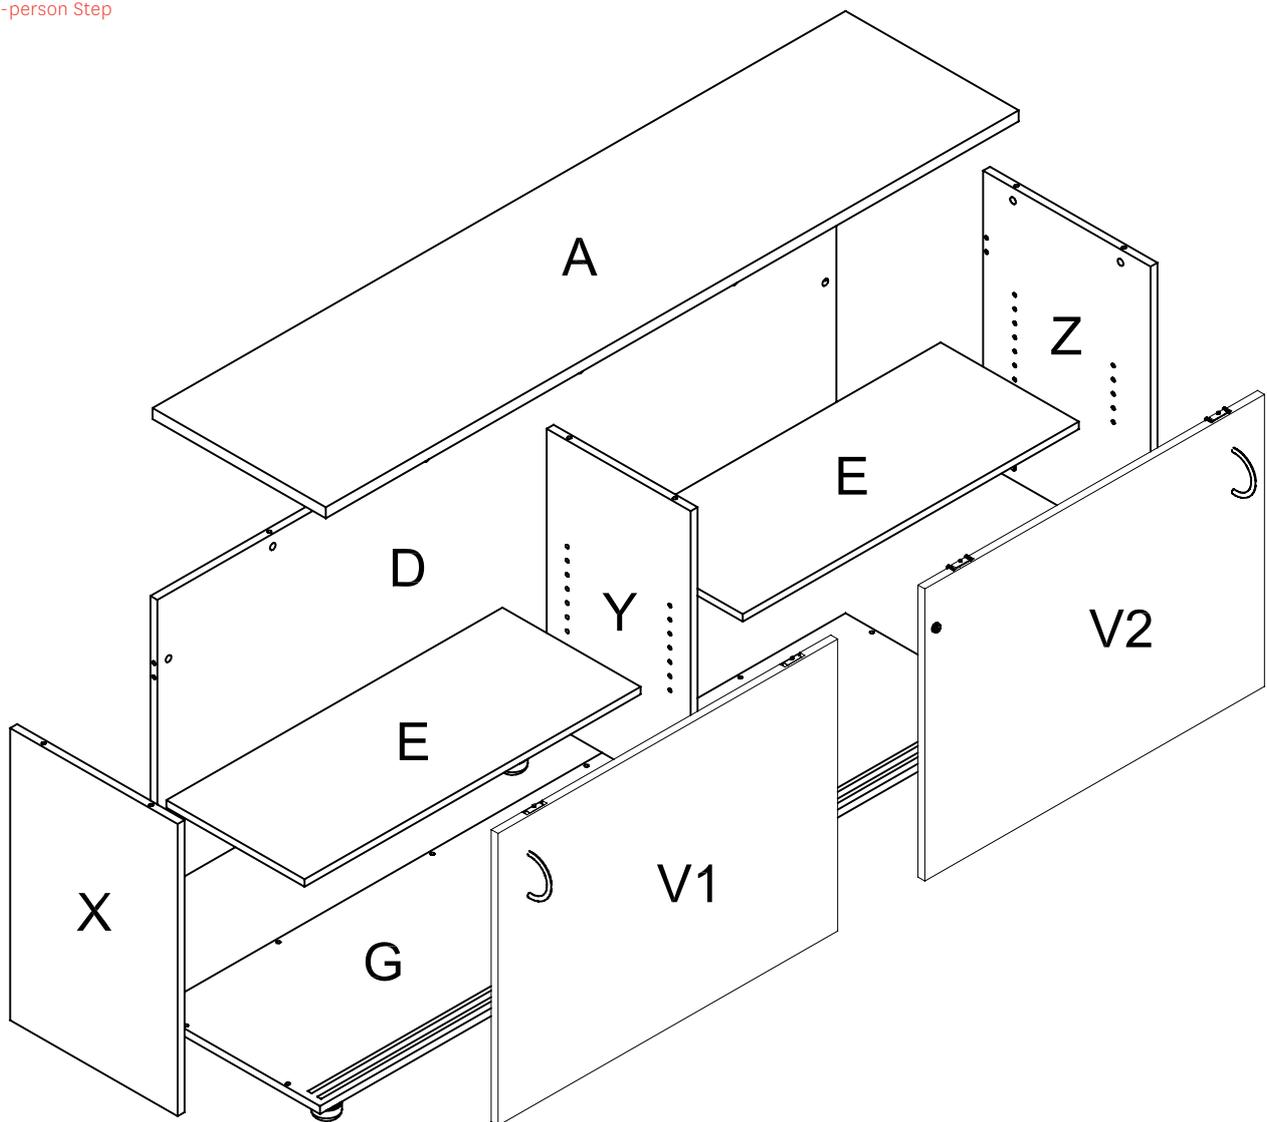

## Assembly Instructions

### Pre-installed parts

### PARTS LIST

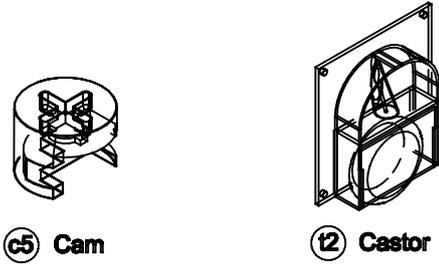

**(c5) Cam**

**(t2) Castor**

Item	Description	Quantity	Item	Description	Quantity
A	Top Panel	1	c1	6x35 Cam Bolt	24
X	Left side panel	1	d1	8x30 Dowel Pin	24
Z	Right side panel	1	c2	(5/8") Cam Cover	24
D	Back panel	1	p1	Threaded Dowel Pin	8
G	Bottom panel	1	s7	4x22 Fix Bolt	4
V1	Left Door panel	1	h3	Handle	2
V2	Right Door panel	1	s1	3.5x15 Screw	10
E	Moveable shelf	2	b1	Bracket	2
Y	Vertical panel	1	c6	Cushion	6
			s2	3.5x35 Screw	6
			k3	Lock	1



**(c1) 6x35 Cam Bolt-24**

**(d1) 8x30 Dowel Pin-24**

**(c2) (5/8") Cam Cover-24**

**(p1) Threaded Dowel Pin-8**

**(s7) 4x22 Fix Bolt-4**




**(h3) Handle-2**

**(c6) Cushion- 6**

**(s2) 3.5x35 Screw-6**

**(s1) 3.5x15 Screw-10**

**(b1) Bracket- 2**

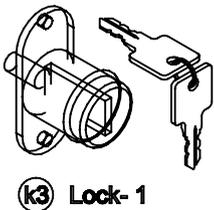


**(k3) Lock- 1**

## Assembly Instructions

### Step 1


Preparation for credenza top panel A, credenza bottom panel G, left side panel X, right side panel Z, door panel V1 and V2.

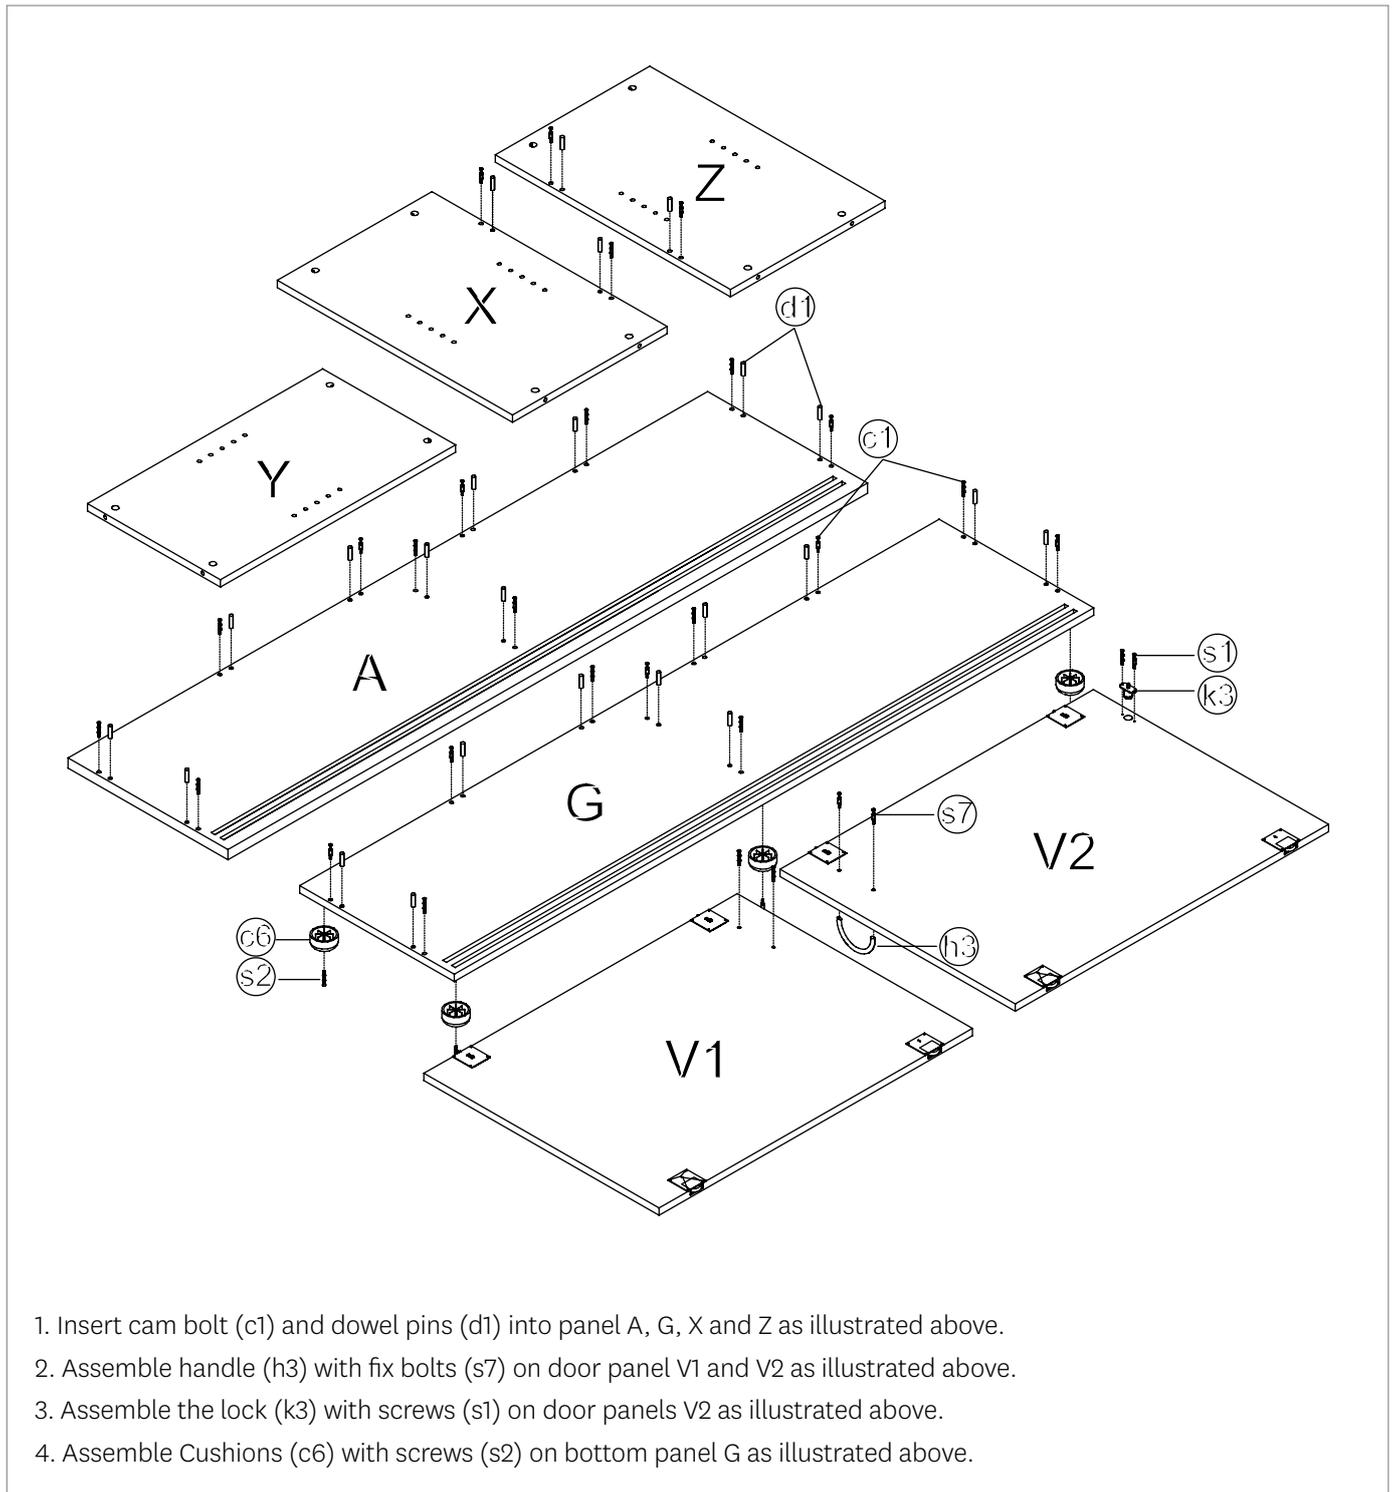

## Assembly Instructions


### Step 2

Insert cam bolt (c1) on panels X, Z into cams on panel D and fully tighten. Fix cams on panel Y, D, X and Z into cam bolts (c1) on panel A and fully tighten.

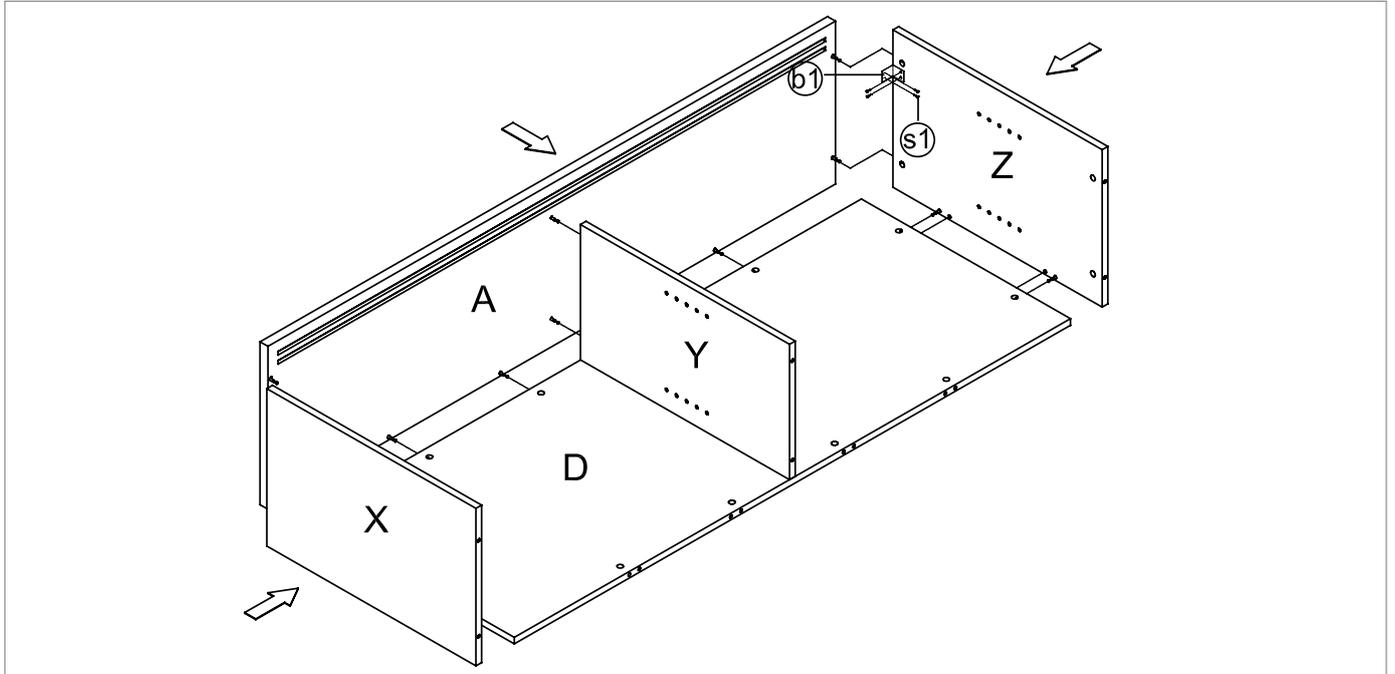

### Step 3


Insert cam bolt (c1) on panel G into cams on panel X, Z, Y and D and fully tighten. Then place the cam covers (c2) on the top of cams.

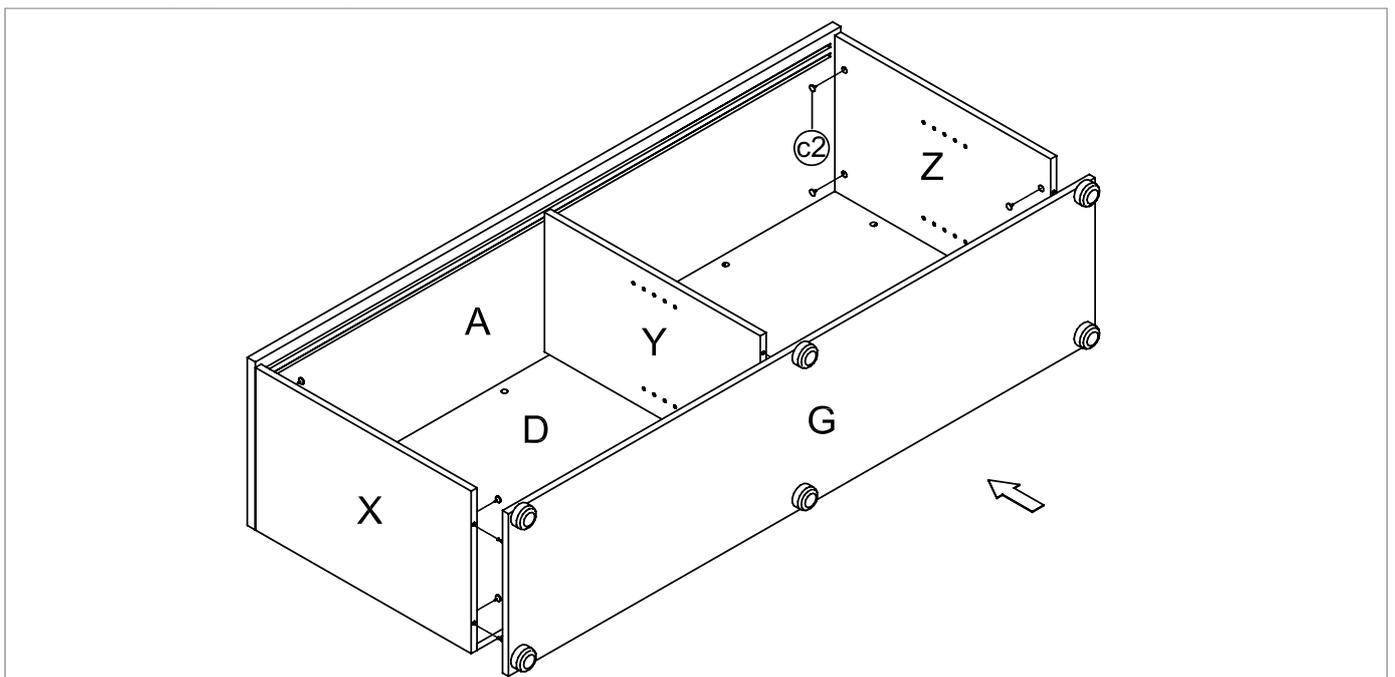

## Assembly Instructions


### Step 4

Insert threaded dowel pins (p1) into panel X, Z and Y, put the two panels E on the top of threaded dowel pins (p1) as illustrated above.

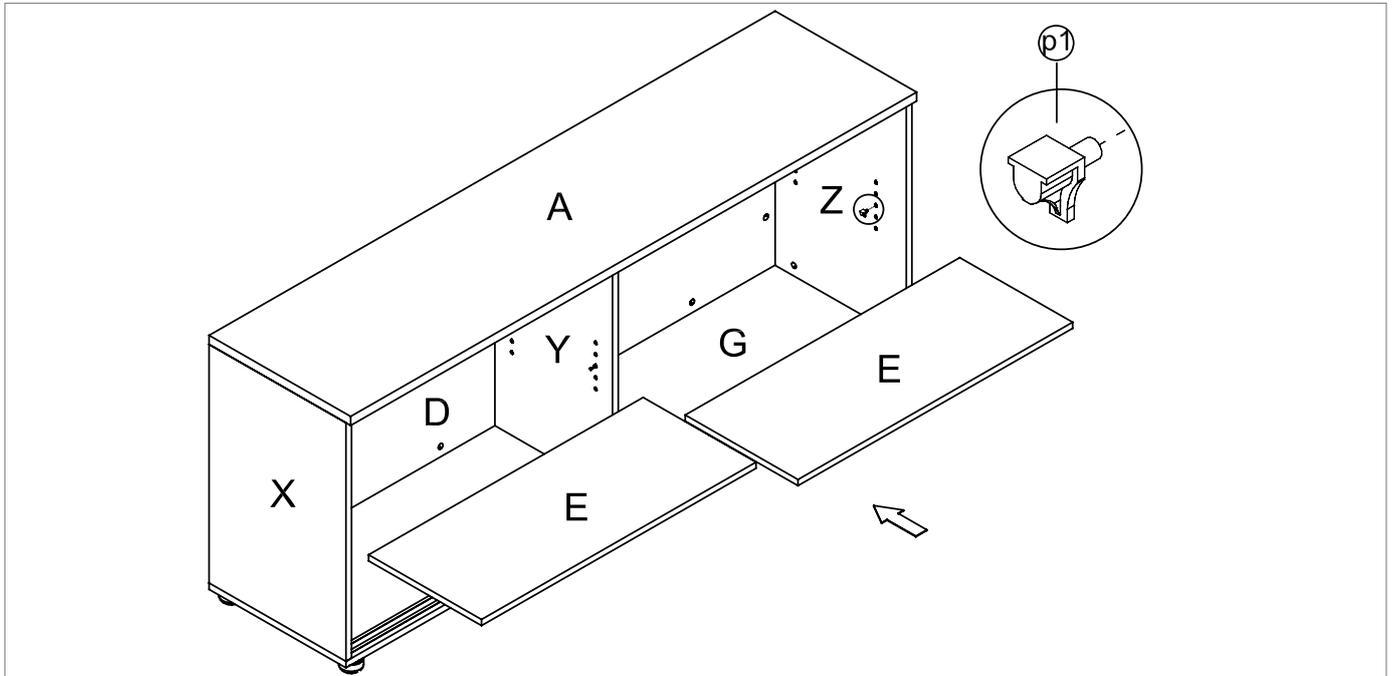

### Step 5

Assembly credenza door V1 and V2.

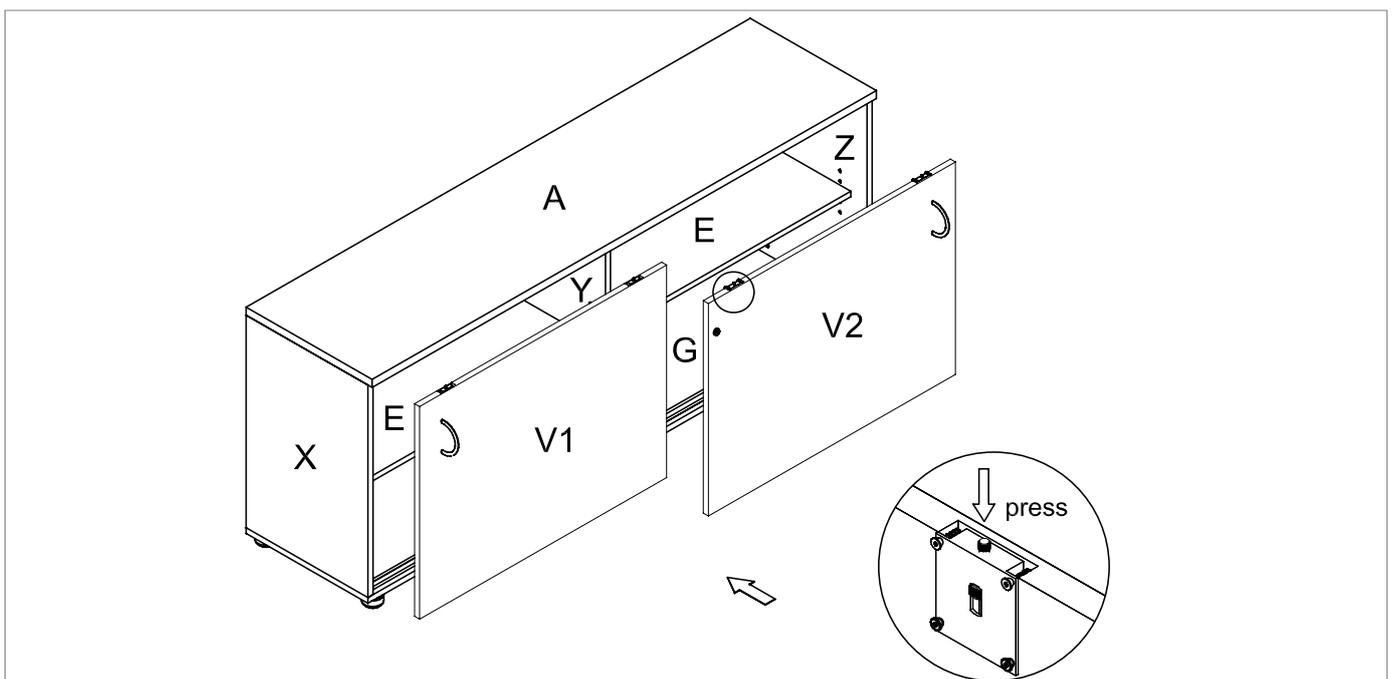

# Complete

---

