


# Emerge



## OC255 / OC265 & OC275 1800 Credenza

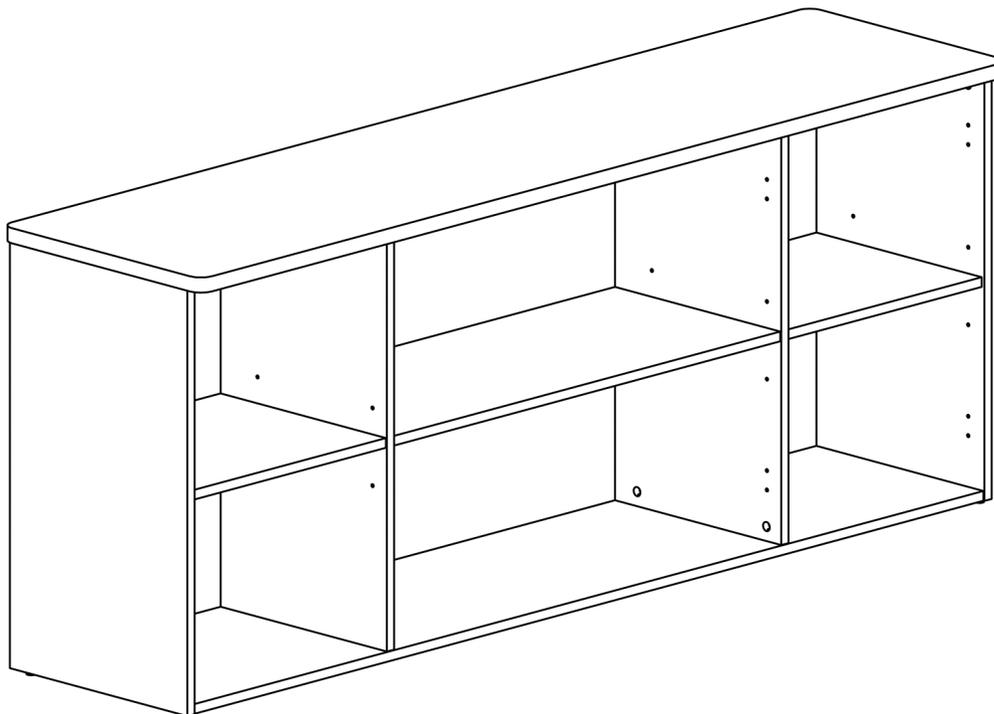

**Please follow these Assembly Instructions.**

This will save you time, make assembly easier and prevent possible damage to your new Credenza. Assistance may be required for some assembly procedures. Correct assembly is your responsibility.

We recommend that the unit is assembled on a soft surface such as carpet.

Please record your serial number in the space provided below and retain this manual for future reference.


Serial No



For warranty registration and information please go to  
[www.jasperj.co.nz](http://www.jasperj.co.nz)




# Unpack & Identify Parts

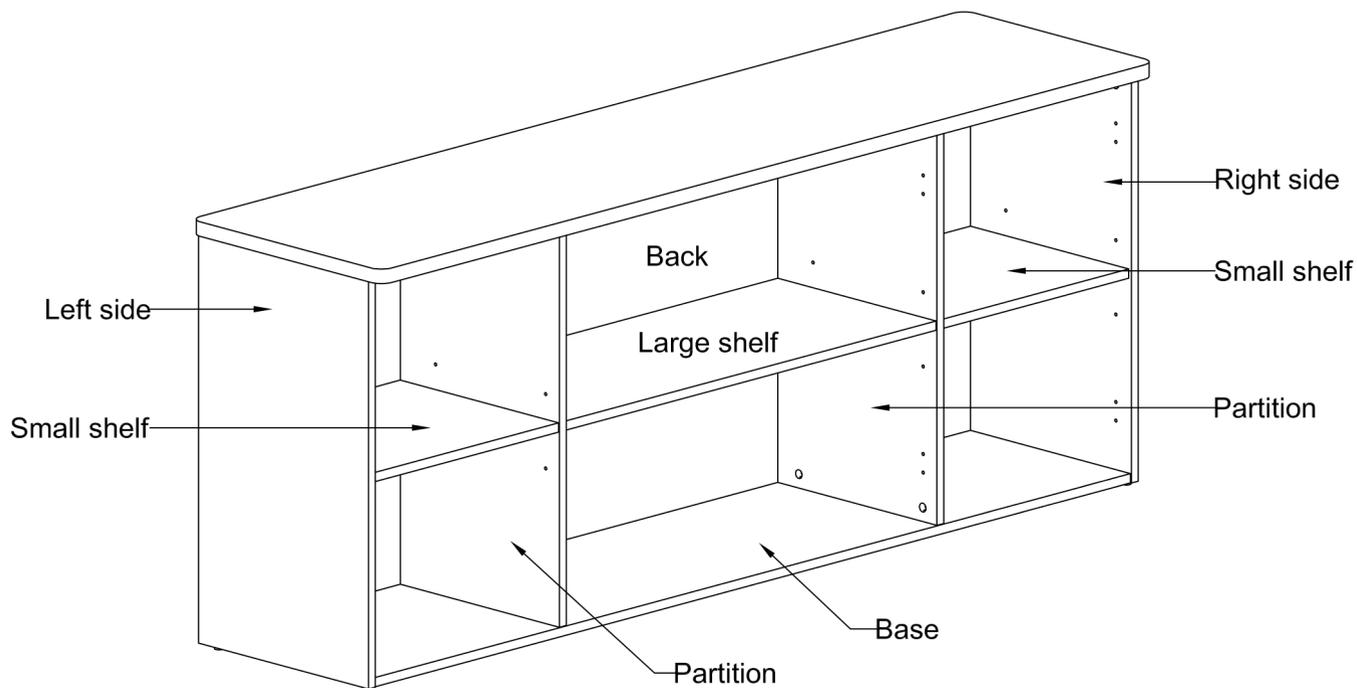

## AOC2551B7 carton contents

<u>Part description</u>	<u>Qty</u>	<u>Part number</u>
		<b><u>Beech</u></b>
Top	1	IOC2551B701
Base	1	IOC2551B702
Left side	1	IOC2551B703
Right side	1	IOC2551B704
Partitions	2	IOC2551B705
Backs	2	IOC2551B706
Large shelf	1	IOC2551B707
Small shelves	2	ICO2551B708
Joining strip	1	IOC2551B709
Hardware pack	1	IOC2551HPA0

## Tool required

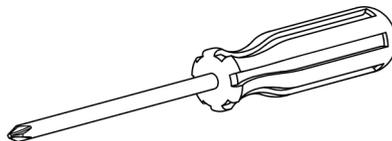

Philips No. 2 Screwdriver or a  
Philips No.2 Pozi drive

## Customer Service

0800 450 314

To request spare parts, please provide the details in step one - six.

1. Model number of unit purchased
2. Proof of purchase
3. Description of missing part
4. Part number of missing part
5. Quantity of missing part
6. Serial number of the unit



Post request to.



OR

Scan and take photos  
of any damaged parts



JasperJ helpdesk  
P.O. Box 47130,  
Ponsonby  
Auckland 1144

customerservice@jasperj.co.nz




Before requesting spare parts, please ensure that you have checked your packaging and used the correct hardware at each step.



JASPER J


# Hardware pack contents: IOC2551HPA0

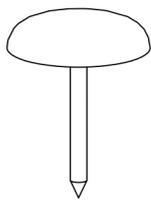

Pin glide  
IDG0019 x 8




Cam  
IDG0016 x 16



Connector rod  
IDG0017 x 16



Dowel  
IDG0018 x 16

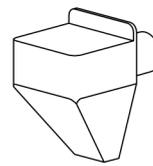

Shelf Supports  
P840048 x 12

## Step 1 Prepare Top & Side panels




### Cam fitting detail

HINT When inserting Cam, ensure arrowhead on Cam points to edge of hole




ARROWHEAD






x 12




x 4




x 4

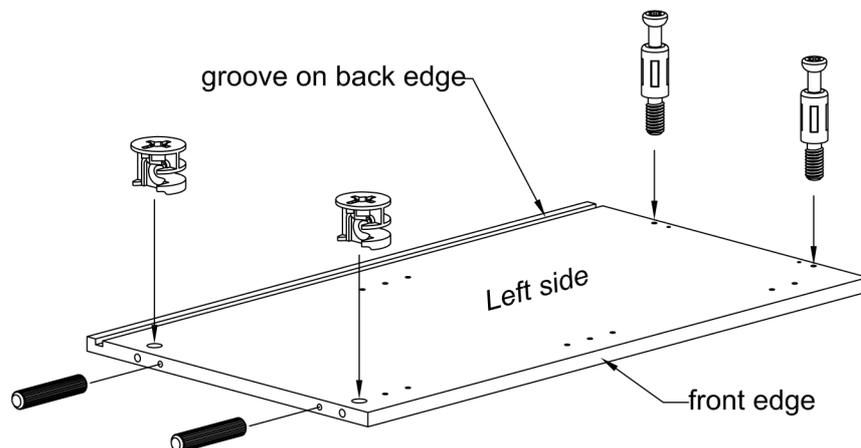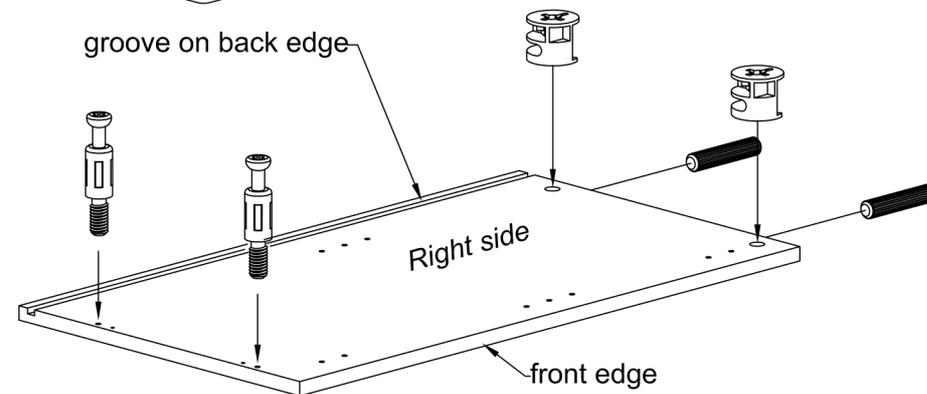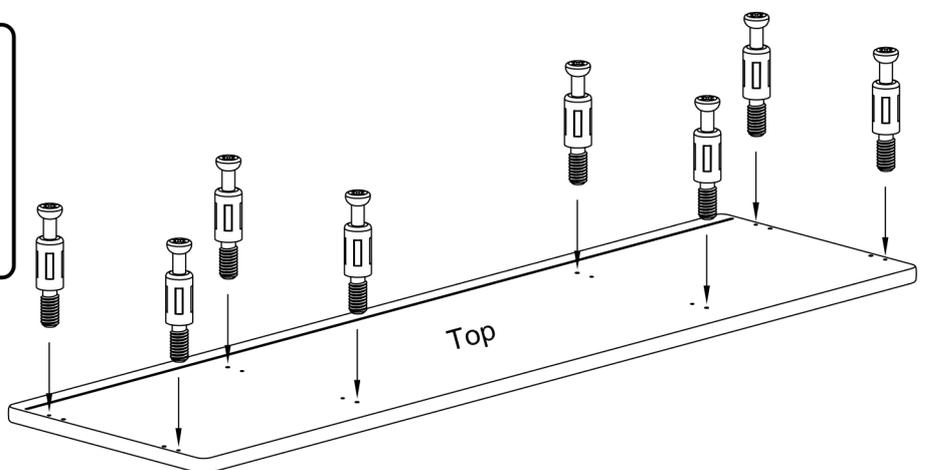


## Step 2 Prepare Partitions & both sides of the Base panel

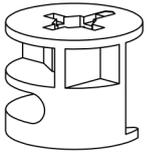


x 8




x 6

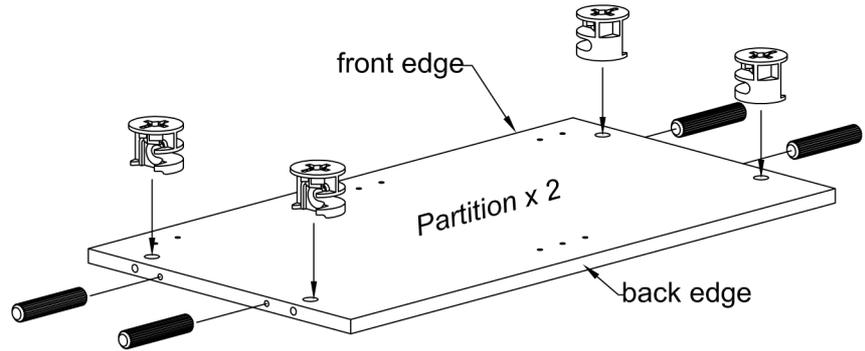

x 4


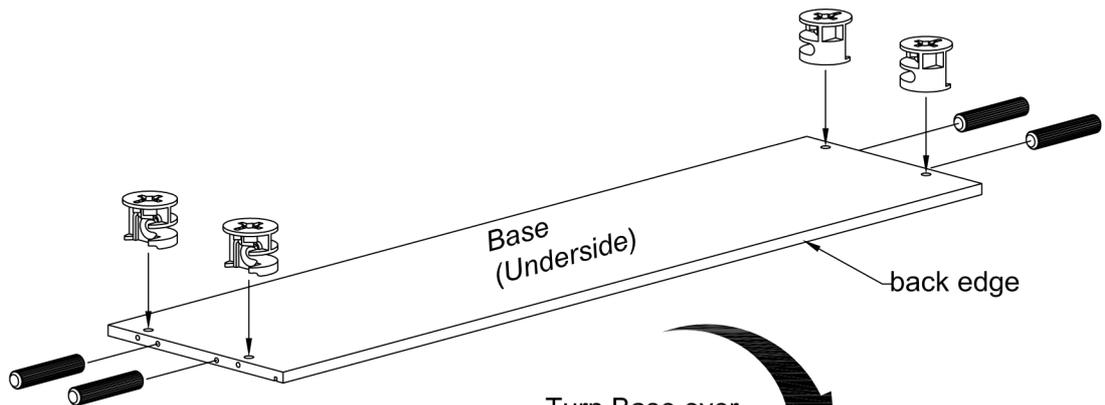


Turn Base over

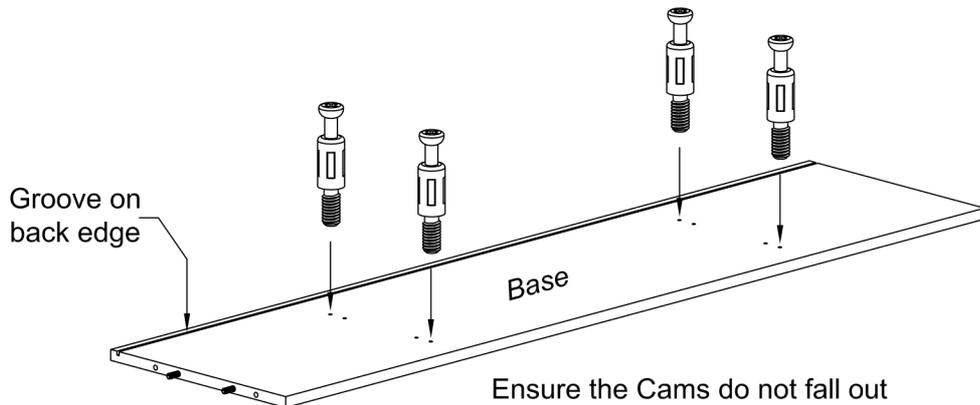



Ensure the Cams do not fall out when you flip the Base.

### Step 3 Fit Sides to Base panel & fit Pin glides

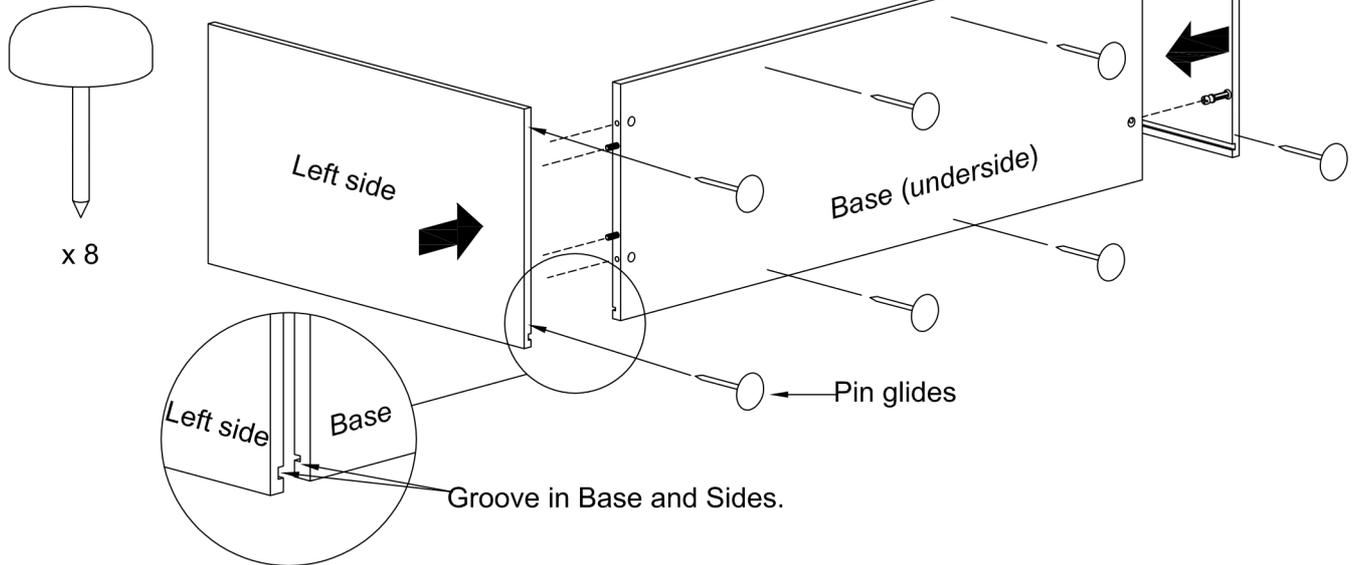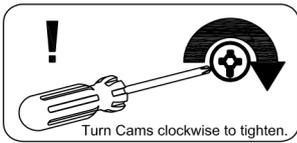


### Step 4 Fit & secure Sides to Base panel

**CAUTION:** Unit does not have structural strength until the Backs and Top are fitted.

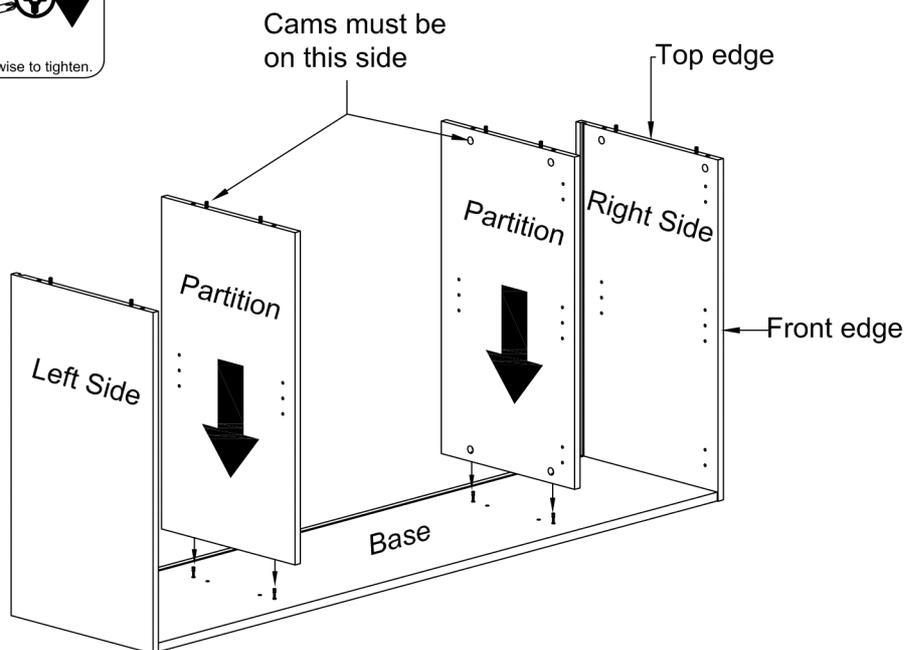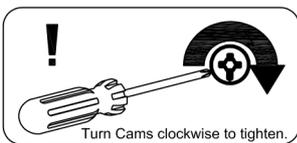


Carefully lift assembly into upright position, taking care to avoid placing any unnecessary strain on either Side panel.


## Step 5 Fit Backs to Unit

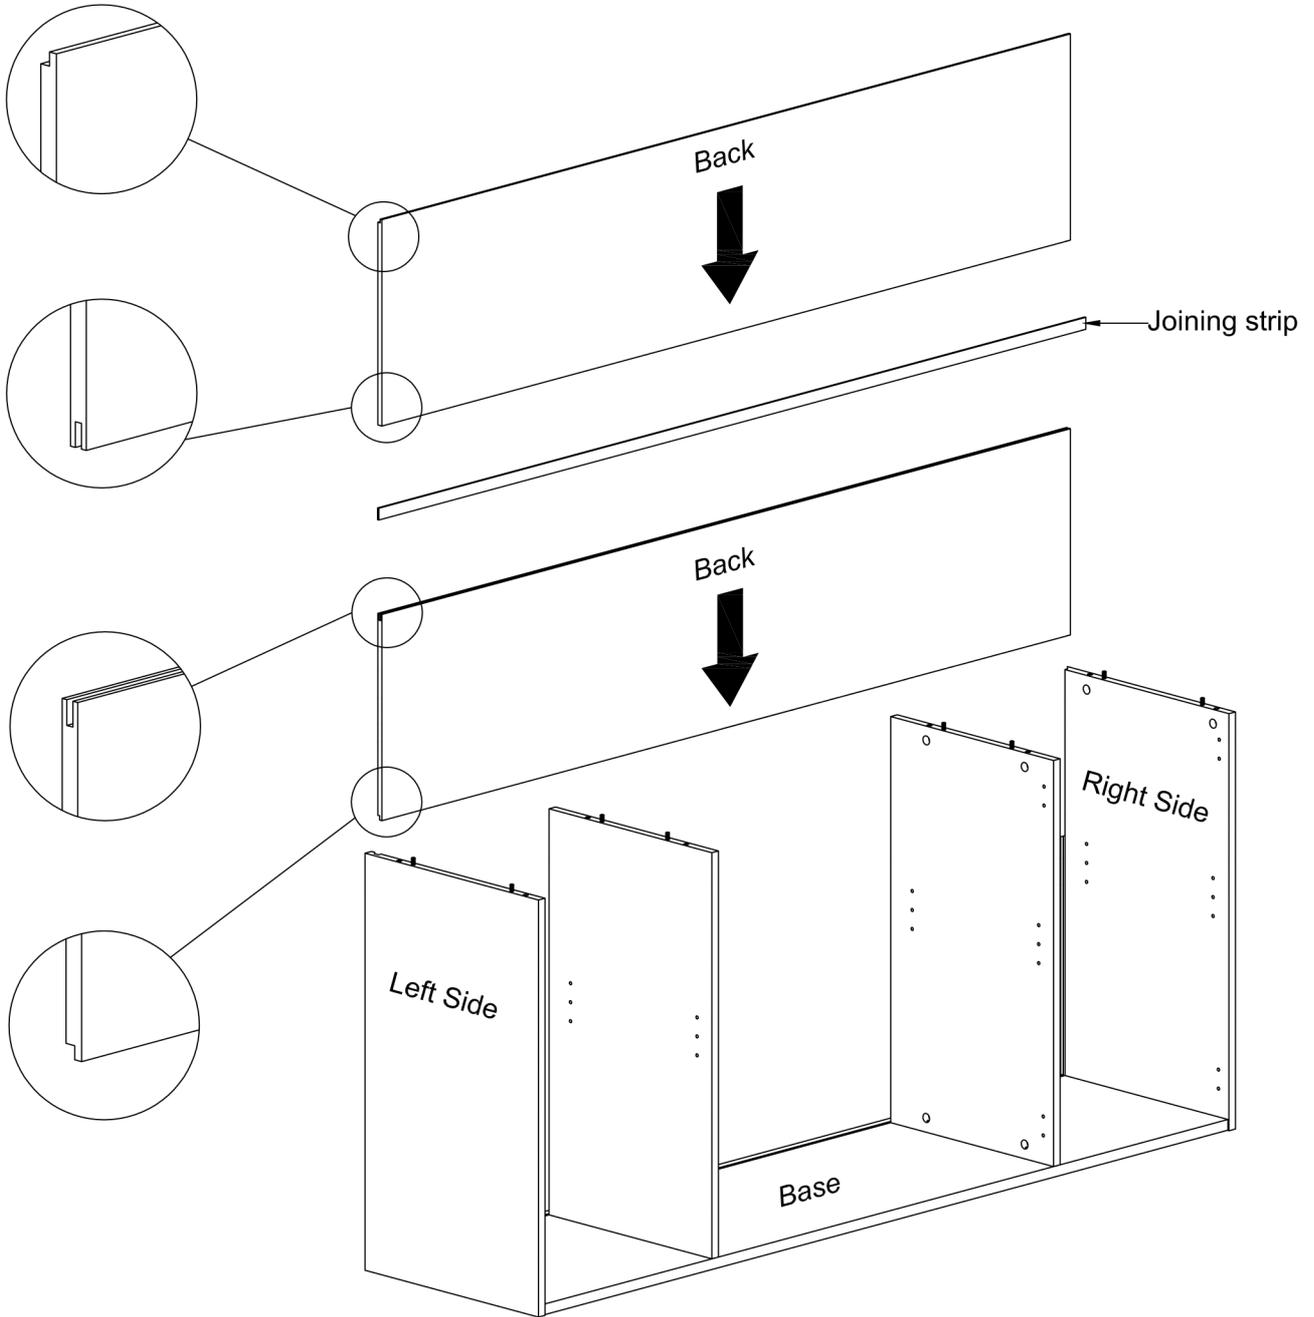



## Step 6 Secure Top & fit Shelf supports to Unit

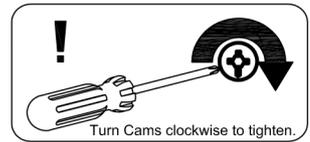

x 12

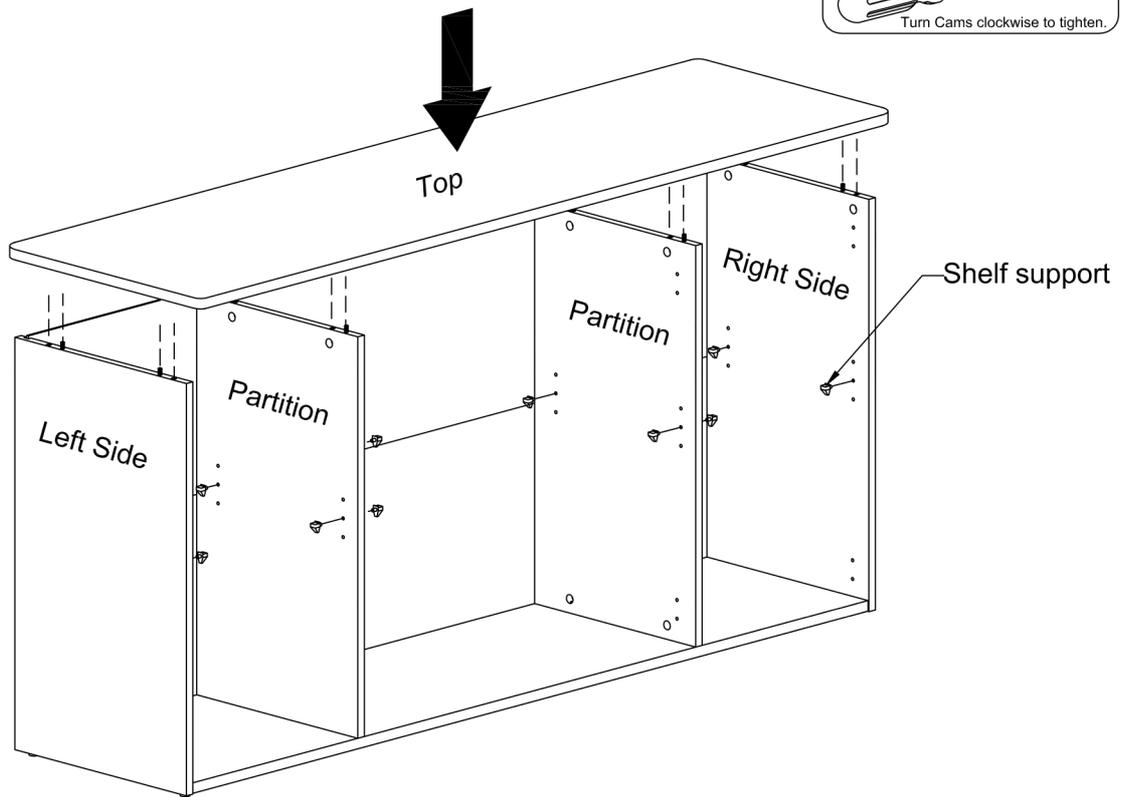

## Step 7 Fit Shelves to Unit

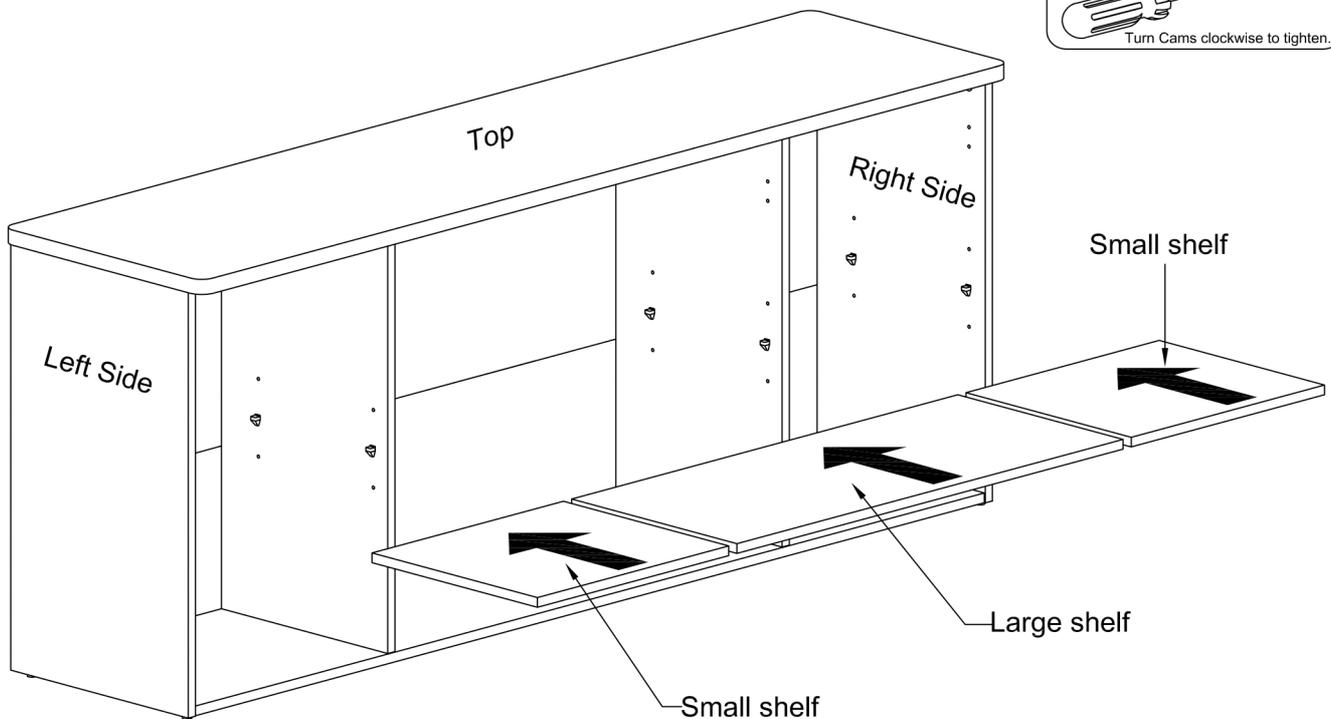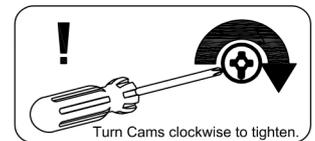


**CAUTION:** We recommend that all contents stored in or on this item of furniture be removed before shifting it. The Manufacturer will not be held liable for damage caused when furniture is shifted without first removing the contents. Do not drag the furniture while shifting.

Options shown below for Wooden doors or Glass doors fitted to the Credenza. Refer to list below.

AOC2550B7 with Wooden doors


AOC2551B7 - 1800 Credenza (Pack 1)  
AWD2550B7 - Wooden door packs x 2

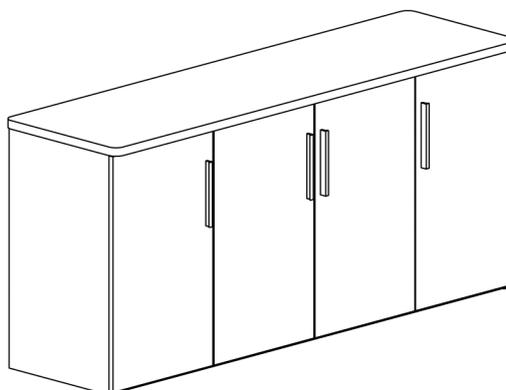

---

AOC2650B7 with Glass doors

AOC2551B7 -1800 Credenza (Pack 1)  
AGD2550XS - Glass door packs x 2

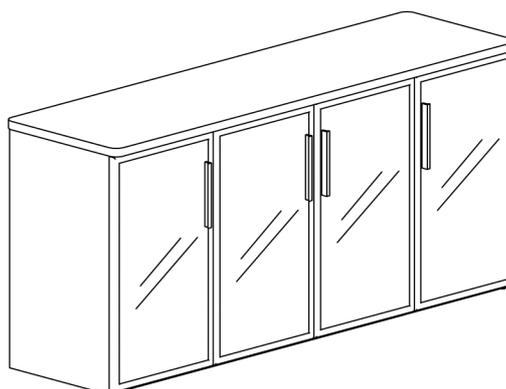

---

AOC2750B7 with Mixed doors

AOC2551B7 -1800 Credenza (Pack 1)  
AWD2550B7 - Wooden door pack x 1  
AGD2550XS - Glass door pack x 1

