


Emerge



OC215 & OC225 1200 Credenza

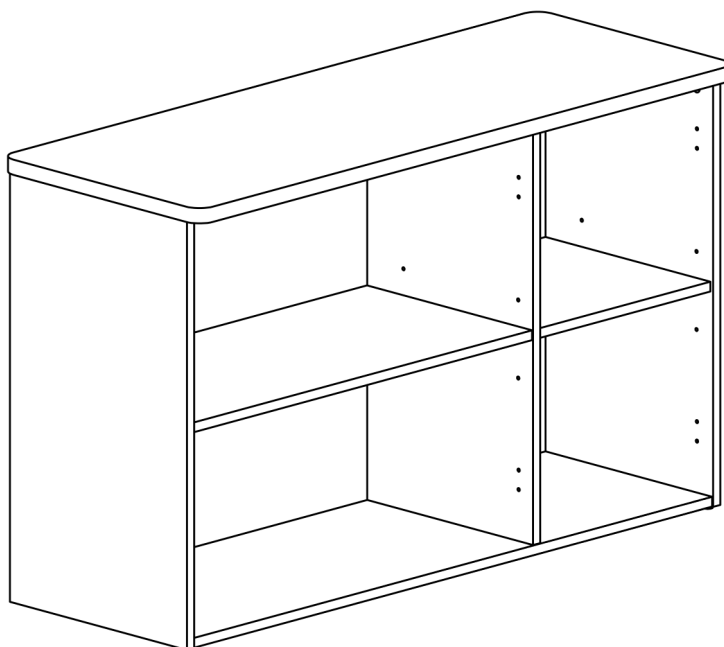

Please follow these Assembly Instructions.

This will save you time, make assembly easier and prevent possible damage to your new Credenza. Assistance may be required for some assembly procedures. Correct assembly is your responsibility.

Please record your serial number in the space provided below and retain this manual for future reference.

Serial No


We recommend that the unit is assembled on a soft surface such as carpet.



For warranty registration and information please go to
www.jasperj.co.nz




Unpack & Identify Parts

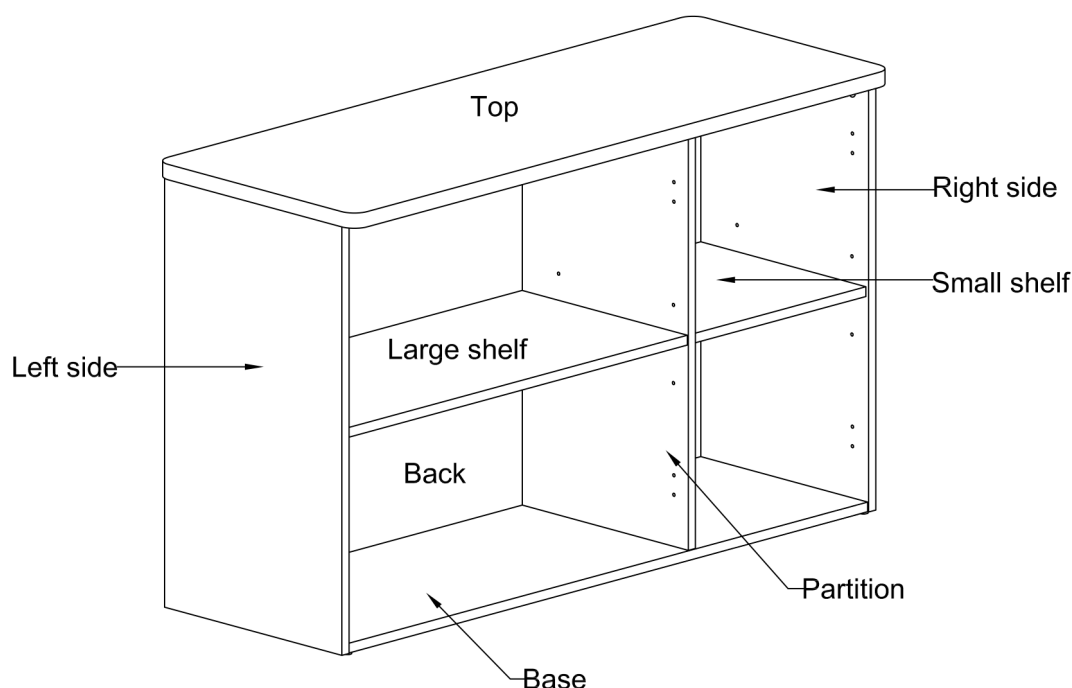

AOC2151B7 carton contents

<u>Part description</u>	<u>Qty</u>	<u>Part number</u>
		<u>Beech</u>
Top	1	IOC2151B701
Base	1	IOC2151B702
Left side	1	IOC2151B703
Right side	1	IOC2151B704
Partition	1	IOC2151B705
Backs	2	IOC2151B706
Large shelf	1	IOC2151B707
Small shelf	1	ICO2151B708
Joining strip	1	IOC2151B709
Hardware pack	1	IOC2151HPA0

Tool required

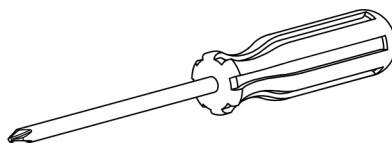

Philips No 2 screwdriver or a
Philips No.2 Pozi drive

Customer Service

0800 450 314

To request spare parts, please provide the details in step one - six.



1. Model number of unit purchased
2. Proof of purchase
3. Description of missing part
4. Part number of missing part
5. Quantity of missing part
6. Serial number of the unit



Post request to.

OR

Scan and take photos
of any damaged parts



JasperJ helpdesk
P.O. Box 47130,
Ponsonby
Auckland 1144

customerservice@jasperj.co.nz




Before requesting spare parts, please ensure that you have checked your packaging and used the correct hardware at each step.



JASPER J


Hardware pack contents: IOC2151HPA0

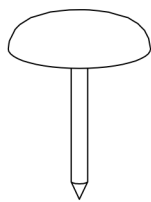


Pin glide
IDG0019 x 6




Cam
IDG0016 x 12



Connector rod
IDG0017 x 12




Dowel
IDG0018 x 10

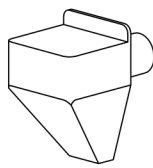


Shelf Supports
P840048 x 8

Step 1 Prepare Top & Side panels





Cam fitting detail


HINT When inserting Cam, ensure arrowhead on Cam points to edge of hole




ARROWHEAD

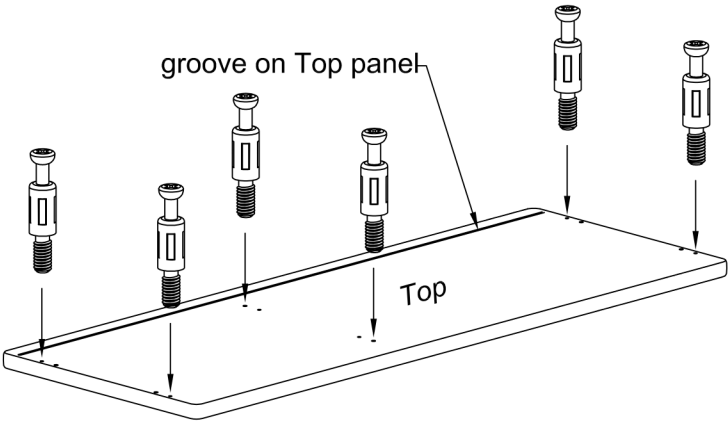



x 10

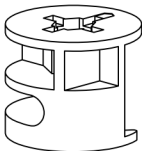


x 4




x 4

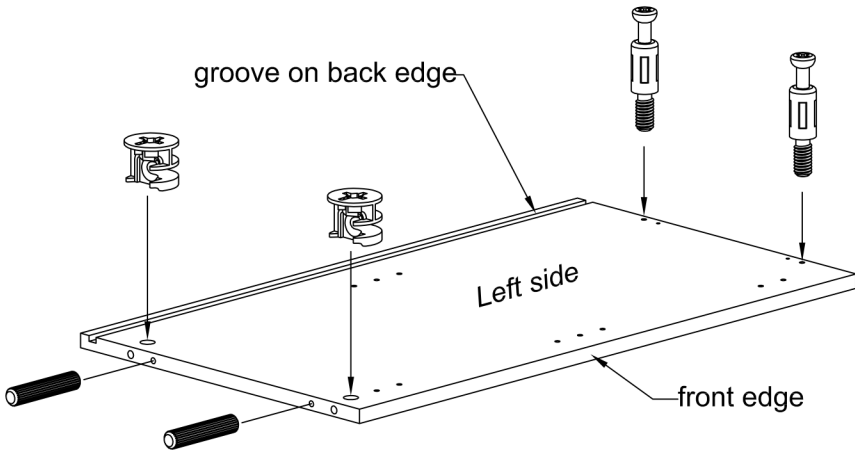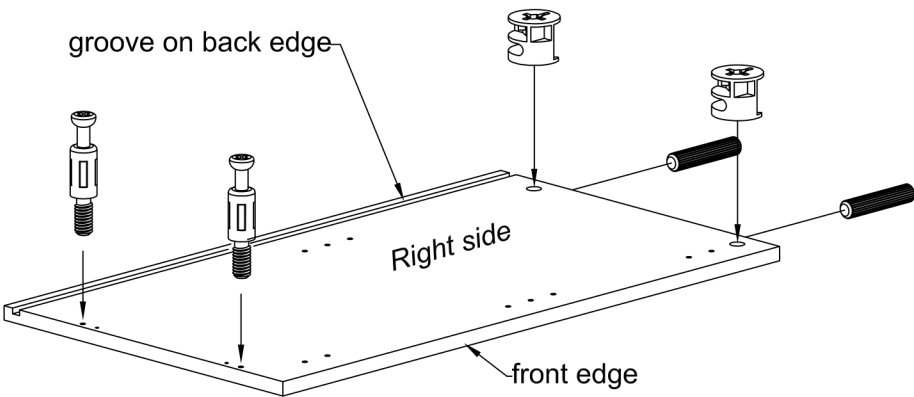



Step 2 Prepare Partition & both sides of the Base panel

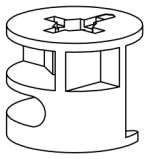


x 4




x 6

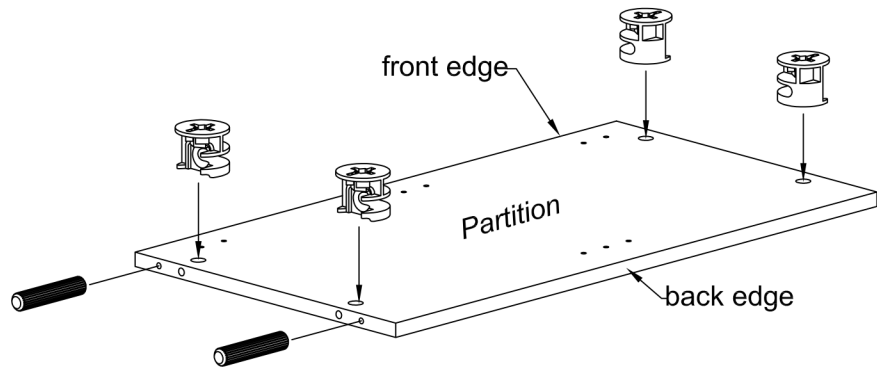



x 2

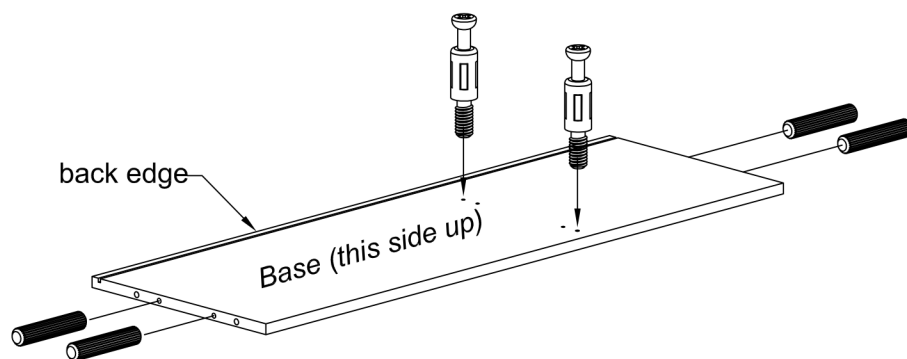

Turn Base over


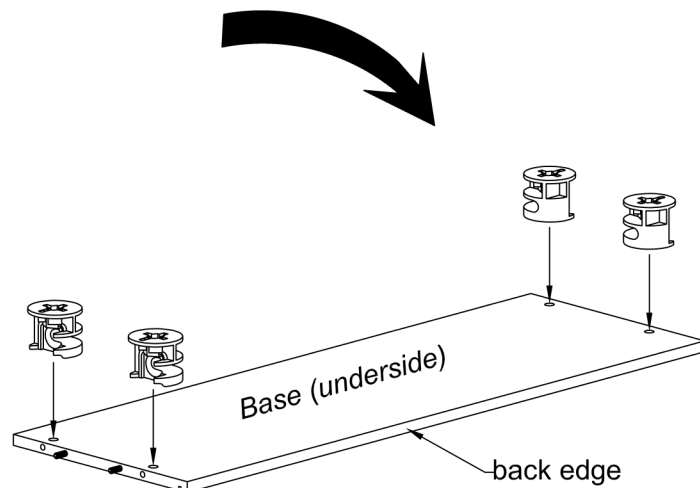


Step 3 Fit Sides to Base panel

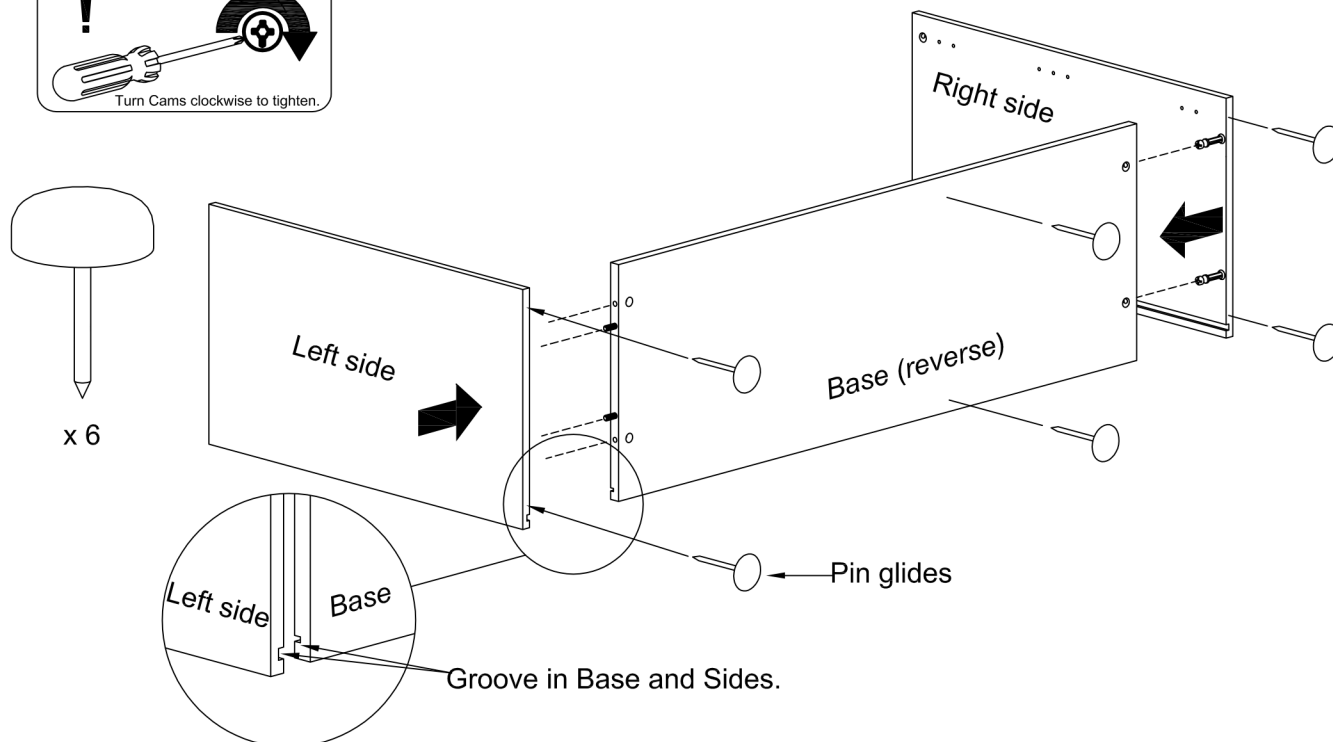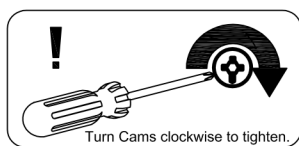


Step 4 Fit & secure Sides to Base panel

CAUTION: Unit does not have structural strength until the Backs and Top are fitted.

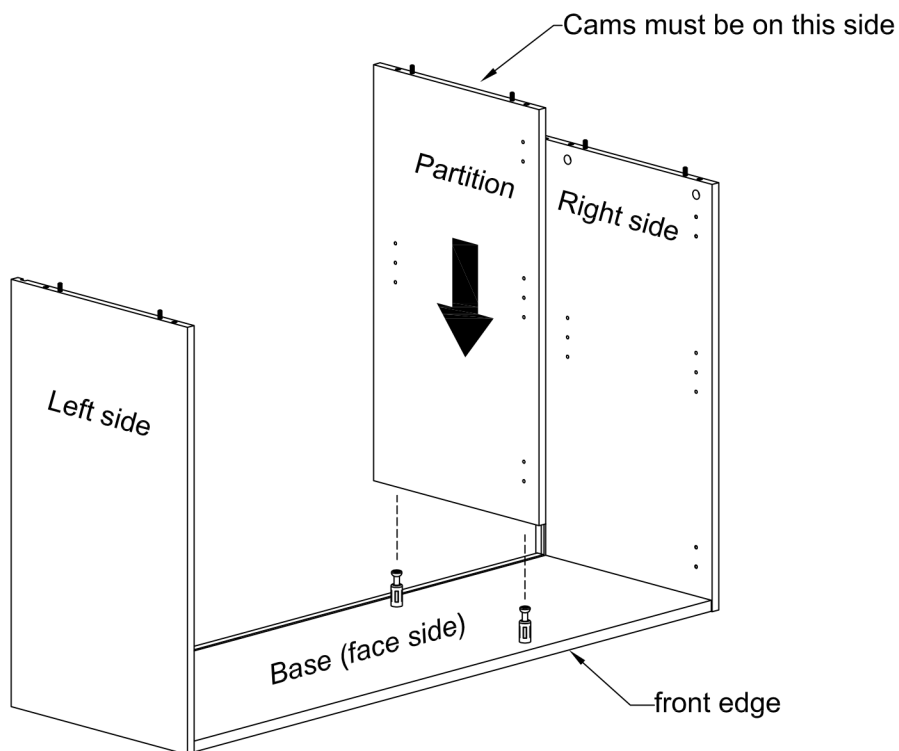
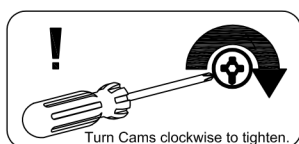


Carefully lift assembly into upright position, taking care to avoid placing any unnecessary strain on either Side panel.

Step 5 Fit Backs to Unit

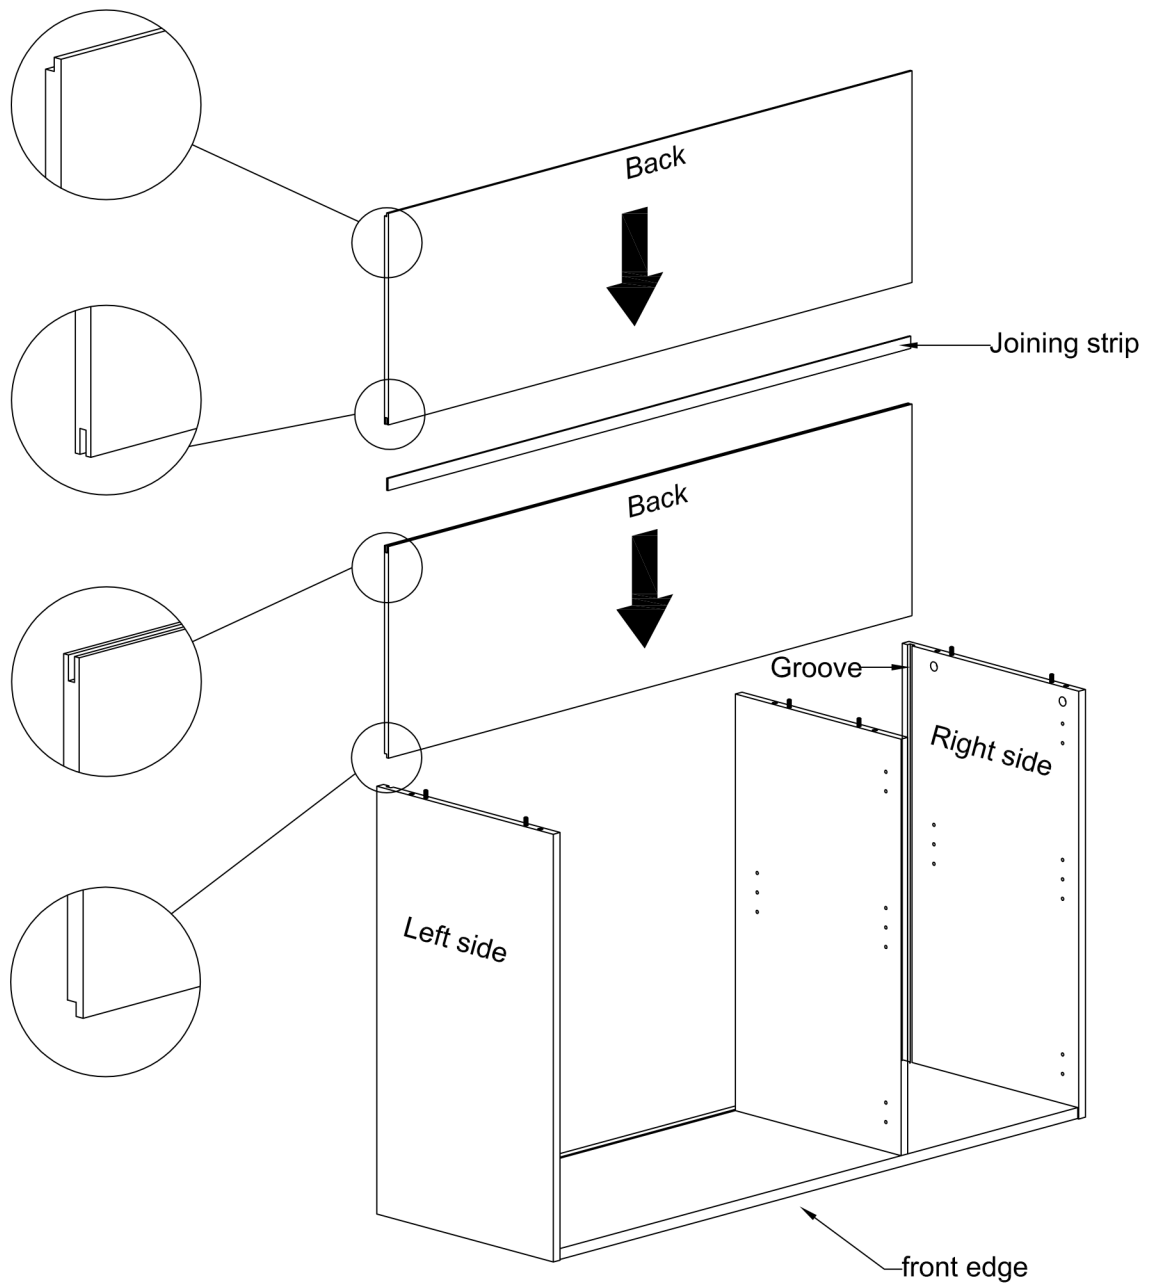



Step 6 Secure Top to Unit

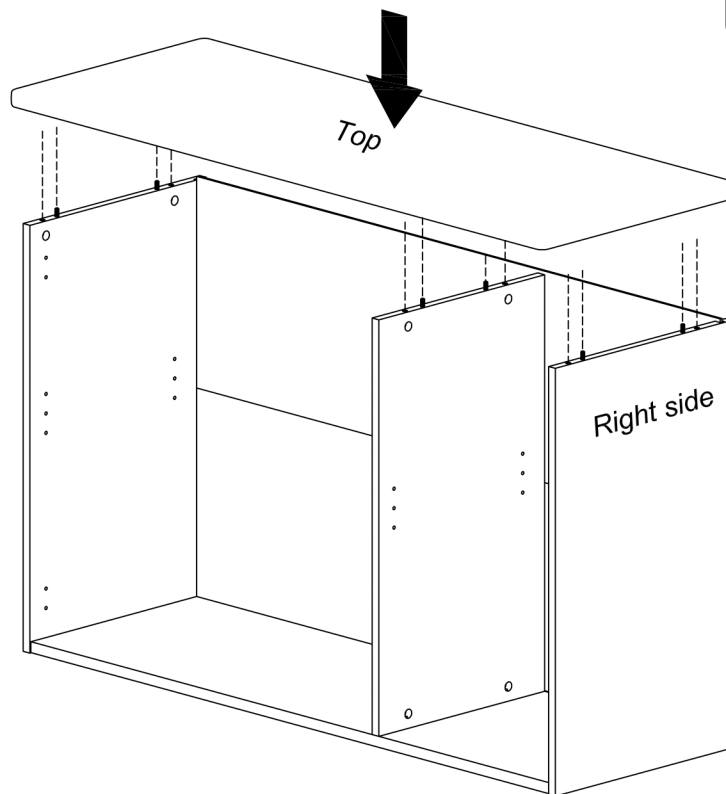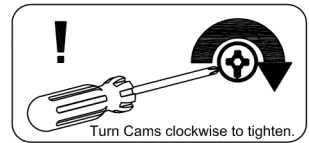

Step 7



x 8

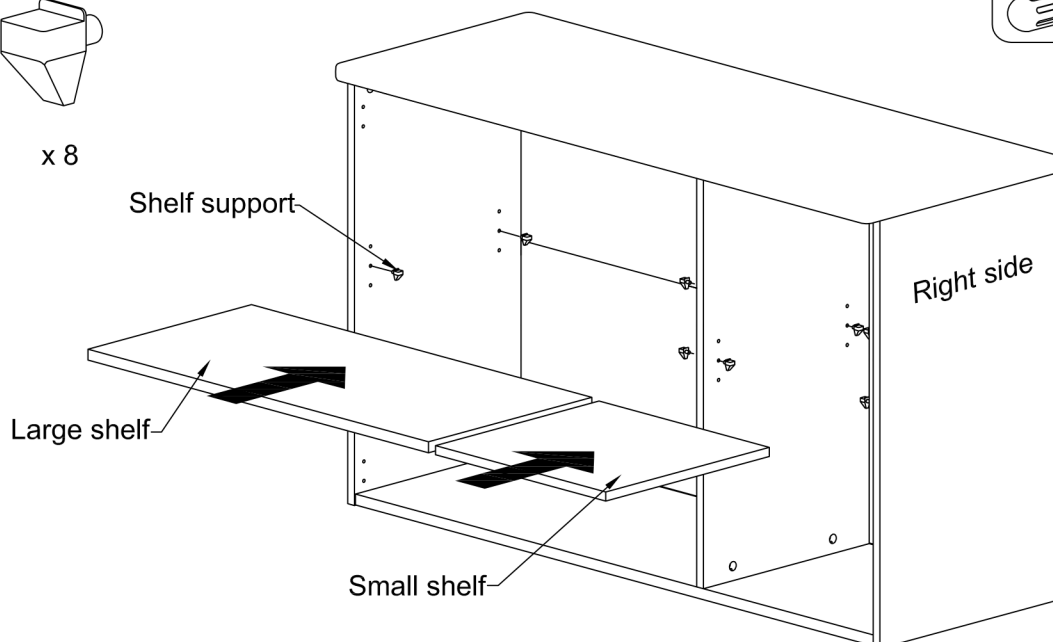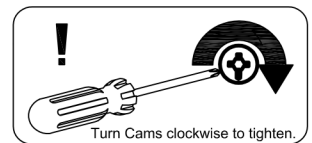

Congratulations. You have now completed the assembly of your new Credenza.


CAUTION: We recommend that all contents stored in or on this item of furniture be removed before shifting it. The Manufacturer will not be held liable for damage caused when furniture is shifted without first removing the contents. Do not drag the furniture while shifting.

Options shown below for Wooden doors or Glass doors fitted to the Credenza. Refer to Pack 2 product codes.

AOC2150B7 with Wooden doors

AOC2151B7 - 1200 Credenza (Pack 1)

AWD2150B7 - 3 x Wooden doors (Pack 2)

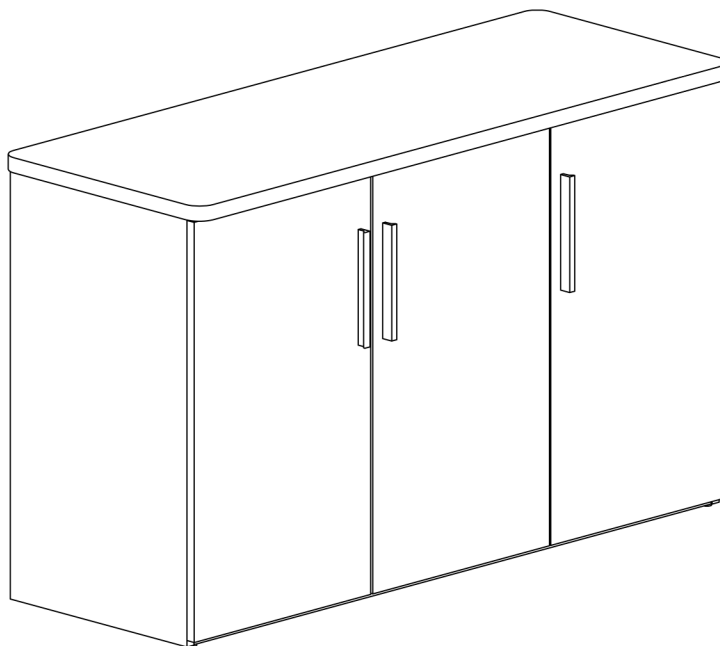

AOC2250B7 with Glass doors

AOC2151B7 -1200 Credenza (Pack 1)

AGD2150XS - 3 x Glass doors (Pack 2)

