

Assembly Instruction for Workspace Moda Desk

1.0hr

APPROXIMATE ASSEMBLY TIME

2 PERSON ASSEMBLY




FLOOR AREA
1.5M x 1.5M



REQUIRED ASSEMBLY SPACE


REQUIRED ASSEMBLY TOOLS


Important: Please don't fasten bolts and screws until all parts in position




PHILLIPS SCREWDRIVER

ASSEMBLED DIMENSIONS

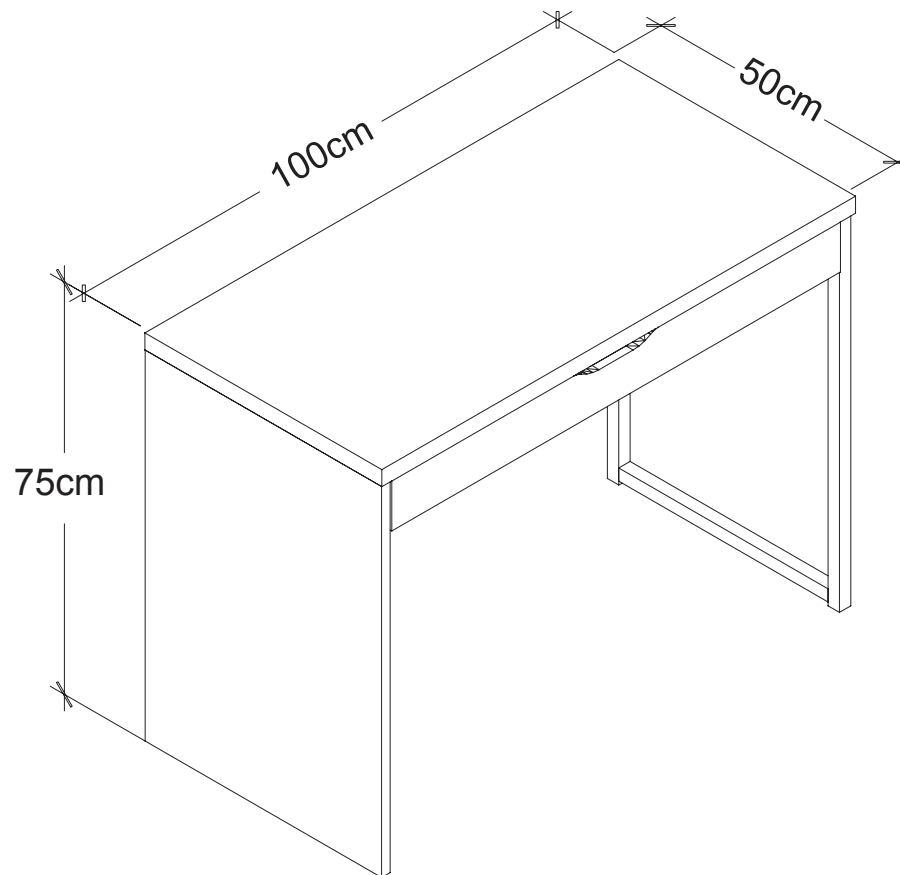





Ax6PCS




Bx12PCS




Cx2PCS



Dx2PCS

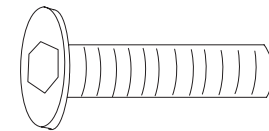


Ex2PCS

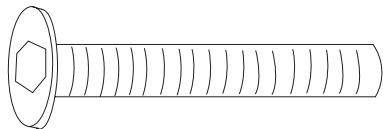


Fx2PCS




Gx12PCS



Hx12PCS

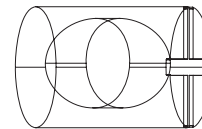


Ix2PCS

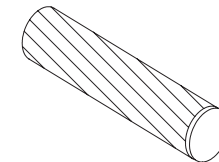


Jx8PCS



Kx1PC














Lx1SET




Nx4PCS





Mx2PCS

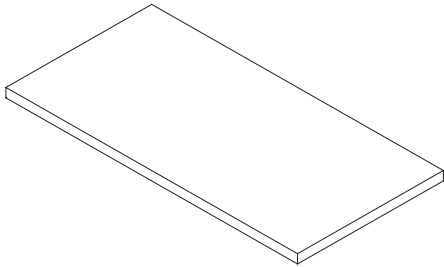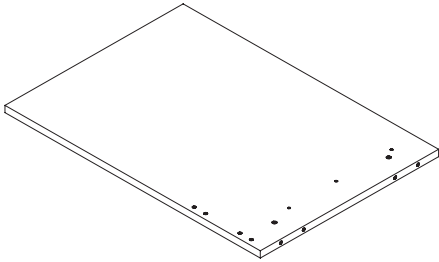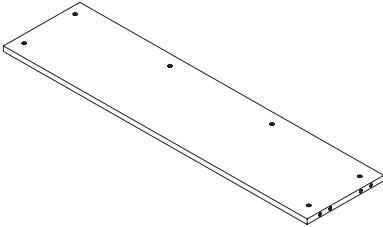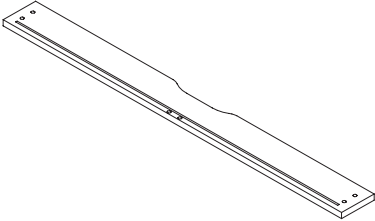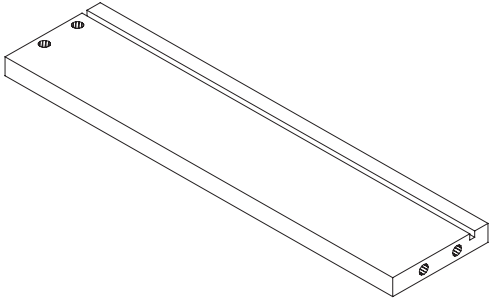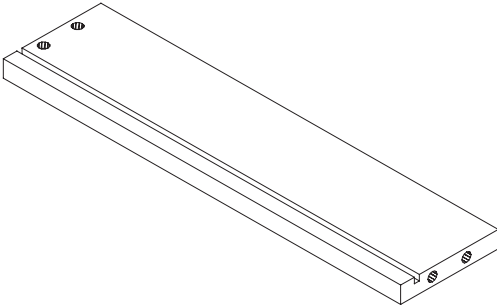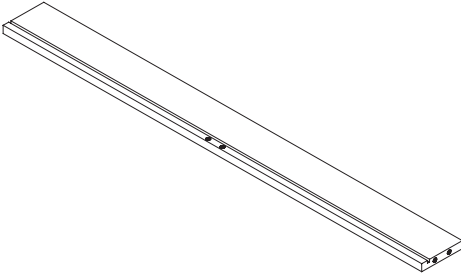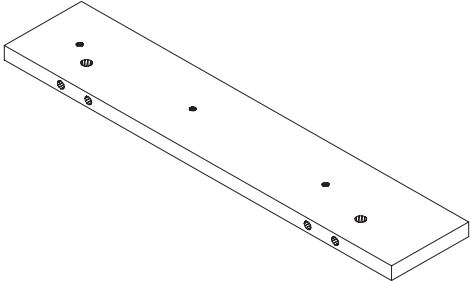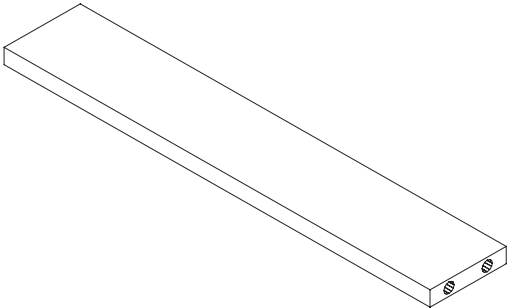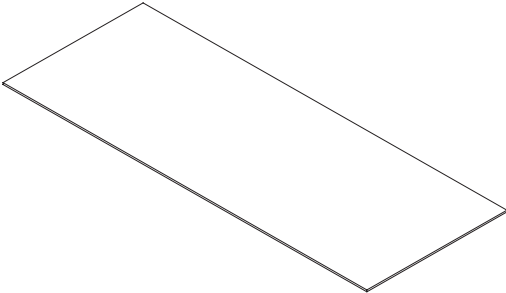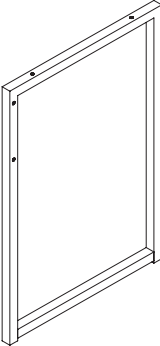
							
1	1PC	2	1PC	3	1PC	4	1PC
							
5	1PC	6	1PC	7	1PC	8	1PC
							
9	1PC	10	1PC	11	1PC		

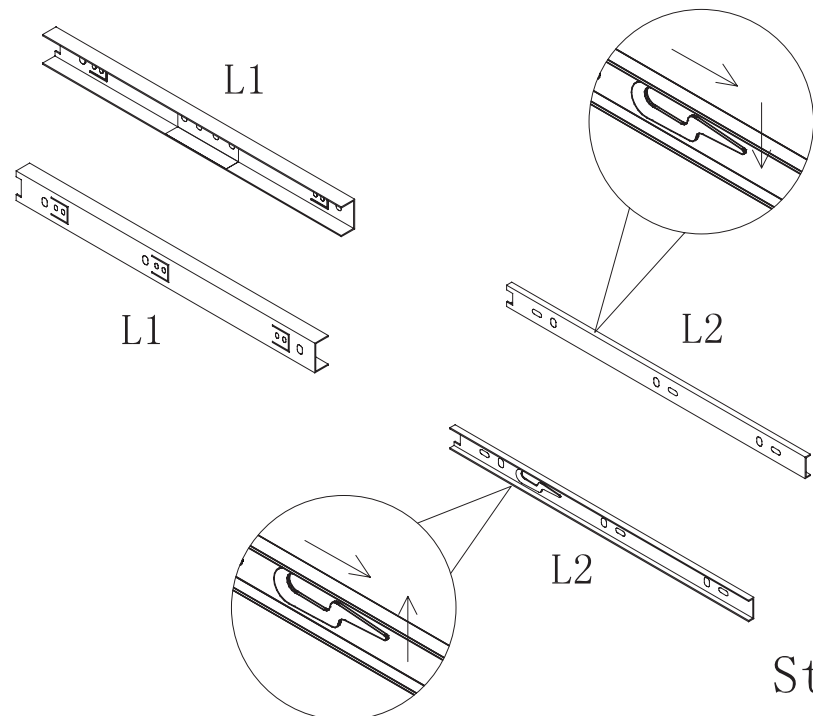


Step 1

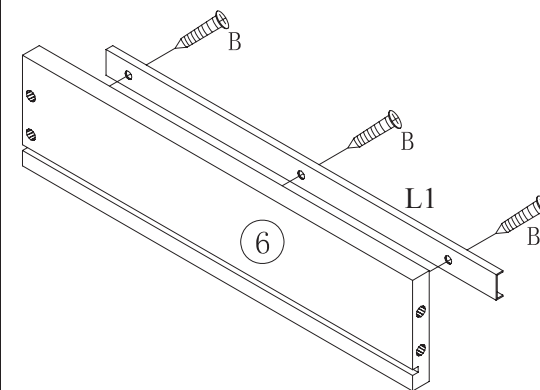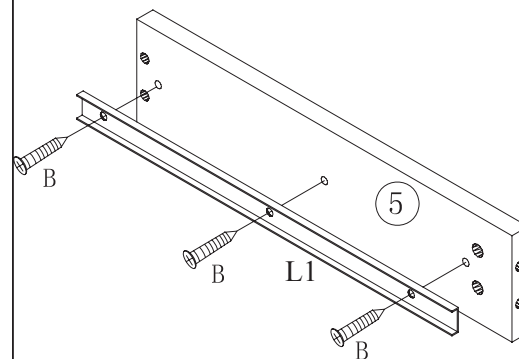


Step 2

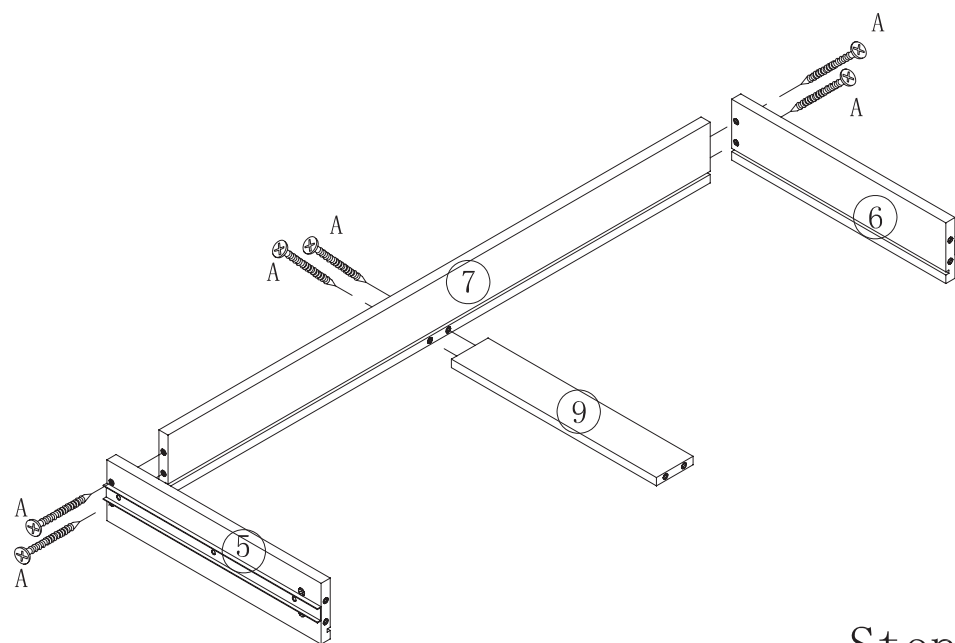


Step 3

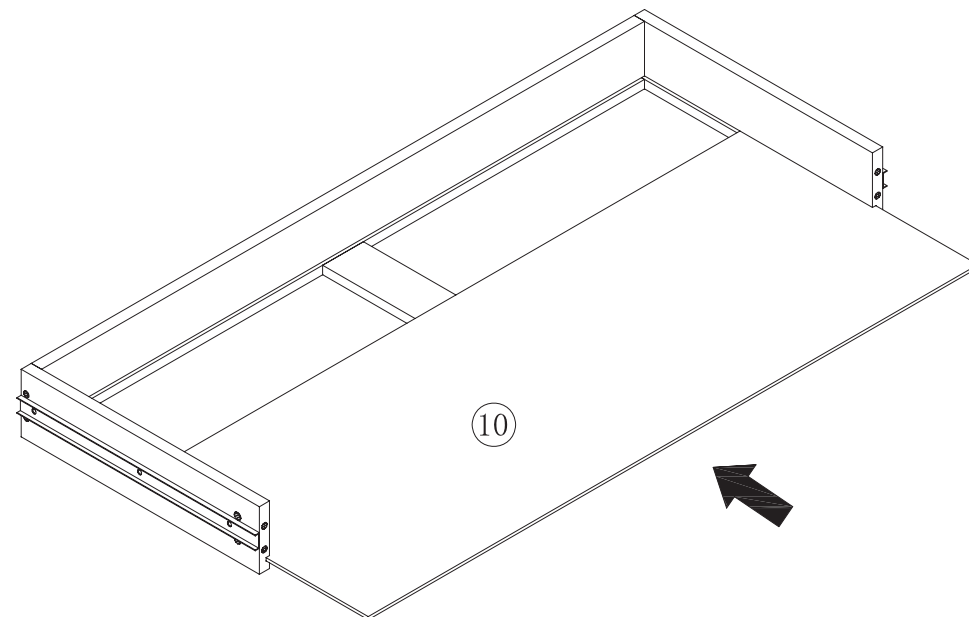


Step 4

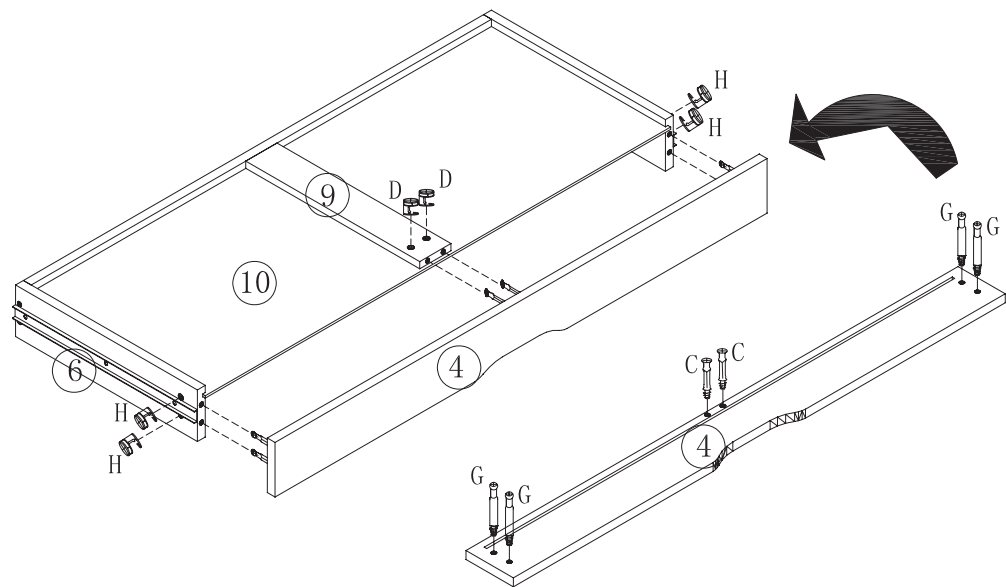


Step 5

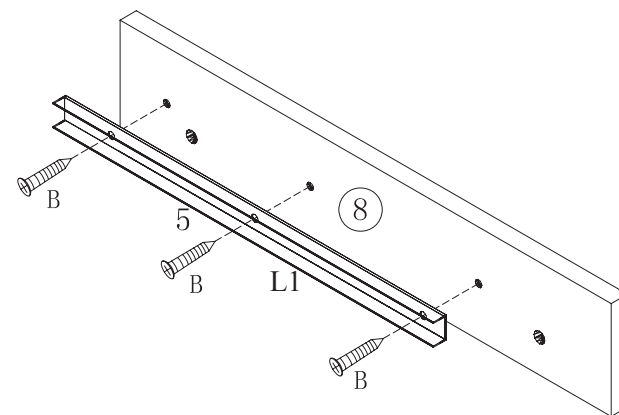


Step 6

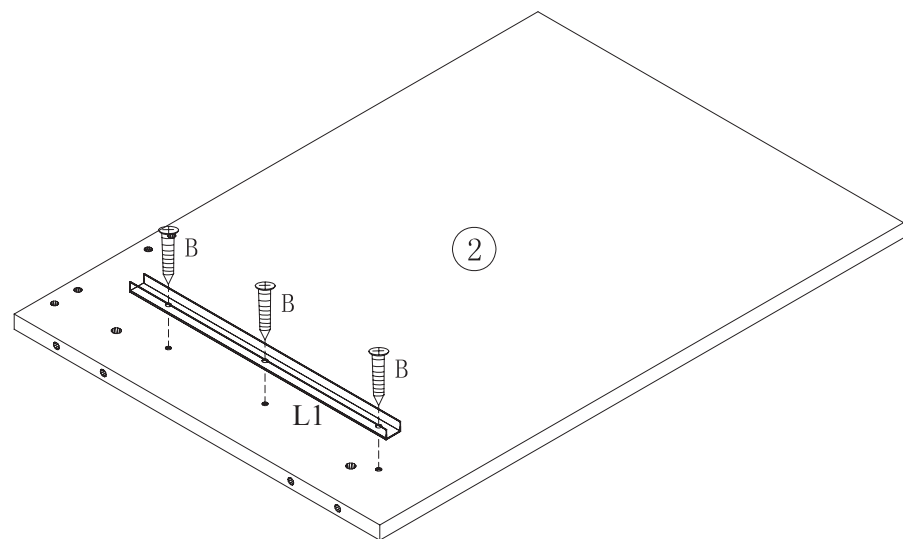


Step 7

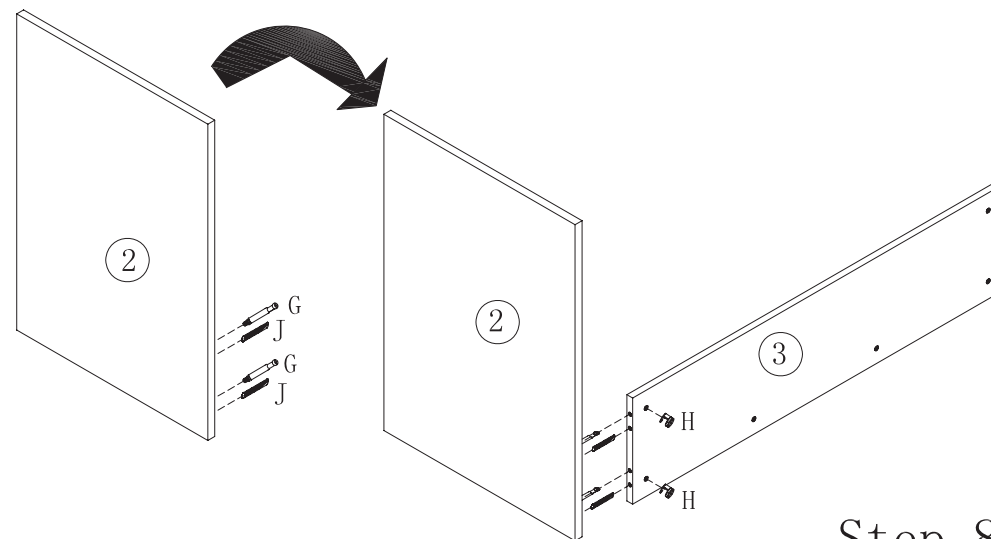


Step 8

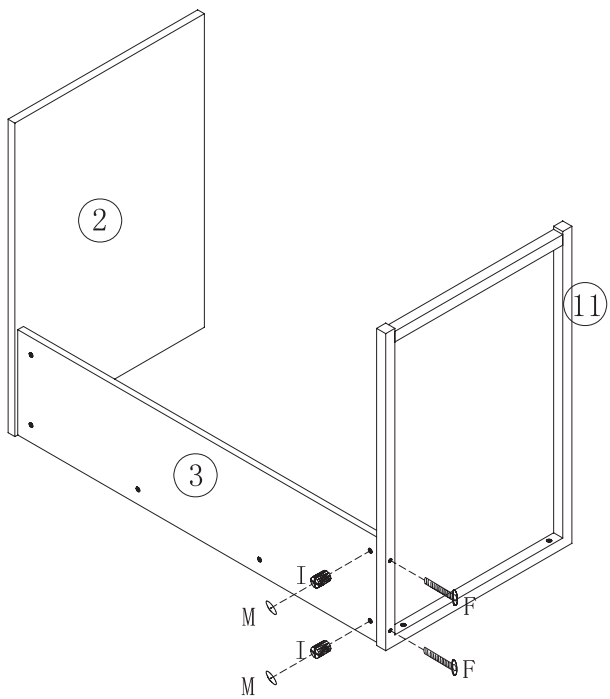


Step 9

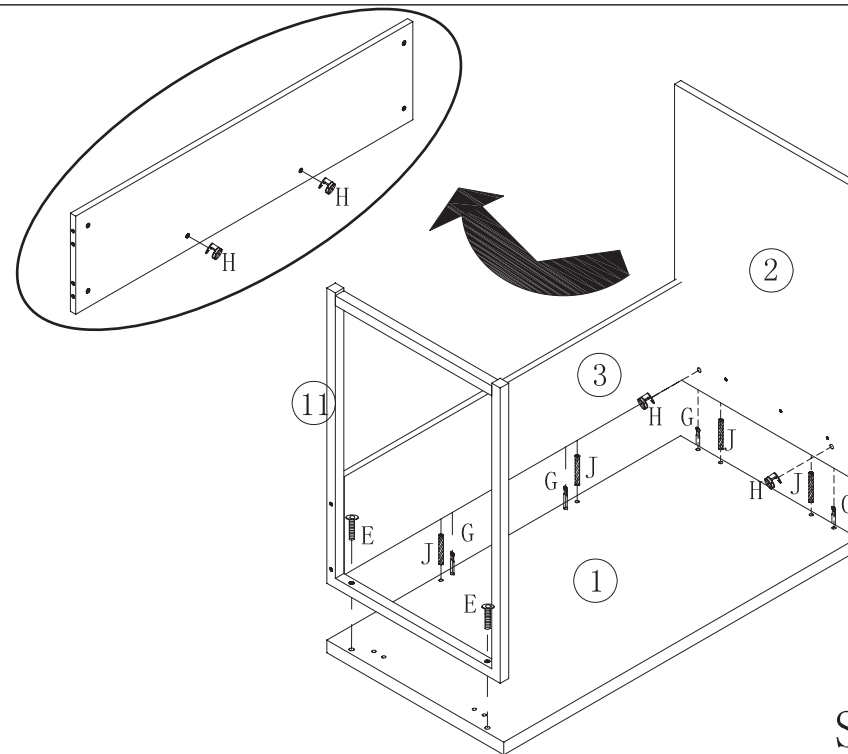

Step 10

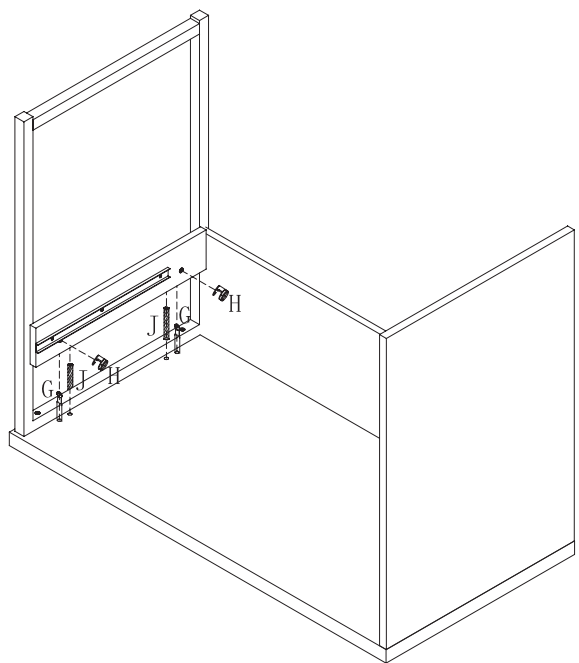

Step 11

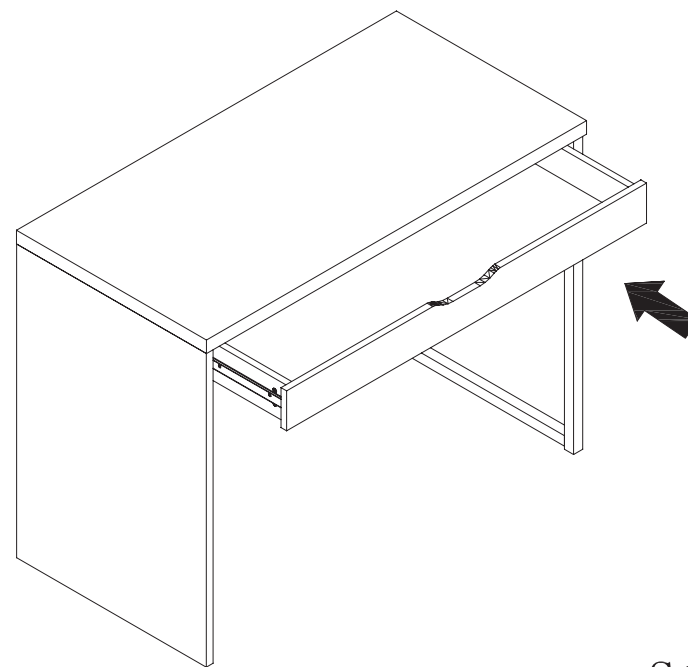

Step 12