

Team Flip Table

Installation Guide


Tools Required: Powered screwdriver.



Assembly Instructions


Step 1

Fit the pull bar to the top side of the mechanism according to the number corresponding to your worksurface depth. This number will locate over of the raised cylinder

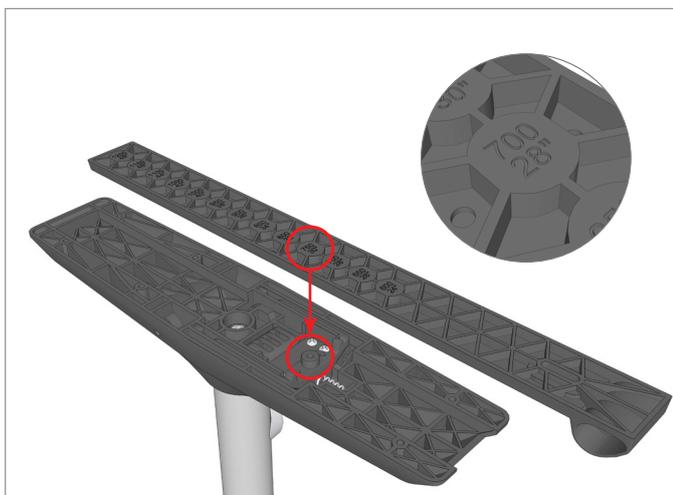


Step 2

Place the pull bar **(a)** and cross tube **(b)** in the correct location pictured below, slide the 2 end legs in place, and tighten 2 small screws into the cross tube.

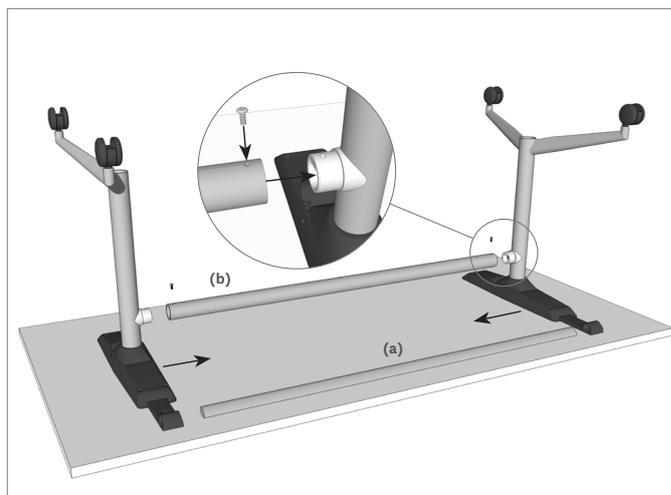

Step 3

Ensure the frame is located in the centre of the worksurface. Fully tighten all 6 screws on each mechanism.

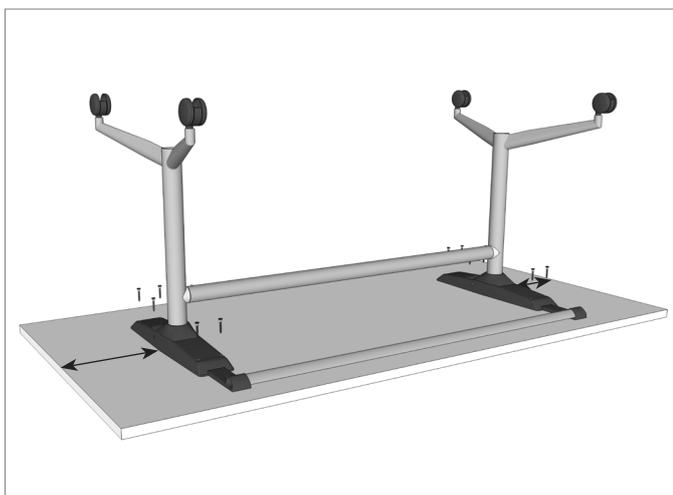

Step 4

On all tables with width larger than 700mm, secure the pull bar with the supplied washer and screw in the location pictured below (slot end closest to the pull-bar). Leave screw 1 turn from tight so the pull-bar can be operated smoothly.

